

Panasonic®


Model No.

TX-L42WT50E

TX-L47WT50E

TX-L55WT50E

Operating Instructions LCD Television

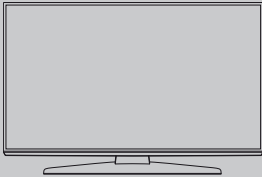

VIERA

Thank you for purchasing this Panasonic product.

Please read these instructions carefully before operating this product and retain them for future reference.

The images shown in this manual are for illustrative purposes only.

Please refer to Pan European Guarantee Card if you need to contact your local Panasonic dealer for assistance.

English



TQB0E2283U



Notice for DVB / Data broadcasting / IPTV functions

- This TV is designed to meet the standards (as of August, 2011) of DVB-T (MPEG2 and MPEG4-AVC(H.264)) digital terrestrial services, DVB-C (MPEG2 and MPEG4-AVC(H.264)) digital cable services and DVB-S (MPEG2 and MPEG4-AVC(H.264)) digital satellite services.

Consult your local dealer for availability of DVB-T or DVB-S services in your area.

Consult your cable service provider for availability of DVB-C services with this TV.

- This TV may not work correctly with the signal which does not meet the standards of DVB-T, DVB-C or DVB-S.
- Not all the features are available depending on the country, area, broadcaster, service provider, satellite and network environment.
- Not all CI modules work properly with this TV. Consult your service provider about the available CI module.
- This TV may not work correctly with CI module that is not approved by the service provider.
- Additional fees may be charged depending on the service provider.
- The compatibility with future services is not guaranteed.
- Check the latest information on the available services at the following website. (English only)
<http://panasonic.jp/support/global/cs/tv/>

Transport only in upright position

Panasonic does not guarantee operation and performance of peripheral devices made by other manufacturers; and we disclaim any liability or damage arising from operation and/or performance from usage of such other maker's peripheral devices.

The recording and playback of content on this or any other device may require permission from the owner of the copyright or other such rights in that content. Panasonic has no authority to and does not grant you that permission and explicitly disclaims any right, ability or intention to obtain such permission on your behalf. It is your responsibility to ensure that your use of this or any other device complies with applicable copyright legislation in your country. Please refer to that legislation for more information on the relevant laws and regulations involved or contact the owner of the rights in the content you wish to record or playback.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

Rovi Corporation and/or its subsidiaries and related affiliates are not in any way liable for the accuracy or availability of the program schedule information or other data in the GUIDE Plus+/Rovi Guide system and cannot guarantee service availability in your area. In no event shall Rovi Corporation and/or its related affiliates be liable for any damages in connection with the accuracy or availability of the program schedule information or other data in the GUIDE Plus+/Rovi Guide system.

"Full HD 3D Glasses™" Logo indicates compatibility between TV products and 3D Eyewear which are compliant with the "Full HD 3D Glasses™" format, and does not indicate picture quality of TV products.

Contents

Be Sure to Read

Safety Precautions	4
--------------------------	---

Quick Start Guide

Accessories / Options	6
Identifying Controls	10
Basic Connection	13
Auto Setup	16

Enjoy your TV!

Basic

Using "VIERA Connect"	20
Watching TV	21
Using TV Guide	25
Viewing Teletext	28
Watching External Inputs	30
Viewing 3D images	32
How to Use VIERA TOOLS	39
How to Use Menu Functions	40

Advanced

Retuning from Setup Menu	50
Tuning and Editing Channels	54
Timer Programming	58
Child Lock	61
Using Data Service Application	62
Using Common Interface	63
Shipping Condition	64
Updating the TV Software	65
Multi Window	66
Displaying PC Screen on TV	67
Advanced Picture Settings	68
USB HDD / SD Card Recording	70
Using Media Player	74
Using Network Services (DLNA / VIERA Connect)	85
Link Functions (Q-Link / VIERA Link)	96
External Equipment	104

Others

Technical Information	107
FAQs	116
Maintenance	119
Licence	120
Specifications	121

 
Safety Precautions

Warning

Handling the mains plug and lead

- Insert the mains plug fully into the socket outlet. (If the mains plug is loose, it could generate heat and cause fire.)
- Ensure that the mains plug is easily accessible.
- Do not touch the mains plug with a wet hand. This may cause electrical shock.
- Do not use any mains lead other than that provided with this TV. This may cause fire or electrical shock.
- Do not damage the mains lead, damaged lead may cause fire or electrical shock.
 - Do not move the TV with the lead plugged into a socket outlet.
 - Do not place a heavy object on the lead or place the lead near a high temperature object.
 - Do not twist the lead, bend it excessively or stretch it.
 - Do not pull on the lead. Hold onto the mains plug body when disconnecting the plug.
- Do not use a damaged mains plug or socket outlet.
- Ensure the TV does not crush the mains lead.

If you find any abnormality, remove the mains plug immediately!



AC 220-240 V
50 / 60 Hz



Power source / Installation

- This TV is designed for:
 - AC 220-240 V, 50 / 60 Hz
 - Table-top use

Do not remove covers and NEVER modify the TV yourself

- High voltage components may cause serious electrical shock, do not remove the rear cover as live parts are accessible when it is removed.
- There are no user serviceable parts inside.
- Have the TV checked, adjusted or repaired at your local Panasonic dealer.

Do not expose the TV to direct sunlight and other sources of heat

- Avoid exposing the TV to direct sunlight and other sources of heat.



To prevent the spread of fire, keep candles or other open flames away from this product at all times

Do not expose to rain or excessive moisture

- To prevent damage which might result in electric shock or fire, do not expose this TV to rain or excessive moisture.
- This TV must not be exposed to dripping or splashing water and objects filled with liquid, such as vases, must not be placed on top of or above the TV.

Do not place foreign objects inside the TV

- Do not allow any objects to drop into the TV through the air vents as fire or electric shock may result.

Do not place the TV on sloped or unstable surfaces, and ensure that the TV does not hang over the edge of the base

- The TV may fall or tip over.

Use only original dedicated pedestal / mounting equipment

- Using an unapproved pedestal or other fixtures may make the TV unstable, risking injury. Be sure to ask your local Panasonic dealer to perform the setup or installation.
- Use approved pedestals (p. 7) / wall-hanging brackets (p. 6).

Do not allow children to handle SD Card or dangerous parts

- As with any small object, the SD Card could be swallowed by young children. Please remove SD Card immediately after use and store out of reach of children.
- This product contains possibly dangerous parts that can be breathed in or swallowed by young children accidentally. Keep these parts out of reach of young children.

Radio waves

- Do not use the TV, 3D Eyewear and VIERA Touch Pad Controller in any medical institutions or locations with medical equipment. Radio waves from the TV, 3D Eyewear and VIERA Touch Pad Controller may interfere with the medical equipment and cause accidents due to the malfunction.
- Do not use the TV, 3D Eyewear and VIERA Touch Pad Controller near any automatic control equipment such as automatic doors or fire alarms. Radio waves from the TV, 3D Eyewear and VIERA Touch Pad Controller may interfere with the automatic control equipment and cause accidents due to the malfunction.
- Keep the distance at least 22 cm from the built-in wireless LAN part, 3D Eyewear and VIERA Touch Pad Controller when you have a cardiac pacemaker. Radio waves from the part may interfere with the operation of the pacemaker.
- Do not disassemble or alter the built-in wireless LAN, 3D Eyewear and VIERA Touch Pad Controller in any way.

Caution

When cleaning the TV, remove the mains plug

- Cleaning an energised TV may cause electric shock.

Remove the mains plug from the wall socket when the TV is not in use for a prolonged period of time

- This TV will still consume some power even in the Off mode, as long as the mains plug is still connected.

Do not expose your ears to excessive volume from the headphones

- Irreversible damage can be caused.


Do not apply strong force or impact to the display panel

- This may cause damage resulting in injury.

Do not block the rear air vents

- Adequate ventilation is essential to prevent failure of electronic components.
- Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table cloths and curtains.
- We recommend that a gap of at least 10 cm is left all around this TV even when placed inside a cabinet or between shelves.
- When using the pedestal, keep the space between the bottom of the TV and the surface where the TV is set.
- If pedestal is not used, ensure the vents in the bottom of the TV are not blocked.

Minimum distance

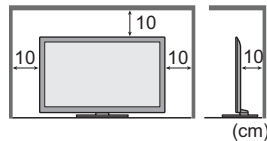

Built-in wireless LAN

- To use the built-in wireless LAN, an access point needs to be obtained.
- Do not use the built-in wireless LAN to connect to any wireless network (SSID*) for which you do not have usage rights. Such networks may be listed as a result of searches. However, using them may be regarded as illegal access. *SSID is a name for identifying a particular wireless network for transmission.
- Do not subject the built-in wireless LAN to high temperatures, direct sunlight or moisture.
- Data transmitted and received over radio waves may be intercepted and monitored.
- The built-in wireless LAN uses 2.4 GHz and 5 GHz frequency bands. To avoid malfunctions or slow response caused by radio wave interference, keep the TV away from the devices such as other wireless LAN devices, microwaves, mobile phones and the devices that use 2.4 GHz and 5 GHz signals when using the built-in wireless LAN.
- When noises occur due to the static electricity, etc., the TV might stop operating for the protection of the devices. In this case, turn the TV off with Mains power On / Off switch, then turn it on again.
- Additional information for built-in wireless LAN and access point may be on the following website. (English only) <http://panasonic.jp/support/global/cs/tv/>

Bluetooth® wireless technology

- The TV, 3D Eyewear and VIERA Touch Pad Controller use the 2.4 GHz radio frequency ISM band (Bluetooth®). To avoid malfunctions or slow response caused by radio wave interference, keep the TV, 3D Eyewear and VIERA Touch Pad Controller away from the devices such as other wireless LAN devices, other Bluetooth devices, microwaves, mobile phones and the devices that use 2.4 GHz signal.

Accessories / Options

Standard accessories

Remote Control

- N2QAYB000715



VIERA Touch Pad Controller

- N2QBYB000015
- ➔ (p. 7, 11)



 
Batteries (4)

- R6
- ➔ (p. 7)




Pedestal

- ➔ (p. 7)



Mains lead

 - ➔ (p. 13)



3D Eyewear (2)

- N5ZZ0000257
- ➔ (p. 33)



Clamper

- ➔ (p. 15)

 


Operating Instructions

Pan European Guarantee Card

Terminal adaptors

- AV1 (SCART) adaptor
- ➔ (p. 14)
- AV2 (COMPONENT / VIDEO) adaptor
- ➔ (p. 104, 105)



- Accessories may not be placed all together. Take care not to throw them away unintentionally.
- This product contains possibly dangerous parts (such as plastic bags), that can be breathed in or swallowed by young children accidentally. Keep these parts out of reach of young children.


Optional accessories

Please contact your local Panasonic dealer to purchase the recommended optional accessories. For additional details, please read the manual of the optional accessories.


Wall-hanging bracket

Please contact your local Panasonic dealer to purchase the recommended wall-hanging bracket.

- Holes for wall-hanging bracket installation

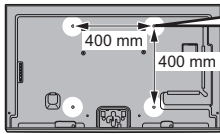

Rear of the TV

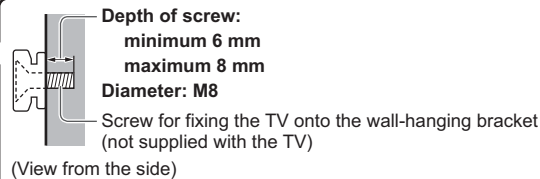

Warning

- Failure to use a Panasonic bracket or choosing to mount the unit yourself will be done at the risk of the consumer. Always be sure to ask a qualified technician to carry out set up. Incorrect fitting may cause equipment to fall, resulting in injury and product damage. Any damage resulting from not having a professional installer mount your unit will void your warranty.
- When any optional accessories or wall hanging brackets are used, always ensure that the instructions provided are followed fully.
- Do not mount the unit directly below ceiling lights (such as spotlights or halogen lights) which typically give off high heat. Doing so may warp or damage plastic cabinet parts.
- Take care when fixing wall brackets to the wall. Wall mounted equipment shall not be grounded by metal within the wall. Always ensure that there are no electrical cables or pipes in the wall before hanging bracket.
- To prevent fall and injury, remove the TV from its fixed wall position when it is no longer in use.

3D Eyewear

(Rechargeable type)

- TY-ER3D4ME
- TY-ER3D4SE



- If you need 3D Eyewears additionally, please purchase this optional accessory.
- Use Panasonic 3D Eyewear supporting Bluetooth wireless technology.
- For more information (English only):
<http://panasonic.net/avc/viera/3d/eu.html>

Communication Camera

- TY-CC20W



 
 
- This camera can be used on VIERA Connect (p. 20, 86).
- Depending on the area, this optional accessory may not be available. For details, consult your local Panasonic dealer.

Installing / removing batteries



Caution

- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control.
- Do not mix old and new batteries.
- Replace only with same or equivalent type. Do not mix different battery types (such as alkaline and manganese batteries).
- Do not use rechargeable (Ni-Cd) batteries.
- Do not burn or break up batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like.
- Make sure you dispose of batteries correctly.
- Ensure batteries are replaced correctly, there is danger of explosion and fire if battery is reversed.
- Do not disassemble or modify the remote control.

■ Remote Control



■ VIERA Touch Pad Controller

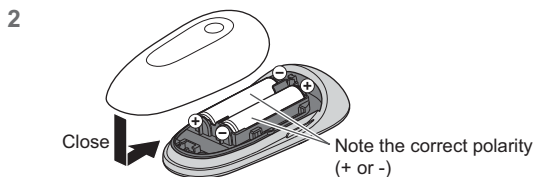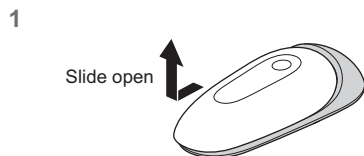

Attaching / removing the pedestal

Warning

Do not disassemble or modify the pedestal.

- Otherwise the TV may fall over and become damaged, and personal injury may result.

Caution

Do not use any pedestal other than the one provided with this TV.

- Otherwise the TV may fall over and become damaged, and personal injury may result.

Do not use the pedestal if it becomes warped or physically damaged.

- If you use the pedestal while it is physically damaged, personal injury may result. Contact your local Panasonic dealer immediately.

During set-up, make sure that all screws are securely tightened.

- If insufficient care is taken to ensure screws are properly tightened during assembly, the pedestal will not be strong enough to support the TV, and it might fall over and become damaged, and personal injury may result.

Ensure that the TV does not fall over.

- If the TV is knocked or children climb onto the pedestal with the TV installed, the TV may fall over and personal injury may result.

Two or more people are required to install and remove the TV.

- If two or more people are not present, the TV may be dropped, and personal injury may result.

When removing the pedestal from the TV, do not remove the pedestal by the methods other than the specified procedure. ➔ (p. 9)

- Otherwise the TV and / or pedestal may fall over and become damaged, and personal injury may result.

(A) Assembly screw (4)

M5 × 15

**(B) Assembly screw (4)
(black)**

M4 × 10

**(C) Assembly screw (2)
(silver)**

M4 × 10

(D) Bracket


● TBL5ZA32771

**(E) Cover**

 ● TBL5ZB32332


**(F) Base**

- TBL5ZX04011 (TX-L42WT50E)
- TBL5ZX04021 (TX-L47WT50E)
- TBL5ZX04031 (TX-L55WT50E)

**■ Preparations**




Take out the pedestal and the TV from the packing case and put the TV onto a work table with the screen panel down on the clean and soft cloth (blanket, etc.)

- Use a firm table bigger than the TV.
- Do not hold the screen panel part.
- Make sure not to scratch or break the TV.

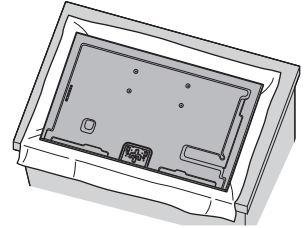**■ Assembling the pedestal**

Attach the bracket (D) to the tabs of the top of the base (F) and fix with assembly screws (A)

- Forcing the assembly screws the wrong way will strip the threads.
- Hold the bracket not to fall over.

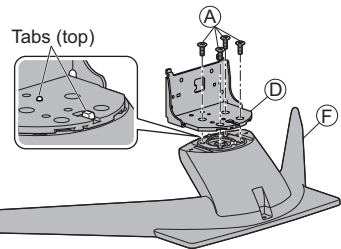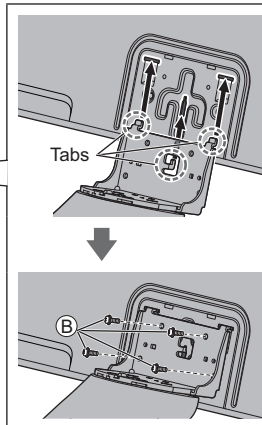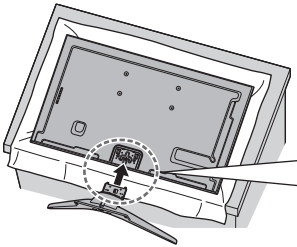**■ Securing the TV****1 Attach the pedestal**


Align the 3 tabs on the bracket with the grooves on the back of the TV and insert them.

Make sure the centre tab is in the hole of the TV. Slide in the bracket aligning the arrow marks (↓↑) on the TV and the bracket.

Tighten the 4 assembly screws (B) loosely at first, then tighten them firmly to fix securely.


2 Attach the cover

Attach the cover (E) and fix securely with assembly screws (C).

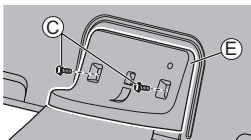

■ Moving the TV

Hold the specified parts as shown to stand the TV up and move it with two people.

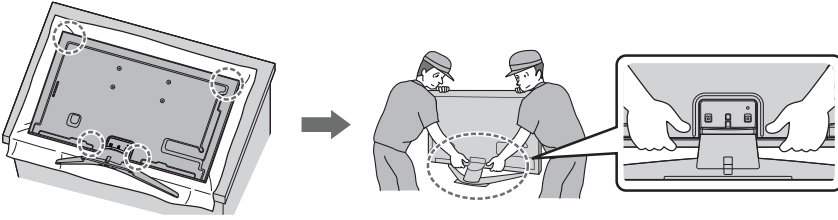


Removing the pedestal from the TV

Be sure to remove the pedestal in the following way when using the wall-hanging bracket or repacking the TV.

- 1 Put the TV onto a work table with the screen panel down on the clean and soft cloth.
- 2 Remove the assembly screws **Ⓒ** from the cover.
- 3 Remove the assembly screws **Ⓑ** from the TV.
- 4 Remove the pedestal from the TV.
- 5 Remove the assembly screws **Ⓐ** from the bracket.

Adjusting the panel to your desired angle

 
- Do not place any objects within the full rotation range.



Preventing the TV from falling over


Using the fall-prevent screw hole and a screw (commercially available), securely fix the body of the pedestal to the installation surface.

- The place where the pedestal is to be fixed should be thick enough and made of hard material.

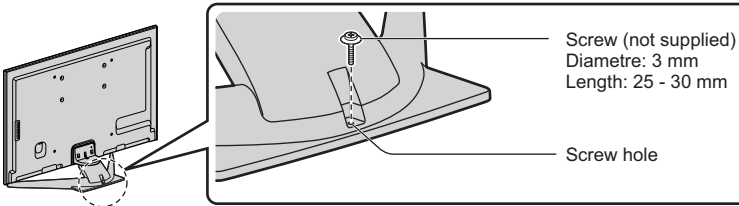

Identifying Controls

Remote Control

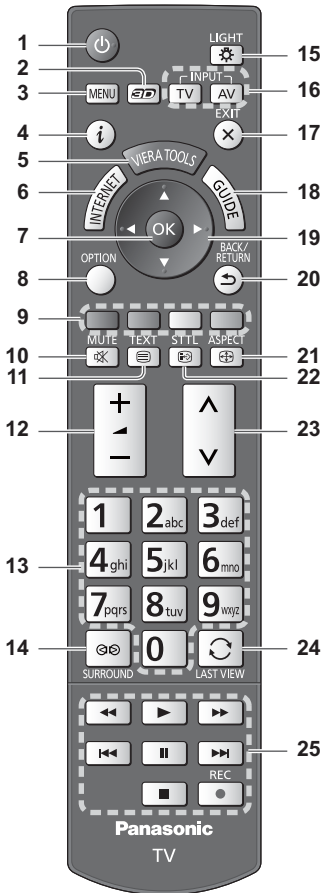


- 1 Standby On / Off switch**
 - Switches TV on or off standby.
- 2 3D button** ➔ (p. 36)
 - Switches the viewing mode between 2D and 3D.
- 3 [Main Menu]** ➔ (p. 40)
 - Press to access Picture, Sound, Network, Timer and Setup Menus.
- 4 Information** ➔ (p. 22)
 - Displays channel and programme information.
- 5 VIERA TOOLS** ➔ (p. 39)
 - Displays some special feature icons and accesses easily.
- 6 INTERNET ([VIERA Connect])** ➔ (p. 20, 86)
 - Displays VIERA Connect home screen.
- 7 OK**
 - Confirms selections and choices.
 - Press after selecting channel positions to quickly change channel.
 - Displays the Channel List.

- 8 [Option Menu]** ➔ (p. 23)
 - Easy optional setting for viewing, sound, etc.
- 9 Coloured buttons (red-green-yellow-blue)**
 - Used for the selection, navigation and operation of various functions.
- 10 Sound Mute**
 - Switches sound mute on or off.
- 11 Teletext** ➔ (p. 28)
 - Switches to teletext mode.
- 12 Volume Up / Down**
- 13 Numeric buttons**
 - Changes channel and teletext pages.
 - Sets characters.
 - When in Standby mode, switches TV on (Press for about 1 second).
- 14 Surround** ➔ (p. 43)
 - Switches surround sound setting.
- 15 Light**
 - Lights the buttons for about 5 seconds (except the buttons "25").
- 16 Input mode selection**
 - TV - switches DVB-S / DVB-C / DVB-T / Analogue mode. ➔ (p. 21)
 - AV - switches to AV input mode from Input Selection list. ➔ (p. 30)
- 17 Exit**
 - Returns to the normal viewing screen.
- 18 TV Guide** ➔ (p. 25)
- 19 Cursor buttons**
 - Makes selections and adjustments.
- 20 Return**
 - Returns to the previous menu / page.
- 21 Aspect** ➔ (p. 24)
 - Changes aspect ratio.
- 22 Subtitles** ➔ (p. 22)
 - Displays subtitles.
- 23 Channel Up / Down**
- 24 Last view** ➔ (p. 24)
 - Switches to previously viewed channel or input mode.
- 25 Operations for contents, connected equipment, etc.** ➔ (p. 31, 73, 75, 92, 102)

VIERA Touch Pad Controller

This touch pad controller is designed for the convenient operations, especially, on VIERA Connect or internet contents. You can operate the TV intuitively with this controller.

- The touch pad controller can be used by registering to this TV with Bluetooth wireless technology. Setup screen to register will appear in "Auto Setup" for first using the TV. ➔ (p. 19)
- After registering, you can operate the TV without pointing this controller at the TV (except Standby On / Off switch).
- To use Standby On / Off switch, point the controller directly at the TV's remote control signal receiver (p. 12) because it works with the infrared. (You can operate the switch without registration.)

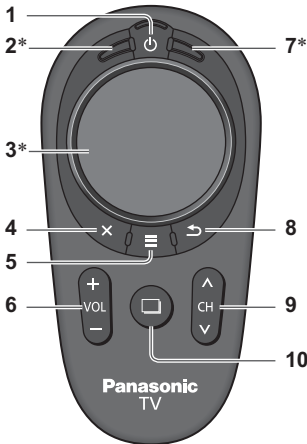

*The behaviour may vary depending on the mode or content.

1 Standby On / Off switch

- Same function of the remote control button 1 (p. 10).

2 OK

3 Touch pad ➔ (see below)

4 Exit

- Same function of the remote control button 17 (p. 10).

5 VIERA TOOLS / On-screen remote control

- VIERA TOOLS: Same function of the remote control button 5 (p. 10).
- On-screen remote control: Press and hold to display the remote control GUI (Graphical User Interface). Press again to move the position of GUI. (To change the page of GUI, slide your finger to the left / right on the touch pad.)

6 Volume Up / Down

- Same function of the remote control button 12 (p. 10).

7 [Option Menu]

8 Return

- Same function of the remote control button 20 (p. 10).

9 Channel Up / Down

- Same function of the remote control button 23 (p. 10).

10 INTERNET ([VIERA Connect])

- Same function of the remote control button 6 (p. 10).

■ Touch Pad



- Tap the centre of the pad for "OK".



- Slide your finger to move the cursor (on internet contents or [Cursor Settings] in [VIERA Touch Pad Controller] (p. 45)), select the item, adjust levels, etc.




- Trace the fringe to scroll.

Note

- It is recommended to hold the touch pad controller with your hand when using.
- The battery power will be used whenever you use the touch pad controller (including the touch of the touch pad) even if not operating the TV. It may decrease the battery life.

Indicator / Control panel

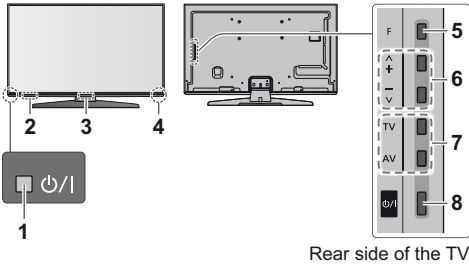

Rear side of the TV

1 Power and Timer LED

Red: Standby

Green: On

Orange: Timer Programming On

Orange (flash):

Recording of Timer Programming, Direct TV Recording or One Touch Recording in progress

Red with orange flash:

Standby with Timer Programming On, Direct TV Recording or One Touch Recording

- The LED blinks when the TV receives a command from the remote control.

2 C.A.T.S. (Contrast Automatic Tracking System) sensor

- Senses brightness to adjust picture quality when [Eco Mode] in the Picture Menu is set to [On].

➔ (p. 41)

3 Front Logo LED

- To turn the LED on / off, set [Front Logo LED] in Setup Menu. ➔ (p. 49)

4 Remote control signal receiver

- Do not place any objects between the TV remote control signal receiver and remote control.

5 Function select

- [Volume] / [Contrast] / [Brightness] / [Colour] / [Sharpness] / [Tint] (NTSC signal) / [Bass]* / [Treble]* / [Balance] / [Auto Setup] (p. 50 - 53) * [Music] or [Speech] mode in the Sound Menu

6 Channel Up / Down, Value change (when using the F button), Switching the TV on (press either button for about 1 second when in Standby mode)

7 Changes the input mode

8 Mains power On / Off switch

- Use to switch the mains power.

If you turned the TV off during Standby mode by the remote control last time, the TV will be in Standby mode when you turn the TV on with Mains power On / Off switch.

When pressing the control panel button (5 - 8), the control panel guide appears on the right side of the screen for 3 seconds to highlight the pressed button.


Using the On Screen Displays - Operation guide

Many features available on this TV can be accessed via the On Screen Display menu.

■ Operation guide

Operation guide will help you to operate by using the remote control.

Example: [Sound Menu]

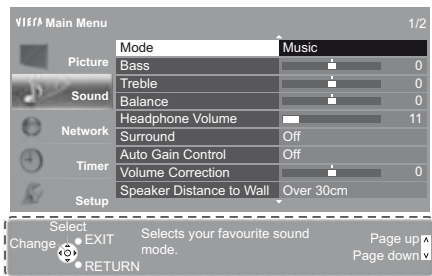

Operation guide

■ How to use remote control



Open the main menu



Move the cursor / select from a range of options / select the menu item (up and down only) / adjust levels (left and right only)



Access the menu / store settings after adjustments have been made or options have been set



Return to the previous menu



Exit the menu system and return to the normal viewing screen

Auto power standby function

The TV will automatically go into Standby mode in the following conditions:

- No signal is received and no operation is performed for 30 minutes in Analogue TV mode.
- [Off Timer] is active in the Timer Menu. (p. 23)
- No operation is performed for the period selected in [Auto Standby] (p. 45).
- This function does not affect the recording of Timer Programming, Direct TV Recording and One Touch Recording.

Basic Connection

External equipment and cables shown are not supplied with this TV.
Please ensure that the unit is disconnected from the mains socket before attaching or disconnecting any leads.
There are some restrictions on placement for viewing 3D images. For details ➔ (p. 32, 33)

Terminals

- 1 CI slot ➔ (p. 63)
- 2 SD Card slot ➔ (p. 70, 74)
- 3 USB 1 - 3 port ➔ (p. 70, 74, 104)
- 4 HDMI1 - 4 ➔ (p. 14, 104)
- 5 Headphone jack ➔ (p. 105)
- 6 ETHERNET ➔ (p. 15)
- 7 Satellite terminal (see below)
- 8 Terrestrial / cable terminal (see below)
- 9 DIGITAL AUDIO OUT ➔ (p. 105)
- 10 PC terminal ➔ (p. 104)
- 11 AV1 (SCART) ➔ (p. 14)
- 12 AV2 (COMPONENT / VIDEO) ➔ (p. 104, 105)

Connections

Mains lead, satellite dish and aerial

■ DVB-S
Satellite dish
Satellite cable

■ DVB-C, DVB-T, Analogue
Terrestrial aerial
Cable
RF cable

■ Mains lead
Mains lead

Insert the mains plug (supplied) firmly into place.

- When disconnecting the mains lead, be absolutely sure to disconnect the mains plug at the socket outlet first.

AC 220-240 V
50 / 60 Hz

Note

- To ensure your satellite dish is correctly installed, please consult your local dealer.
- Also please consult the received satellite broadcasting companies for details.
- Selectable satellites and dish alignment to tune DVB-S channels ➔ (p. 51)

AV devices


■ Player / 3D compatible player

TV




■ DVD Recorder / VCR

TV

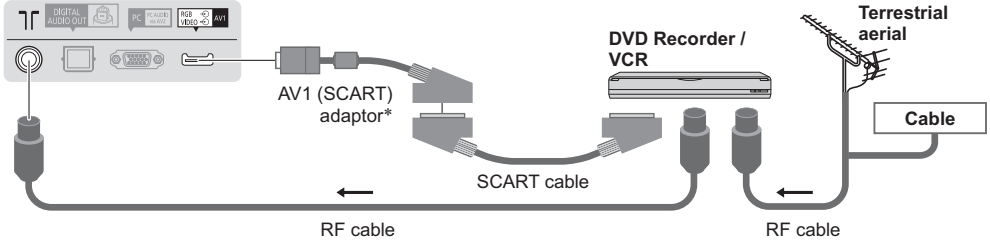

■ DVD Recorder / VCR and Set top box

TV

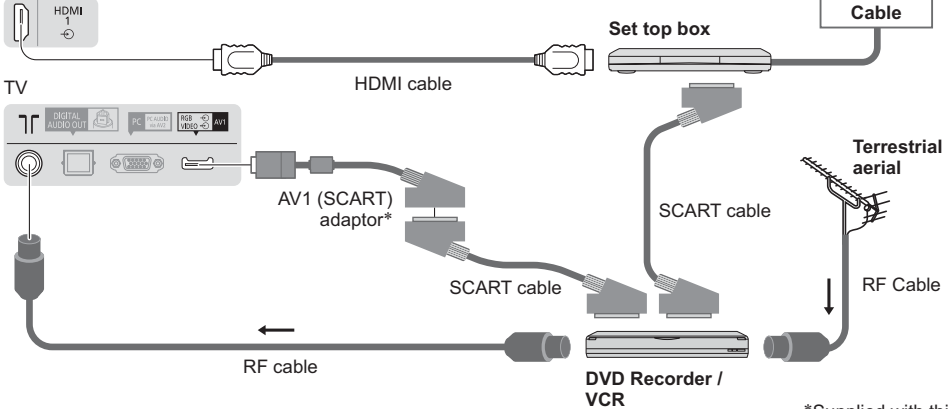

*Supplied with this TV

Note


- Connect to the TV's AV1 for a DVD Recorder / VCR supporting Q-Link (p. 98).
- Q-Link and VIERA Link connection → (p. 96, 97)
- Please also read the manual of the equipment being connected.
- Keep the TV away from electronic equipment (video equipment, etc.) or equipment with an infrared sensor. Otherwise, distortion of image / sound may occur or operation of other equipment may be interfered.
- When using a SCART or HDMI cable, use the fully wired one.
- Check the type of terminals and cable plugs are correct when connecting.

Network


To enable the network service functions (VIERA Connect, etc.), you need to connect the TV to a broadband network environment.

- If you do not have any broadband network services, please consult your retailer for assistance.
- Prepare the internet environment for wired connection or wireless connection.
- Setup of the network connection will start after the tuning (when first using the TV). ➔ (p. 17 - 19)


■ Wired connection

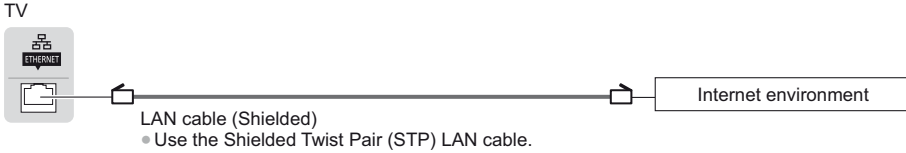

■ Wireless connection

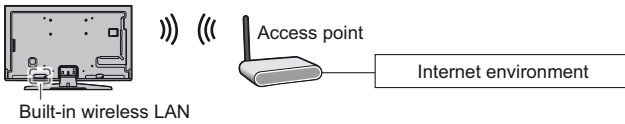

Using clamper

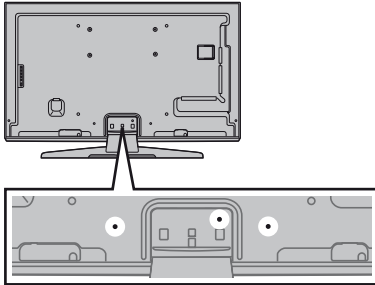

- Do not bundle the Satellite cable, RF cable and mains lead together (could cause distorted image).
- Fix cables with clampers as necessary.
- When using the optional accessory, follow the option's assembly manual to fix cables.


■ Clamper (Standard accessory)

Attach the clamper Insert the clamper in a hole hole	Bundle the cables ① ② Set the tip in the hooks hooks
To remove from the TV: ① ② snaps ① Keep pushing both side snaps	To loosen: ② ① Keep pushing the knob knob

Auto Setup


Search and store TV channels automatically.

- These steps are not necessary if the setup has been completed by your local dealer.
- Please complete connections (p. 13 - 15) and settings (if necessary) of the connected equipment before starting Auto Setup. For details of settings for the connected equipment, read the manual of the equipment.

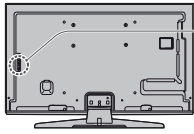


1 Plug the TV into mains socket and switch on

- Takes a few seconds to be displayed.
- If the red LED shows on the TV, press the Standby On / Off switch on the remote control for about 1 second.

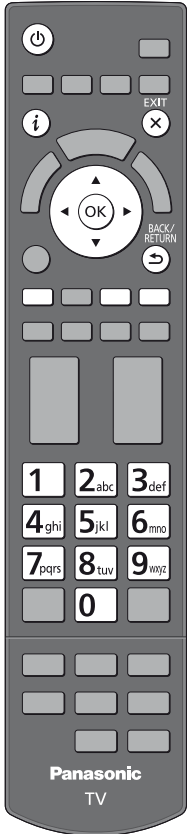

2 Select the language

Menüsprache			
Deutsch	Dansk	Polski	Srpski
English	Svenska	čeština	Hrvatski
Français	Norsk	Magyar	Slovenščina
Italiano	Suomi	Slovenčina	Latviešu
Español	Türkçe	Български	eesti keel
Português	Ελληνικά	Română	Lietuvių
Nederlands			

 

3 Select your country


Country		
Germany	Denmark	Poland
Austria	Sweden	Czech
France	Norway	Hungary
Italy	Finland	Slovakia
Spain	Luxembourg	Slovenia
Portugal	Belgium	Croatia
Switzerland	Netherlands	Estonia
Malta	Turkey	Lithuania
Andorra	Greece	Others



- Depending on the country you select, select your Region or store the Child Lock-PIN number ("0000" cannot be stored) by following the on-screen instructions.

4 Select the mode to tune


TV Signal Selection	
<input checked="" type="checkbox"/>	DVB-S
<input checked="" type="checkbox"/>	DVB-C
<input checked="" type="checkbox"/>	DVB-T
<input checked="" type="checkbox"/>	Analogue
Start Auto Setup	

 

- : tune (search for the available channels)
- : skip tuning

5 Select [Start Auto Setup]

TV Signal Selection	
<input checked="" type="checkbox"/>	DVB-S
<input checked="" type="checkbox"/>	DVB-C
<input checked="" type="checkbox"/>	DVB-T
<input checked="" type="checkbox"/>	Analogue
Start Auto Setup	

 


- Auto Setup will start to search for TV channels and store them. The stored channels and sorted channel order vary depending on the country, area, broadcasting system and conditions of signal reception.


Auto Setup screen varies depending on the country you select.

5


1 DVB-S Search Mode

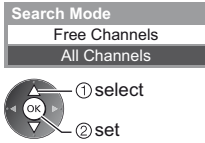


3 [DVB-S Auto Setup]

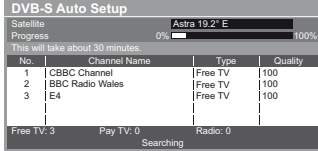

5 [DVB-C Auto Setup]

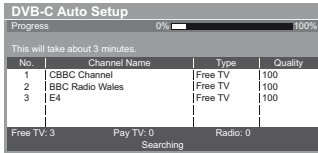

7 [Analogue Auto Setup]

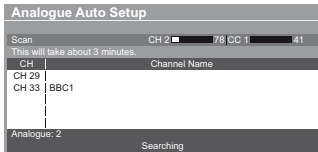


6

Setup the network connection


Setup the network connection to enable the network service functions such as VIERA Connect, etc. (p. 20, 86).

- Please note that this TV does not support wireless public access points.
- Ensure the network connections (p. 15) and network environment are completed before starting setup.

Select the network type


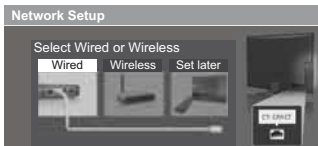


2 DVB-S Satellite Search

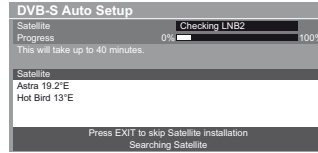

4 [DVB-C Network Settings]

  - Depending on the country you select, select your cable provider beforehand by following the on-screen instructions.



Normally set [Frequency] and [Network ID] to [Auto].
If [Auto] is not displayed or if necessary, enter [Frequency] and [Network ID] specified by your cable provider with numeric buttons.

 
6 [DVB-T Auto Setup]



- Depending on the country you select, the channel selection screen will be displayed after DVB-T Auto Setup if multiple channels have the same logical channel number. Select your preferred channel or exit the screen for automatic selections.

8 Preset Download

If Q-Link, VIERA Link or similar technology (p. 98, 99) compatible recorder is connected, channel, language and country / region settings are automatically downloaded to the recorder.




- If downloading has failed, you can download later through the Setup Menu. ➔ [Download] (p. 46)

[Wired] ➔ "Wired connection" (p. 15)

[Wireless] ➔ "Wireless connection" (p. 15)



- To setup later on or skip this step

➔ Select [Set later] or 

■ [Wired]

1. Select [Auto]

Acquire IP Address	
Auto	Manual



Connection Test	
<input checked="" type="checkbox"/>	Check network cable connection.
<input checked="" type="checkbox"/>	Check acquired IP address.
<input checked="" type="checkbox"/>	Check for devices using same IP address.
<input checked="" type="checkbox"/>	Check gateway connection.
<input checked="" type="checkbox"/>	Check server connection.

: **succeeded**

The test is successful and the TV is connected to the network.

: **failed**

Check the settings and connections. And then select [Retry].

Automatically setup is done and the test of the network connection starts.

- To set manually, select [Manual] and set each item. For details ➔ (p. 89)

2. Go to the next step 7



■ [Wireless]

Access points found automatically are listed.

1. Select your desired access point

Available Wireless Networks			
No.	Network Name(SSID)	Wireless type	Status
1	Access Point A	11n(2.4GHz)	<input type="checkbox"/> []
2	Access Point B	11n(5GHz)	<input type="checkbox"/> []
3	Access Point C	11n(5GHz)	<input type="checkbox"/> []



- For [WPS(Push button)] (p. 19)



: Encrypted access point

- To search access points again



- For the information of the highlighted access point



- To set manually (p. 91)



2. Access the encryption key input mode

Encryption Key Setting	
Connection will be made with the following settings-	
Network Name(SSID) : Access Point A	
Security type : WPA-PSK	
Encryption type : TKIP	
Please input the encryption key.	
Encryption key	██████████




- If the selected access point is not encrypted, the confirmation screen will be displayed. It is recommended to select the encrypted access point.

3. Enter the encryption key of the access point

Wireless Network Settings	
Encryption key	
A B C D E F G H I J K L M N O P Q R S T	
U V W X Y Z 0 1 2 3 4 5 6 7 8 9 ! : #	
a b c d e f g h i j k l m n o p q r s t	
u v w x y z () + - * @ / ' " % & 7	
. : = \$ [] ^ _ < > () ! , * \	

 Set characters



- You can set characters by using numeric buttons.

4. After the access point setting is finished, perform the connection test



Connection Test	
<input checked="" type="checkbox"/>	Check wireless network connection.
<input checked="" type="checkbox"/>	Check acquired IP address.
<input checked="" type="checkbox"/>	Check for devices using same IP address.
<input checked="" type="checkbox"/>	Check gateway connection.
<input checked="" type="checkbox"/>	Check server connection.

: **succeeded**

The test is successful and the TV is connected to the network.

: **failed**

Check the settings and connections. And then select [Retry].

- To set manually, select [Manual] and set each item. For details ➔ (p. 89)

5. Go to the next step 7



6

[WPS(Push button)]

1. Press the WPS button on the access point until the light flashes
2. Connect the TV with the access point

WPS(Push button)

1) Please press the 'WPS' button on the wireless access point until its light flashes.

2) When the light is flashing select 'Connect' on TV.

If you are unsure, please check the instruction manual of the wireless access point.

Connect



- Ensure that your access point supports WPS for this setup.
- WPS: Wi-Fi Protected Setup™
- If the connection has failed, check the settings and positions of your access point. And then, follow the on-screen instructions.

3. After the access point setting is finished, perform the connection test



Connection Test

- Check wireless network connection.
- Check acquired IP address.
- Check for devices using same IP address.
- Check gateway connection.
- Check server connection.

: **succeeded**

The test is successful and the TV is connected to the network.

: **failed**

Check the settings and connections. And then select [Retry].

- To set manually, select [Manual] and set each item. For details ➔ (p. 89)

4. Go to the next step **7**



(Press twice)

7

Register the VIERA Touch Pad Controller to this TV

Select [Pairing]

Follow the on-screen instructions to use the touch pad controller (supplied).

- To skip this step
- To register later on or for detailed settings

➔ Select [Set later] or



➔ **[VIERA Touch Pad Controller]**
(p. 45)

8

Select [Home]

Select [Home] viewing environment to use in your home environment.

Please select your viewing environment.

Home Shop



- ① select
- ② set

■ [Shop] viewing environment (for shop display only)

[Shop] viewing environment is the demonstration mode to explain main features of this TV.

Select [Home] viewing environment to use in your home environment.

- You can return to viewing environment selection screen at the stage of Shop confirmation screen.

1 Return to viewing environment selection screen

Shop

You have selected shop mode



2 Select [Home]

Please select your viewing environment.

Home Shop



- ① select
- ② set

To change viewing environment later on, you will need to initialise all settings by accessing Shipping Condition. ➔ **[Shipping Condition]** (p. 64)

Auto Setup is now complete and your TV is ready for viewing.

If tuning has failed, check the connection of the Satellite cable, RF cable, and then, follow the on-screen instructions.

Note


- To check the channel list ➔ **“Using TV Guide”** (p. 25)
- To edit or hide (skip) channels ➔ **“Tuning and Editing Channels”** (p. 54 - 57)
- To retune all channels ➔ **[Auto Setup]** (p. 50 - 53)
- To add the available TV mode later ➔ **[Add TV Signal]** (p. 47)
- To initialise all settings ➔ **[Shipping Condition]** (p. 64)

Using “VIERA Connect”

VIERA Connect is a gateway to the internet services unique to Panasonic. VIERA Connect allows you to access some specific websites supported by Panasonic, and enjoy internet contents such as videos, games, communication tools, etc. from VIERA Connect home screen.

- This TV does not support full web browser function and some features of the websites may not be available.

Using “VIERA Connect”

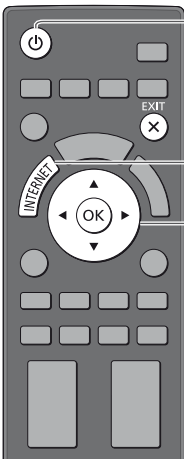


1 Turn power on



- Press for about 1 second.
- Mains power On / Off switch should be on. (p. 12)

 - Every time you turn on the TV, VIERA Connect introduction banner appears. The banner is subject to change.



2 Access VIERA Connect

While the banner is displayed



or



- Depending on the usage conditions, it may take a while to read all the data.
- Messages might be displayed before VIERA Connect home screen. Please read these instructions carefully and follow the on-screen instructions.

Example: VIERA Connect home screen



- To go to the next level, select [MORE].
- To back to the previous level, select [BACK].
- To return to VIERA Connect home screen



■ To exit from VIERA Connect



- To set the VIERA Connect introduction banner display off
 ➔ [VIERA Connect Banner] (p. 48)

- Setup menu (Items in [Setup] may change without notice.)


Customize HomeScreen	Changes the position of each services on VIERA Connect home screen
My Account	Confirms or removes the account information of the TV you entered on VIERA Connect
Lock	Sets to restrict access to some services
Restrictions	Sets to restrict reveal of the restricted services
Beep	Sets beep sound On or Off when operating VIERA Connect
Notices	Displays the information of VIERA Connect

- You may operate the internet contents with the free cursor of the VIERA Touch Pad Controller (supplied).
- Video communication (for example Skype™) requires an exclusive Communication Camera TY-CC20W.
 ➔ “Optional accessories” (p. 7)
 For details, read the manual of the Communication Camera.
- You can connect a keyboard and a gamepad for character input and playing games in VIERA Connect. You can also operate the TV with a keyboard or a gamepad other than VIERA Connect features.
 For more information
 ➔ “USB connection” (p. 113), “Bluetooth Setup” (p. 113), “Operations from Keyboard / Gamepad” (p. 113)

Note

- If you cannot access VIERA Connect, check the network connections (p. 15) and settings (p. 17 - 19).
- For more information of VIERA Connect ➔ (p. 86)

Watching TV

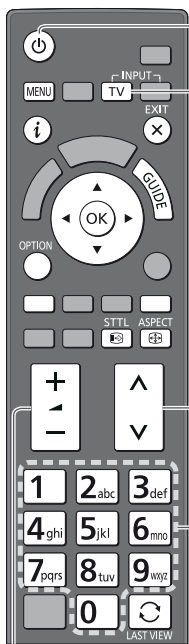

Volume

1

Turn power on



- Press for about 1 second.
- Mains power On / Off switch should be on. (p. 12)

■ VIERA Connect introduction banner appears

Every time you turn on the TV, this banner appears at the bottom of the screen.

 
You can access to VIERA Connect easily and enjoy the various contents. → (p. 20)

- To remove this banner, leave for about 5 seconds or press any buttons (except the buttons to access VIERA Connect).
- To set this banner display off → [VIERA Connect Banner] (p. 48)



2

Select the mode



- The selectable modes vary depending on the stored channels (p. 16).



- You can also select the mode pressing the TV button repeatedly on the remote control or the TV (p. 12).
- If [TV Selection] menu is not displayed, press the TV button to switch the mode.

3

Select a channel



or



- To select a more than two-digit channel position number, e.g. 399



■ To select from the Channel List



- To sort channel names in alphabetical order



- To change the category

 


■ To select a channel using Information banner (p. 22)

1 Display Information banner if it is not displayed



2 While the banner is displayed, select the channel



■ To select a channel using TV Guide (p. 25)

 
 
1 Display TV Guide



2 Select the current programme or channel



3 Select [View] (DVB)



- The postcode entry or update may be required depending on the country you select (p. 16). Follow the on-screen instructions.

Note


- To watch pay-TV → "Using Common Interface" (p. 63)

Other useful functions

Display Information banner

Display Information banner

- Also appears when changing a channel.

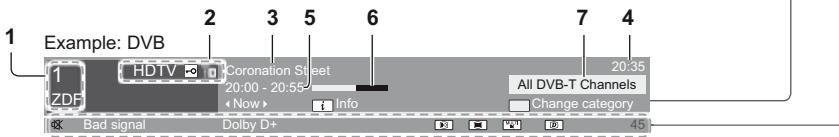

- 1 Channel position and name
- 2 Channel type ([Radio], [Data], [HDTV], etc.) / Encrypted channel () / TV mode (, , , ,)
- 3 Programme
- 4 Current time
- 5 Programme Start / Finish time (DVB) Channel number, etc. (Analogue)
- 6 Progress time indicator of the selected programme (DVB)
- 7 Category
 - To change the category (DVB)



Features available / Message meanings

Sound mute on	Teletext service available	[Stereo], [Mono] Audio mode
[Bad signal] Poor TV signal quality	Multiple audio available	Data service (Hybrid Broadcast Broadband TV application) available (p. 62)
[Dolby D+], [Dolby D], [HE-AAC] Dolby Digital Plus, Dolby Digital or HE-AAC audio track	Multiple video available	1 - 90 Off Timer remaining time • For settings ➔ (p. 23)
Subtitle service available	Multiple audio and video available	

- To confirm another tuned channel name
- To watch the channel listed in the banner
- Information on the next programme (DVB)
- To hide EXIT
- Extra information (DVB)
 (Press again to hide the banner)
- To set display timeout ➔ **[Banner Display Timeout]** (p. 48)

Display subtitles

Display / hide subtitles (if available)

- STTL • To change the language for DVB (if available)
 ➔ **[Preferred Subtitles]** (p. 47)

Note

 
- If you press this button in Analogue mode, it switches to teletext service and calls up a favourite page (p. 28). Press the EXIT button to return to TV mode.
- Subtitles may not be displayed properly in 3D images.

Display the selectable settings for the current status

Confirm or change the current status instantly

OPTION

- To change



[Multi Video] (DVB)

Selects from a group of multiple videos (if available)

- This setting is not memorised and it will return to the default setting once you exit the current programme.

[Multi Audio] (DVB)

Selects between alternative language for sound tracks (if available)

- This setting is not memorised and it will return to the default setting once you exit the current programme.

[Dual Audio] (DVB)

Selects stereo / monaural (if available)

[Sub Channel] (DVB)

Selects the multifeed programme - sub channel (if available)

[Subtitle Language] (DVB)

Selects the language in which subtitles should appear (if available)

[Teletext Character Set]

Sets the teletext language font

➔ (p. 47)

[Teletext Language] (DVB)

Selects between alternative language for teletext (if available)

[MPX] (Analogue)

Selects multiplex sound mode (if available)

➔ (p. 44)

[Volume Correction]

Adjusts volume of individual channel or input mode

[Safely remove USB]

Takes this operation to remove the connected USB device safely from the TV

Off Timer

Turn the TV to Standby mode automatically after a fixed period

1 Display the menu


MENU

2 Select [Timer]



3 Select [Off Timer] and set the time in 15-minute increments

Timer Programming	Off
Off Timer	15 minutes
Auto Standby	30 minutes
	45 minutes
	60 minutes
	75 minutes
	90 minutes

 

- To cancel, set to [Off] or turn the TV off.
- To confirm the remaining time ➔ “Display Information banner” (p. 22)
- When the remaining time is within 3 minutes, the remaining time will flash on the screen.

Aspect

Change the aspect ratio (image size)

ASPECT Enjoy viewing the image at its optimum size and aspect.




Programmes usually contain an "Aspect Control Signal" (Widescreen signal, etc.), and the TV will choose the aspect ratio automatically according to the "Aspect Control Signal" (p. 107).

■ To change the aspect ratio manually

1 Display Aspect Selection list

ASPECT

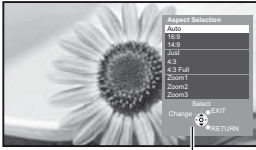

Aspect Selection list

2 While the list is displayed, select the mode



- You can also change the mode only using the ASPECT button.

ASPECT



(Press repeatedly until you reach the desired mode.)

[Auto]



The best ratio is chosen and the image expanded to fill the screen. For details ➔ (p. 107)

[16:9]



Directly displays the image at 16:9 without distortion (anamorphic).

[14:9]



Displays the image at the standard 14:9 without distortion.

[Just]



Displays a 4:3 image full-screen. Stretching is only noticeable at the left and right edges.

[4:3]



Displays the image at the standard 4:3 without distortion.

[4:3 Full]



Displays a 4:3 image enlarged horizontally to fit the screen.

[Zoom1]



Displays a 16:9 letterbox or 4:3 image without distortion.

[Zoom2]



Displays a 16:9 letterbox (anamorphic) image full-screen without distortion.

[Zoom3]



Displays a 2.35:1 letterbox (anamorphic) image full-screen without distortion. At 16:9, displays the image at its maximum (with slight enlargement).

Note

- Only [16:9] and [4:3] are available in PC input mode.
- Aspect cannot be changed in teletext service and 3D mode.
- Aspect mode can be memorised separately for SD (Standard definition) and HD (High definition) signals.

Last view

Switch to previously viewed channel or input mode easily



LAST VIEW

- Press again to return to the current view.


Note

- Switching channel is not available while the recording of Timer Programming, Direct TV Recording or One Touch Recording is in progress.
- Watching less than 10 seconds is not regarded as the previously viewed channel or input mode.

Using TV Guide

TV Guide - Electronic Programme Guide (EPG) provides an on-screen listing of the programmes currently broadcast and the forthcoming broadcasts over the next seven days (depending on the broadcasters).

- This function varies depending on the country you select (p. 16).
- The postcode entry or update may be required to use the GUIDE Plus+ system depending on the country you select.
 - ➔ **“View advertisement”** (p. 26)
- DVB-T and Analogue channels are displayed on the same TV Guide screen. [D] and [A] may be displayed to distinguish DVB-T and Analogue channels. There will be no programme listings for Analogue channels.
- When this TV is turned on for the first time, or the TV is switched off for more than a week, it may take some time before TV Guide is completely shown.

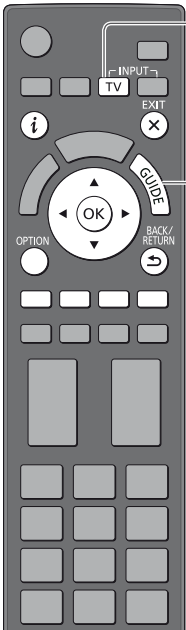

1
2

Select the mode

➔ (p. 21)



View TV Guide




- Press again to change the layout ([Landscape] / [Portrait]).
- View [Landscape] to see several channels.
- View [Portrait] to see one channel by time.

Example: [Landscape]



- 1 Current date and time
- 2 TV Guide date
- 3 TV Guide time
- 4 Programme
- 5 Advertisement
- 6 Channel position and name
- 7 [D]: DVB-T
[A]: Analogue

Example: [Portrait]

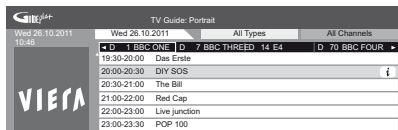

Depending on the country you select, you can select the TV Guide type

➔ **[Default Guide]** (p. 47)

If you select [Channel List], the channel list will appear when the GUIDE button is pressed.

 
■ To return to TV

EXIT





■ To watch the programme

1 Select the current programme or channel



2 Select [View] (DVB)

  


• To use Timer Programming ➔ (p. 27)

■ To the previous day (DVB)

 (red)

■ To view a channel list of the selected type (DVB)

 (yellow)

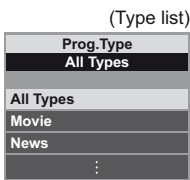


■ To the next day (DVB)

 (green)

■ To view a channel list of the selected category

 (blue)

 (Category list)



Only Analogue channels are listed

To list favourite channels
➔ (p. 54)

Other useful functions

View details of the programme (DVB)

1 Select the programme



2 View details



• Press again to return to TV Guide.

View advertisement

Depending on the country you select, this TV supports the **GUIDE Plus+** system in DVB-T or Analogue mode

The postcode entry or update is required. Follow the on-screen instructions.

• You can also setup manually from the Setup Menu.

➔ **[Update] / [Postcode] in [GUIDE Plus+ Settings] (p. 49)**

• Enter your postcode when using this function for the first time. If you enter an incorrect postcode for your area, or no postcode is entered, advertisements may not be displayed correctly.

Display advertisement information

OPTION

• To display the latest advertisement



➔ **[Update] in [GUIDE Plus+ Settings] (p. 49)**

■ To change advertisements



■ To return to TV Guide



or



Note

• To update the information continuously, the TV must be left in Standby mode.

Timer Programming (DVB)

The Timer Programming menu allows you to choose programmes that you want to remind watching or record to the external recorder, the USB HDD or the SD Card. At the correct time, the TV will tune to the correct channel even if the TV is in Standby mode.

1 Select the forthcoming programme



- LED will turn to orange if Timer Programming is set. (Orange LED will flash if the recording of Timer Programming is in progress.)
- ➔ "Indicator / Control panel" (p. 12)

2 Select the function ([Ext Rec.], [USB HDD Rec.], [SD Card Rec.] or [Reminder])

(Timer Programming screen)

Function	No.	Channel Name	Date	Start	End
[Ext Rec.]	D 12	BBC ONE CH12010	Wed 26.10.2011	20:00	20:30 (10 min.)
[USB HDD Rec.]
[SD Card Rec.]
[Reminder]



- [Ext Rec.] / [USB HDD Rec.] / [SD Card Rec.] / [Reminder]
- ➔ "Set timer programming event details" (p. 59)

■ To check / change / cancel a timer programming event

 
- ➔ "Timer Programming" (p. 58 - 60)

■ To return to TV Guide



■ If you select the current programme

A confirmation screen asking whether you want to watch or record the programme appears. Select [Timer Programming] and set [Ext Rec.], [USB HDD Rec.] or [SD Card Rec.] to record from the time you finish the timer programming event setting.



Note

- This function is not available in Analogue mode.
- Timer Programming only works reliably if correct time information is received via the signal from the broadcaster or service provider.
- No other channel can be selected while the recording of Timer Programming is in progress.
- When recording programmes to the external recorder, be sure to make the proper settings on the recorder connected to the TV.
- If a compatible recorder with Q-Link, VIERA Link or similar technologies is connected to the TV (p. 98, 99) and [Link Settings] (p. 46) are completed, no setting of the recorder is required. Also read the manual of the recorder.
- When recording programmes to the USB HDD, be sure to format the USB HDD and enable it to record in [Recording Setup]. When recording programmes to the SD Card, prepare the appropriate SD Card. For more information of the USB HDD / SD Card Recording. ➔ (p. 70, 111)

Viewing Teletext





Teletext services are the text information provided by the broadcasters. The features may vary depending on the broadcasters.

What is FLOF (FASTTEXT) mode?

In FLOF mode, four differently coloured subjects are situated at the bottom of the screen. To access more information about one of these subjects, press the appropriate coloured button. This facility enables fast access to information on the subjects shown.

What is TOP mode? (in case of TOP text broadcasting)

TOP is a particular improvement of the standard teletext service that results in an easier search and effective guide.


- Fast overview of the teletext information available
 - Easy to use step-by-step selection of the topical subject
 - Page status information at the bottom of the screen
 - Available page up / down
 - To select among subject blocks
 - To select next subject within the subject block (After the last subject, it moves to the next subject block.)
-  (red)
  (green)
  (blue)
  (yellow)

What is List mode?

In List mode, four differently coloured page numbers are situated at the bottom of the screen. Each of these numbers can be altered and stored in the TV's memory. ➔ "Store frequently viewed pages" (p. 29)

■ To change mode ➔ [Teletext] (p. 47)


Viewing Teletext

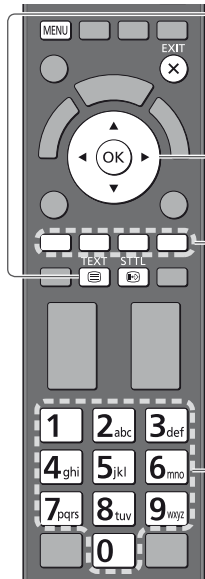

1 Switch to Teletext



Sub page number

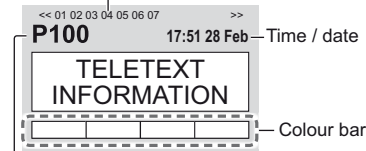


Current page number

- Displays the index page (content varies depending on the broadcasters).

2 Select the page



- or  Coloured button (Corresponds to the colour bar)

■ To adjust contrast



(Press three times)

As the blue bar is displayed



■ To return to TV

EXIT



Reveal hidden data

Reveal hidden words e.g. quiz page answers



- Press again to rehide.

Call up a favourite page

View a favourite page stored

Call up the page stored on the blue button (List mode).

 


- Factory setting is "P103".

FULL / TOP / BOTTOM


MENU → (green)

(TOP)




(Expand the TOP half)

 (BOTTOM)



(Expand the BOTTOM half)

 Normal (FULL)



View in multi window

Watch TV and Teletext in two windows at once

MENU
(Press twice)



Select [Picture and text] On or Off



- Operations can be made only in teletext screen.

Store frequently viewed pages

 
Store frequently viewed pages in the colour bar (List mode only)

As page is displayed


(Corresponding coloured button)




press and hold



The number changes to white.

■ To change stored pages


Coloured button you want to change



Enter new page number



press and hold

View sub page

View sub page (Only when Teletext is more than one page)



<<01 02 03 04 05

Appears at top of the screen

 
- The number of sub pages varies depending on the broadcasters (up to 79 pages).
- It may take some time for searching, during which time you can watch TV.

■ To view specific sub page

MENU → (blue)



Enter the 4-digit number
Example: P6



Watch TV while waiting for update

View the TV picture while searching for a teletext page

Teletext automatically updates itself when new information becomes available.

MENU → (yellow)



Changes to TV screen temporarily



Appears when updating is completed

View the updated page

 (yellow)

(You cannot change the channel.)


- The news page provides a function that indicates arrival of the latest news ("News Flash").

Watching External Inputs

Connect the external equipment (VCRs, DVD equipment, etc.) and you can watch through the input.

- To connect the equipment ➔ (p. 13 - 15, 104 - 106)

The remote control is capable of operating the contents or external equipment. ➔ (p. 31)

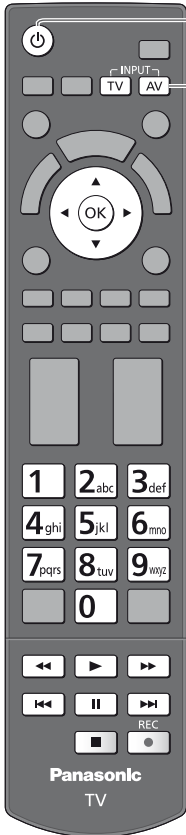

1 Turn the TV on



When connecting with SCART (p. 14)

Receives input signals automatically when playback starts

- Input signals are automatically identified by the SCART (pin 8) terminal.
- This function is also available for HDMI connections (p. 104).

If input mode is not switched automatically


Perform **2** and **3**

- Check the setup of the equipment.

2 Display the input selection menu



3 Select the input mode connected to the equipment

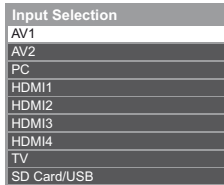


- You can also select the input using the AV button on the remote control or the TV (except [SD Card/USB]). Press the button repeatedly until the desired input is selected.
- To switch between [COMPONENT] and [VIDEO] in [AV2], move the indicator by pressing left and right cursor button.
- [SD Card/USB]: Switches to Media Player. ➔ **“Using Media Player” (p. 74)**
- You can label or skip each input mode (except [SD Card/USB]). ➔ **“Input Labels” (p. 48)**
Skipped inputs will not be displayed when the AV button is pressed.

■ To return to TV



4 View

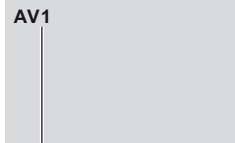









Displays the selected mode

Note

- If the external equipment has an aspect adjustment function, set it to “16:9”.
- For details, read the manual of the equipment or ask your local dealer.

Operating the contents or equipment with the TV remote control

You can operate the contents in Media Player / media servers, recording functions or the connected equipment with the below buttons of this TV remote control.

	Play Playback videocassette / DVD / video content
	Stop Stop the operations
	Rewind / Skip VCR: Rewind, view the picture rapidly in reverse DVD / video content: Skip to the previous track, title or chapter
	Rewind / Search VCR: Rewind, view the picture rapidly in reverse DVD / video content: Search backward
	Fast-forward / Skip VCR: Fast-forward, view the picture rapidly forward DVD / video content: Skip to the next track, title or chapter
	Fast-forward / Search VCR: Fast-forward, view the picture rapidly forward DVD / video content: Search forward
	Pause Pause / Resume DVD: Press and hold to play at slow speed
	[Direct TV Rec] ➔ (p. 98, 100) [One Touch Recording] ➔ (p. 72)

How to change the code

Each type of the Panasonic equipment has its own remote control code.

Change the code according to the equipment you want to operate.

Press and hold Standby On / Off switch during the following operations

Enter the appropriate code, see table below



Press



Type of the equipment, features	Code
DVD Recorder, DVD Player, Blu-ray Disc Player	70
Player theatre, Blu-ray Disc theatre	71
VCR	72
Using in USB HDD / SD Card Recording (p. 72), Media Player (p. 75), DLNA features (p. 92) or Direct TV Recording (p. 98, 100) Equipment using in VIERA Link (p. 101)	73 (default)

Note

- Confirm if the remote control works correctly after changing the code.
- The codes may be reset to default values if batteries are replaced.
- Some operations may not be possible on some equipment models.

Viewing 3D images

You can enjoy viewing 3D images with contents or programmes corresponding to the 3D effect by wearing the 3D Eyewear. ➔ **“Standard accessories” (p. 6)**

This TV supports [Frame Sequential]*1, [Side by Side]*2 and [Top and Bottom]*3 3D formats.

*1: The 3D format that the images for the left and right eyes are recorded with the high definition quality and alternately played back.

*2, *3: Other available 3D formats

• How to view the 3D images ➔ (p. 36)

Warning

Small Parts

• 3D Eyewear contains small parts (battery, etc.) and must be kept out of reach of small children to avoid accidental ingestion.

Disassembly

• Do not disassemble or modify the 3D Eyewear.

Lithium Battery

• Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

Caution

To use 3D Eyewear safely and comfortably, please read these instructions fully.

3D Eyewear

- Do not drop, bend, exert pressure on, or step on the 3D Eyewear.
- Be careful of the tips of the frame when putting on the 3D Eyewear.
- Always keep the 3D Eyewear in a cool, dry place.
- Be careful not to trap a finger in the hinge section of the 3D Eyewear.
- Do not exert pressure on or scratch the surface of the liquid crystal shutter of the 3D Eyewear.

Viewing 3D Content

- Do not use the 3D Eyewear if you have a history of over-sensitivity to light, heart problems, or have any other existing medical conditions.
- Please stop using the 3D Eyewear immediately, if you feel tired, are not feeling well or experience any other uncomfortable sensation. When you set the effect by using [3D Adjustment], take into account that the vision of 3D images varies among different individuals.
- Take an appropriate break after viewing a 3D movie.
- Take a break of between 30 - 60 minutes after viewing 3D content on interactive devices such as 3D games or computers.
- Be careful not to strike the TV screen or other people unintentionally. When using the 3D Eyewear the distance between the user and screen can be misjudged.
- The 3D Eyewear must only be worn when viewing 3D content.
- Use the 3D Eyewear where there is no interference from other devices with Bluetooth signal.
- If you suffer from any eyesight problems (short / far-sighted, astigmatism, eyesight differences in left and right), please ensure to correct your vision before using the 3D Eyewear.
- Stop using the 3D Eyewear if you can clearly see double images when viewing 3D content.
- Do not use the 3D Eyewear at a distance less than the recommended distance.

The recommended viewing distance is at least 3 times of the image height.

TX-L42WT50E: 1.6 m or more

TX-L47WT50E: 1.8 m or more

TX-L55WT50E: 2.1 m or more

When the top and bottom area of the screen is blackened, such as movies, view the screen at a distance at least 3 times of the height of the actual image. (That makes the distance closer than above recommended figure.)

3D Eyewear Use

- Pay special attention when children are using the 3D Eyewear.
- 3D Eyewear should not be used by children younger than about 5 - 6 years old, as a guideline. All children must be fully supervised by parents or guardians who must ensure their safety and health throughout the using 3D Eyewear.
- Before using the 3D Eyewear, ensure no breakable objects surrounding the user to avoid any accidental damage or injury.
- Remove the 3D Eyewear before moving around to avoid falling or accidental injury.
- Use the 3D Eyewear only for the intended purpose and nothing else.
- Do not use 3D Eyewear in the condition of high temperature.
- Do not use if the 3D Eyewear is physically damaged.
- Do not use devices (such as mobile phones or personal transceivers) that emit strong electromagnetic waves near the 3D Eyewear as this may cause the 3D Eyewear to malfunction.
- Stop using the 3D Eyewear immediately if a malfunction or fault occurs.
- Stop using the 3D Eyewear immediately if you experience any redness, pain, or skin irritation around the nose or temples.
- In rare cases, the materials used in the 3D Eyewear may cause an allergic reaction.

Lithium Battery

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

3D Eyewear



- Use the supplied 3D Eyewear or Panasonic 3D Eyewear that has this logo and supports Bluetooth® wireless technology.

“Full HD 3D Glasses™” logo indicates products that are compatible with the active shutter 3D glasses technology standards licensed by the Full HD 3D Glasses Initiative. The RF mark on the logo means the wireless system (Bluetooth® wireless technology), and you can use the 3D Eyewear and the TV that have the same mark together.


Note

- Use the 3D Eyewear within approximately 3.2 m from the TV. You cannot view the 3D images with the 3D Eyewear too far from the TV, because of the difficulty of receiving radio waves from the TV.
- The range may be shortened depending on the obstacles between the TV and the 3D Eyewear, or the surrounding environment.
- There are differences in the viewing range of the 3D Eyewear among individuals.
- The 3D Eyewear may not operate correctly at the outside of the viewing range.
- 3D Eyewear can be worn over vision correction glasses.

Storing and cleaning the 3D Eyewear

- Clean using a soft, dry cloth.
- Wiping the 3D Eyewear with a soft cloth that is covered in dust or dirt may scratch the eyewear. Shake off any dust from the cloth before use.
- Do not use benzene, thinner, or wax on the 3D Eyewear, as doing so may cause the paint to peel off.
- Do not dunk the 3D Eyewear in liquid such as water when cleaning.
- Avoid storing the 3D Eyewear in hot or highly humid locations.
- As the liquid crystal shutters (lens) are fragile and easily broken, be very careful when cleaning them.

Part names and functions

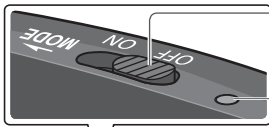


Power switch ON / OFF

- Slide the tab to the "ON" / "OFF" position to switch the power On / Off.


MODE

- Slide the tab to the "MODE" position to change the mode between 3D and 2D (view a 3D image in 2D).
- This is also used when registering the 3D Eyewear to the TV. For details ➔ **"Registration"** (see below)

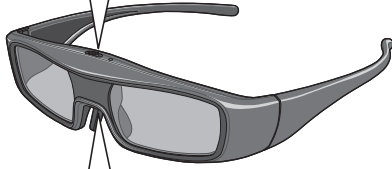

Indicator lamp

Lights or flashes during use to show the status.

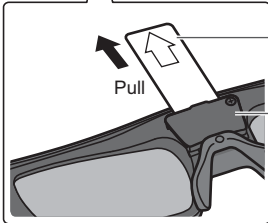

Insulating sheet

Battery cover

- When using for the first time, remove the insulating sheet. Pull the insulating sheet.
- To replace the battery ➔ **"Replacing the battery"** (p. 35)

■ Indicator lamp status

Indicator lamp	Status
Lights red for 2 seconds when turned on	Sufficient battery level
Flashes 5 times when turned on	Low battery level
Flashes red and green alternately	Under registering
Flashes green once every 2 seconds	Under reconnecting to the TV
Lights green for 3 seconds	Registering or reconnecting is successfully completed.
Flashes red 3 times	Automatically power off (Registering or connecting fails or connection is lost)
Flashes red once every 2 seconds when in use	3D mode is selected
Flashes red twice every 4 seconds when in use	2D mode is selected

Registration

First registration

Perform the first registration when the 3D Eyewear is used for the first time.

1

Turn the TV on

2

Slide the power switch from "OFF" to "ON"

The 3D Eyewear will be turned on and start registration.
Place the 3D Eyewear within 50 cm from the TV while registration in progress.

3

The green LED lights on the 3D Eyewear for 3 seconds when the registration is successfully completed

After first registration, the 3D Eyewear will reconnect with TV automatically when 3D Eyewear is turned on near the TV in 3D mode.

■ Registration again

When connection with registered TV fails, or when using with another TV, re-register the 3D Eyewear.

1 Turn the TV on

2 Within 50 cm from the TV, hold the power switch on the “MODE” position for more than 2 seconds

- Release the power switch when registration starts.

3 The green LED lights for 3 seconds when the registration is successfully completed

Note

- If the registration failed, the 3D Eyewear will be turned off. In this case, turn off the TV and perform from step 1.

Replacing the battery



When the battery is running low, the indicator lamp flashes 5 times on turning the 3D Eyewear on.

In this case, early battery replacement is recommended.

- Dispose of the old batteries as non-burnable rubbish, or in line with the waste disposal regulations in your local area.

1 Loosen the screw and remove the cover using with a precision Phillips (No.0, plus +) screwdriver



- The screw is not removed from the cover.

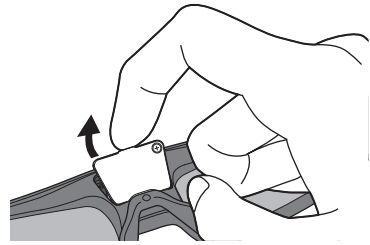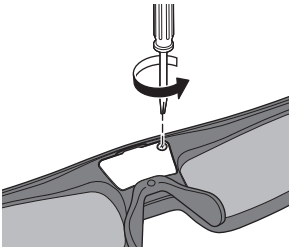

2 Replace the battery



- If difficulty, remove it with the tip of the driver.

- Use the specified type of battery (coin-shaped lithium battery CR2025).
- Note the correct polarity (+ or -).

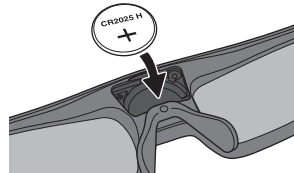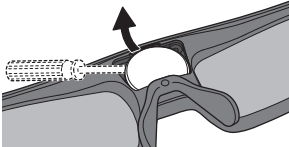

3 Replace and fasten the cover

- ① Push the cover firmly until it clicks.
- ② Tighten the screw.

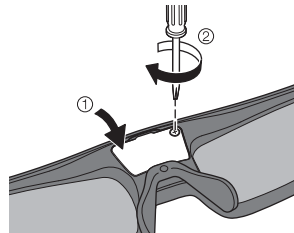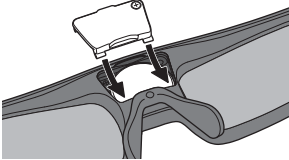

To view the 3D images

You can enjoy the 3D images in a variety of ways.
(Frame Sequential, Side by Side and Top and Bottom are the supported 3D format.)

■ Playing back 3D-compatible Blu-ray disc (Frame Sequential format)

- Connect the 3D-compatible player via a fully wired HDMI compliant cable.
- If input mode is not switched automatically, select the input mode connected to the player. (p. 30)
- If you use the non 3D-compatible player, the images will be displayed on 2D mode.

■ 3D-supported broadcast

- Please consult the suppliers of contents or programmes for availability of this service.

■ 3D photos and 3D videos taken by 3D-compatible Panasonic products

- Available in Media Player (p. 74) and Network services (p. 92)

■ 2D images converted to 3D

- Set to [2D→3D] mode in [3D Mode Selection]. (p. 37)

Preparations

Perform the First Registration when the 3D Eyewear is used for the first time. ➔ **“Registration”** (p. 34)

1 Turn the 3D Eyewear on and put it on

- Connection status and battery status are displayed on the bottom right of the screen.

2 View the 3D images

- Safety precautions will be displayed when you first watch the 3D image. Select [Yes] or [No] to continue to view 3D images.
If you select [Yes], this message will be displayed again in the same condition after Mains power On / Off switch is next turned on. Select [No] if you do not want to display this message again.
- Turn off the 3D Eyewear after using it.

Note

- The 3D image or 3D effect may not be available in the following conditions:
 - Multi window (p. 66) is active.
 - VIERA Connect home screen (p. 20) is displayed.
 - [Ext Rec.] or [LT1] / [LT2] of Timer Programming (p. 58) is in progress.
 - [LT1] / [LT2] of One Touch Recording (p. 72) is in progress.
 - Direct TV Recording (p. 98, 100) is in progress.

As for the contents of the Frame Sequential format and Side by Side (Full), no images will be displayed in these conditions.

- If light appears to flicker under fluorescents or dimmers when using the 3D Eyewear, change the setting of [3D Refresh Rate]. (p. 42)
- 3D content will not be correctly visible if the 3D Eyewear is worn upside down or back-to-front.
- Do not wear the 3D Eyewear when watching anything other than 3D images. Liquid crystal displays (such as computer screens, digital clocks or calculators, etc.) may be difficult to see while wearing the 3D Eyewear.
- Do not use the 3D Eyewear as sunglasses.
- 3D effects may be perceived differently depending on the person.



Changing 2D - 3D mode

You can easily change the viewing mode between 2D and 3D using the 3D button.

- This function is not available in PC mode.



  Select the mode



- Items of [3D Mode Selection] vary depending on the condition.

[3D] / [2D] / [2D→3D]:

Displays the appropriate image that you desire without selecting 3D format.

- This mode may not work properly depending on the source image format. In this case, select the appropriate 3D format manually.

■ To change 3D format manually


When the image is not changed properly using [3D], [2D] or [2D→3D] mode, use this manual setting.

During the above operation



Select the mode

3D Mode Selection (Manual)	
Original	<input type="checkbox"/>
Frame Sequential - 3D	<input type="checkbox"/>
Frame Sequential - 2D	<input type="checkbox"/>
Side by Side - 3D	<input type="checkbox"/>
Side by Side - 2D	<input type="checkbox"/>
Top and Bottom - 3D	<input type="checkbox"/>
Top and Bottom - 2D	<input type="checkbox"/>
2D→3D	<input type="checkbox"/>

 

[Original]:

Displays the source image as it is.

- Use to identify the format type of the source image.

➔ “Table of images that can be seen for each [3D Mode Selection (Manual)] and the source image format” (see below)

[Frame Sequential - 3D] / [Frame Sequential - 2D] / [Side by Side - 3D] / [Side by Side - 2D] / [Top and Bottom - 3D] / [Top and Bottom - 2D]:

Displays the mode you select.

- Not valid on Analogue and AV mode

[2D→3D]:

Converts 2D images into 3D.

- Please note the 3D images appear slightly different from the originals.
- Using this function for profit-making purposes, or publically showing images converted from 2D to 3D in places such as shops or hotels etc. may infringe on the rights of the copyright holder protected under copyright law.

Table of images that can be seen for each [3D Mode Selection (Manual)] and the source image format

If the picture appears to be abnormal, refer to the table below to choose the correct 3D mode.

[3D Mode Selection] Source image format	[Original]	[Frame Sequential - 3D]	[Side by Side - 3D]	[Top and Bottom - 3D]	[2D→3D]
Frame Sequential		 Normal 3D*1			
Side by Side (Full)			 Normal 3D*1		
Side by Side			 Normal 3D*1		
Top and Bottom				 Normal 3D*1	
Normal format (2D)					 Normal 3D

*1: When selecting [Frame Sequential - 2D], [Side by Side - 2D] or [Top and Bottom - 2D], the images will be displayed without 3D effect.

- Depending on the player or broadcasts, the image may be different from the above illustrations.

3D Settings

If the 3D images are not displayed correctly or seem unusual, adjust and setup the 3D settings.




1 Display the menu




2 Select [Picture]



3 Select [3D Settings]

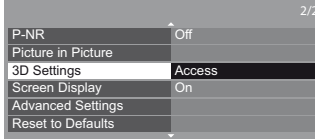

4 Select one of the following functions and set

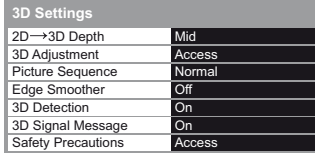

■ To return to TV

EXIT



Item	Adjustments / Configurations (alternatives)
2D→3D Depth	Selects a level of 3D-image depth for viewing converted 2D images [Min] / [Mid] / [Max]
3D Adjustment	Adjustment of the 3D effect (except in [2D→3D] mode) [Off] / [On] <ul style="list-style-type: none"> Set to [On] to enable [Effect] setting. When setting to [On], a safety precaution message will appear. Read it carefully and press the BACK/RETURN button to go to [Effect] setting. [Effect]: Adjusts the 3D depth according to the contents or to your preference.
Picture Sequence	Select [Reverse] if you feel that the sense of depth is unusual (except in [2D→3D] mode) [Normal] / [Reverse]
Edge Smoother	Set to [On] if you feel the contoured parts of an image are not smooth enough (except in [2D→3D] mode) [Off] / [On]
3D Detection	Automatically detects the 3D format signals [Off] / [On] / [On (Advance)] <ul style="list-style-type: none"> [On (Advance)]: Detects all the 3D format signals and displays the 3D image automatically. [On]: Detects the particular 3D format signals (Frame Sequential, etc.) and displays the 3D image automatically. To view 3D images without any notifications and operations, set to [On (Advance)].
3D Signal Message	Selects whether to give a notification message when a signal of 3D format is found [Off] / [On] <ul style="list-style-type: none"> For DVB, Component and HDMI input This function is not available when [3D Detection] is set to [On (Advance)].
Safety Precautions	Displays the precautions for viewing 3D images

Note

- [3D Adjustment] and [Picture Sequence] will not be memorised when changing the input mode or channel.

How to Use VIERA TOOLS


You can access some special features easily by using the VIERA TOOLS function.



1 Display icons of the feature



 2 Select a feature



■ To return to TV



■ Follow the operations of each feature



[VIERA Link]
➔ (p. 100 - 103)



[Music]*
➔ (p. 84)



[Photo]*
➔ (p. 76)



[VIERA Connect]
➔ (p. 20, 86)



[Video]*
➔ (p. 80)



[Media Server]*
➔ (p. 92)



[Recorded TV]*
➔ (p. 81)

*When two or more available devices are connected, a selection screen will be displayed.
Please select the correct description and access.

Note

- If the selected feature is not available, the demonstration to explain how to use it can be displayed. Press the OK button to view the demonstration after selecting the unavailable feature.

How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions.

How to Use Menu Functions



1 Display the menu




• Displays the functions that can be set (varies according to the input signal).

2 Select the menu



3 Select the item

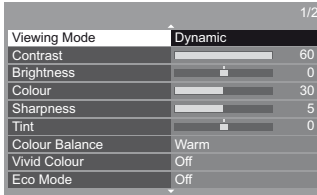


■ To return to TV at any time




■ To return to the previous screen



 
■ To change menu pages




■ Choose from among alternatives

 

■ Adjust using the slide bar

 

■ Go to the next screen

 

■ Enter characters by free input menu

You can enter names or numbers freely for some items.



Set characters one by one



• You can set characters by using numeric buttons. ➔ “Characters table for numeric buttons” (p. 114)

■ To reset the settings

- Picture or sound settings only ➔ [Reset to Defaults] in the Picture Menu (p. 43) or Sound Menu (p. 45)
- To initialise all settings ➔ [Shipping Condition] (p. 48)

Menu list

Menu	Item	Adjustments / Configurations (alternatives)
Picture	Viewing Mode	<p>Selects your favourite picture mode for each input [Dynamic] / [Normal] / [Cinema] / [True Cinema] / [Game] / [Professional1] / [Professional2]</p> <p>[Dynamic]: Improves contrast and sharpness for viewing in a bright room.</p> <p>[Normal]: Normal use for viewing in a normal lighting condition.</p> <p>[Cinema]: Improves the performance of contrast, black and colour reproduction for watching movies in a darkened room.</p> <p>[True Cinema]: Reproduces the original image quality precisely without any revision.</p> <p>[Game]: Provides suitable images for fast response signal when playing games.</p> <ul style="list-style-type: none"> • Not valid on TV mode • To display a continuous record of time spent using Game mode ➔ [Playing Time Display] (p. 48) <p>[Professional1 / 2]: Allows you to set the professional picture settings in [Advanced Settings], [Lock Settings] and [Copy Adjustment]. ➔ (p. 68)</p> <ul style="list-style-type: none"> • This mode is available only when [Advance(isfcc)] in the Setup Menu is set to [On]. • If the certified professional dealer sets these modes, [Professional1] and [Professional2] may be displayed as [isf Day] and [isf Night]. <p>In each Viewing Mode, [Contrast], [Brightness], [Colour], [Sharpness], [Tint], [Colour Balance], [Vivid Colour], [Eco Mode], [P-NR] and [3D-COMB] can be adjusted and stored for each input. Additionally, you can adjust and setup the detailed settings when [Advance(isfcc)] in the Setup Menu is set to [On]. ➔ (p. 48)</p> <ul style="list-style-type: none"> • You can set [Viewing Mode] in 2D and 3D mode for each.
	Contrast, Brightness, Colour, Sharpness	Adjusts the levels of these options according to your personal preference
	Tint	Adjusts the picture hue to suit your taste <ul style="list-style-type: none"> • For NTSC signal reception
	Colour Balance	Sets the overall colour tone of the picture [Cool] / [Normal] / [Warm] <ul style="list-style-type: none"> • Not valid when [Viewing Mode] is set to [True Cinema], [Professional1] or [Professional2]
	Vivid Colour	Automatically adjusts colours to vivid ones [Off] / [On] <ul style="list-style-type: none"> • Not valid on PC mode • Not valid when [Viewing Mode] is set to [Professional1] or [Professional2]
	Eco Mode	Automatic Brightness Control function Adjusts picture settings automatically depending on ambient lighting conditions [Off] / [On]
	P-NR	Picture Noise Reduction Reduces unwanted picture noise and flicker noise in the contoured parts of a picture [Off] / [Min] / [Mid] / [Max] / [Auto] <ul style="list-style-type: none"> • Not valid on PC mode / when [Viewing Mode] is set to [Game] or [1080p Pure Direct] is set to [On]
	3D-COMB	Makes still or slow moving pictures more vivid [Off] / [On] <ul style="list-style-type: none"> • Occasionally, while viewing still or slow moving pictures, colour patterning may be seen. Set to [On] to display sharper and more accurate colours. • For PAL / NTSC signal reception in TV mode or from composite (except 3D mode)

Menu	Item	Adjustments / Configurations (alternatives)	
Picture	Picture in Picture	Displays two windows at once (p. 66)	
	3D Settings	Adjusts and sets to view 3D images (p. 38)	
	Screen Display	Turns the screen off when you select [Off] [Off] / [On] <ul style="list-style-type: none"> • The sound is active even if the screen turns off. • Press any buttons (except Standby) to turn the screen on. • This function is effective in reducing power consumption when listening to the sound without watching the TV screen. 	
	Area Dimmer Control	Automatically controls dark areas according to the images [Off] / [On] <ul style="list-style-type: none"> • If the uncomfortable dark images occur, set to [Off]. • This function is available when [Viewing Mode] is set to [Dynamic], [Normal] or [Cinema]. (except multi window mode) 	
	Advanced Settings	1080p Pure Direct	Reproduces the original image quality in detail for 1080p (HDMI) input signal [Off] / [On] <ul style="list-style-type: none"> • Not valid on 3D or multi window mode
		Intelligent Frame Creation	Automatically compensates the picture frame rate and removes juddering movements to make the images smooth [Off] / [Min] / [Mid] / [Max] <ul style="list-style-type: none"> • Depending on the contents, images may be noisy. To prevent the noise, change the setting. • Not valid on PC mode or when [Viewing Mode] is set to [Game]
		24p Smooth Film	Automatically compensates the picture frame rate to make the 24p source movie images smooth [Off] / [Min] / [Mid] / [Max] <ul style="list-style-type: none"> • This is available only for 24p signal input and displayed instead of [Intelligent Frame Creation]. • Not valid on PC mode or when [Viewing Mode] is set to [Game]
		Film Cadence Detection	Improves vertical resolution for movie images [Off] / [On] <ul style="list-style-type: none"> • This function is available for the interlaced signal (except in the mode of PC, multi window, VIERA Connect or when [Viewing Mode] is set to [Game]).
		3D Refresh Rate	Reduces juddering and flicker noises of the 3D images when using the 3D Eyewear [Auto] / [100Hz] / [120Hz] [100Hz]: If light appears to flicker under fluorescents (or dimmers) of 50 Hz. [120Hz]: If light appears to flicker under fluorescents (or dimmers) of 60 Hz. If flicker noises appear with 50 Hz input signal.
		16:9 Overscan	Selects the screen area displaying the image [Off] / [On] [On]: Enlarges the image to hide the edge of the image. [Off]: Displays the image in the original size. <ul style="list-style-type: none"> • Set to [On] if noise is generated on the edge of the screen. • This function is available when aspect is set to [Auto] (16:9 signal only) or [16:9]. • This function can be memorised separately for SD (Standard definition) and HD (High definition) signals. • Not valid on PC mode or VIERA Connect
AV Colour System	Selects optional colour system based on video signals in AV mode [Auto] / [PAL] / [SECAM] / [M.NTSC] / [NTSC]		

Menu	Item	Adjustments / Configurations (alternatives)
Picture	Advanced Settings DVI Input Setting	<p>Changes the black level of the image for HDMI input mode with DVI input signal manually [Normal] / [Full]</p> <ul style="list-style-type: none"> When the DVI input signal from the external equipment (especially from PC) is displayed, the black level may not be suitable. In this case, select [Full]. The black level for HDMI input signal will be adjusted automatically. For HDMI input mode with DVI input signal
	Reset to Defaults	Press the OK button to reset the current Picture Viewing Mode of the selected input to the default settings
Sound	Mode	<p>Selects your favourite sound mode [Music] / [Speech] / [User]</p> <ul style="list-style-type: none"> The selected mode affects all input signals. <p>[Music]: Improves sound quality for watching music videos, etc.</p> <p>[Speech]: Improves sound quality for watching news, drama, etc.</p> <ul style="list-style-type: none"> In Music and Speech modes, you can adjust [Bass] and [Treble] settings, and those settings will be stored for each mode. <p>[User]: Adjusts the sounds manually by using the equaliser to suit your favourite sound quality.</p> <ul style="list-style-type: none"> For the User mode, [Equaliser] will appear on the Sound Menu instead of [Bass] and [Treble]. Select [Equaliser] and adjust the frequency. ➔ [Equaliser] (see below)
	Bass	Adjusts level to enhance or minimise lower, deeper sound output
	Treble	Adjusts level to enhance or minimise sharper, higher sound output
	Equaliser	<p>Adjusts the frequency level to suit your favourite sound quality</p> <ul style="list-style-type: none"> This function is available when [Mode] is set to [User]. Select the frequency and change the frequency level by using the cursor button. To enhance the bass sound, raise the level of the lower frequency. To enhance the treble sound, raise the level of the higher frequency. To reset the levels of each frequency to the default settings, select [Reset to Defaults] by using the cursor button, and then press the OK button.
	Balance	Adjusts volume level of right and left speakers
	Headphone Volume	Adjusts the volume of the headphones
	Surround	<p>Surround sound settings [Off] / [V-Audio] / [V-Audio Surround] / [V-Audio ProSurround]</p> <p>[V-Audio]: Provides a dynamic enhancer of width to simulate improved spatial effects.</p> <p>[V-Audio Surround]: Provides a dynamic enhancer of width and depth to simulate improved spatial effects.</p> <p>[V-Audio ProSurround]: Provides a more progressive enhancer and reverberation to simulate improved spatial effects.</p> <ul style="list-style-type: none"> Switching is also possible by the SURROUND button on the remote control (p. 10).

Menu	Item	Adjustments / Configurations (alternatives)
	Auto Gain Control	Automatically regulates large sound level differences between channels and inputs [Off] / [On]
	Volume Correction	Adjusts the volume of individual channel or input mode
	Speaker Distance to Wall	Compensates for the low frequency sound due to the distance between the speakers and the wall [Over 30cm] / [Up to 30cm] <ul style="list-style-type: none"> • If the back space between the TV and wall is over 30 cm, [Over 30cm] is recommended. • If the back space between the TV and wall is within 30 cm, [Up to 30cm] is recommended.
	MPX	Selects multiplex sound mode (if available) [Stereo]: Use this normally. [Mono]: When stereo signal cannot be received. [M1] / [M2]: Available while mono signal is transmitted. <ul style="list-style-type: none"> • For Analogue mode
	Audio Preference	Selects the initial setting for audio tracks [Auto] / [Multichannel] / [Stereo] / [MPEG] <ul style="list-style-type: none"> • Selectable options vary depending on the country you select. [Auto]: Automatically selects the audio tracks if programme has more than two tracks. The priority is given in the following order - Dolby Digital Plus, HE-AAC, Dolby Digital, MPEG. [Multichannel]: The priority is given to multi-channel audio track. [Stereo]: The priority is given to stereo (2ch) audio track. [MPEG]: The priority is given to MPEG. <ul style="list-style-type: none"> • Dolby Digital Plus and Dolby Digital are the methods of coding digital signals developed by Dolby Laboratories. Apart from stereo (2ch) audio, these signals can be multi-channel audio. • HE-AAC is a perceptual coding method used to compress digital audio for efficient storage and transmission. • MPEG is an audio compression method that compresses audio to the smaller size without any considerable loss of audio quality. • Dolby Digital Plus and HE-AAC are the technologies for HD (High definition) programmes. • For DVB mode
	Audio Type	Narration settings for visually impaired users (only available in some countries) [Standard] / [Visual Impaired] <ul style="list-style-type: none"> • Set to [Visual Impaired] to activate the narration sound track when available on the broadcast. • For DVB mode
	SPDIF Selection	SPDIF: A standard audio transfer file format Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals [Auto] / [PCM] [Auto]: Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. [PCM]: Digital output signal is fixed to PCM. <ul style="list-style-type: none"> • For DVB mode or video contents of Media Player / Network services (p. 83, 95) • ARC (Audio Return Channel): A function of digital audio output using HDMI cable
	HDMI1 / 2 / 3 / 4 Input	Selects to fit the input signal [Digital] / [Analogue] (p. 112) [Digital]: When sound is carried via the HDMI cable connection [Analogue]: When sound is not carried via the HDMI-DVI adaptor cable connection <ul style="list-style-type: none"> • For HDMI input

Menu	Item	Adjustments / Configurations (alternatives)	
Sound	SPDIF Delay	Adjusts the delay time of the sound output from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals if the sound does not synchronise the image <ul style="list-style-type: none"> • For DVB mode 	
	Reset to Defaults	Press the OK button to reset the current Sound Mode, [Balance], [Headphone Volume] and [Surround] to the default settings	
Network	Connection Test, Network Connection, Wireless Network Settings, IP/DNS Settings	Sets the network setting to use in your network environment (p. 89, 90)	
	Network Link Settings	Sets to control the TV with the devices connected to the network (p. 88)	
	Software Update	Checks for available software updates from the Panasonic website	
	New Software Message	Selects whether to give a notification message when new software is found via network [Off] / [On]	
	Network Status	Displays the network status (MAC Address, current network settings, etc.)	
Timer	Timer Programming	Sets a timer to record or remind forthcoming programmes (p. 58) <ul style="list-style-type: none"> • For DVB mode 	
	Off Timer	Sets the duration of time until the TV automatically goes into Standby mode [Off] / [15] / [30] / [45] / [60] / [75] / [90] (minutes) (p. 23)	
	Auto Standby	Sets the duration of time that the TV will remain on when no operation is performed [Off] / [2] / [4] (hours) <ul style="list-style-type: none"> • Starting Timer Programming automatically does not affect this function. • Automatic input switching with the connected equipment affects this function and time-count will be reset. • The notification message will appear 3 minutes before going into Standby mode. 	
Setup	Eco Navigation	Automatically sets the TV to the most suitable energy-saving mode <ul style="list-style-type: none"> • If you press the OK button, the following items are set as below: [Eco Mode], [VIERA Link], [Power off Link], [Standby Power Save], [Power Save] ➔ [On] [Intelligent Auto Standby] ➔ [On (No reminder)] [Auto Standby] ➔ [2 hours] [Front Logo LED] ➔ [Off] 	
	Recording Setup	Settings for the recording feature of the USB HDD / SD Card (p. 71)	
	Bluetooth Setup	Settings for the specific devices supporting Bluetooth wireless technology (p. 113)	
	VIERA Touch Pad Controller	Pairing	Registers the VIERA Touch Pad Controller (supplied) to this TV <ul style="list-style-type: none"> • Only 1 touch pad controller can be registered.
		Cursor Settings	Sets for the cursor of the touch pad controller

Menu	Item	Adjustments / Configurations (alternatives)
Link Settings	VIERA Link	Sets to use VIERA Link functions [Off] / [On] (p. 99)
	HDMI Content Type	Automatically adjusts the picture settings according to the received HDMI content via HDMI cable [Off] / [Auto] <ul style="list-style-type: none"> • This function is available if the connected equipment supports HDMI Content Type. • The content type information will be displayed for several seconds when this function works.
	AV1 out	Chooses the signal to be transmitted from the TV to Q-Link [TV] / [AV2] / [Monitor] [Monitor]: Image displayed on screen <ul style="list-style-type: none"> • Component and HDMI signals cannot be output.
	Power on Link	Sets to use Power on Link function [Off] / [On] (p. 98, 99)
	Power off Link	Sets to use Power off Link function [Off] / [On] (p. 98, 99)
	Standby Power Save	Controls the connected equipment to reduce power consumption in Standby [Off] / [On] (p. 100) <ul style="list-style-type: none"> • This function is available when [VIERA Link] is set to [On] and [Power off Link] is set to [On].
	Intelligent Auto Standby	Makes non-watched or non-used connected equipment go into Standby mode to reduce the power consumption [Off] / [On (With reminder)] / [On (No reminder)] (p. 100) <ul style="list-style-type: none"> • This function is available when [VIERA Link] is set to [On].
	Download	Downloads channel, language and country / region settings to Q-Link or VIERA Link compatible equipment connected to the TV <ul style="list-style-type: none"> • DVB-S and DVB-C channel settings cannot be downloaded.
Child Lock		Applies access control for channels or inputs to prevent unwanted access (p. 61)
Tuning Menu*	Favourites Edit	Creates a list of favourite channels (p. 54) <ul style="list-style-type: none"> • Not valid on Analogue mode
	Channel List	Skips the unwanted channels or edits channels (p. 55)
	Auto Setup	Automatically searches for the receivable channels (p. 50 - 53)
	Manual Tuning	Searches for the channels manually (p. 56)
	Update Channel List	Updates the channel list while keeping your settings (p. 57) <ul style="list-style-type: none"> • For DVB mode
	Favourite Network	Selects your favourite network for each broadcasters (only available in some countries) <ul style="list-style-type: none"> • For DVB-C or DVB-T mode
New Channel Message	Selects whether to give a notification message when a new channel is found [Off] / [On] (p. 57) <ul style="list-style-type: none"> • For DVB mode 	

Menu	Item	Adjustments / Configurations (alternatives)
Setup	Tuning Menu*	Service Replacement Set to [On] to enable a message to switch to the available service (only available in some countries) [Off] / [On] • For DVB-C mode
		Signal Condition Checks the signal condition (p. 57) • Not valid on Analogue mode
		Antenna System Sets the antenna system to use plural LNBs for receiving several satellites [One LNB] / [MiniDiSEqC] / [DiSEqC 1.0] / [Single Cable] (p. 50) • This TV supports DiSEqC Version 1.0. • For DVB-S mode
		LNB Configuration Selects the satellite for each LNB (p. 50) • For DVB-S mode
		Attenuator Automatically reduces the DVB-C signal to avoid the interference [Off] / [On] • If the DVB-C signal is too strong, the interference may occur. In this case set to [On] to reduce the signal automatically.
		Add TV Signal Adds the TV mode • This function is available if you skip any modes to tune in [Auto Setup] for first using the TV. • To operate, refer to the "Auto Setup" operations for first using the TV (p. 16).
	Language	OSD Language Changes language for on-screen displays
		Preferred Audio 1 / 2 Selects the first and second preferred language for DVB multi audio (depending on the broadcaster)
		Preferred Subtitles 1 / 2 Selects the first and second preferred language for DVB subtitles (depending on the broadcaster) • To display subtitles ➔ (p. 22)
		Preferred Teletext Selects the preferred language for DVB teletext service (depending on the broadcaster)
	Display Settings	Preferred Subtitle Type Selects the preferred subtitle type [Standard] / [Hard of Hearing] • [Hard of Hearing] provides aids in understanding and enjoyment with DVB subtitles (depending on the broadcaster). • [Preferred Subtitles 1 / 2] in [Language] are given priority.
		Teletext Teletext display mode [TOP (FLOF)] / [List] (p. 28)
Teletext Character Set Selects teletext language font [West] / [East1] / [East2] [West] : English, French, German, Greek, Italian, Spanish, Swedish, Turkish, etc. [East1] : Czech, English, Estonian, Lettish, Rumanian, Russian, Ukrainian, etc. [East2] : Czech, Hungarian, Lettish, Polish, Rumanian, etc.		
Default Guide Selects the default TV Guide type when the GUIDE button is pressed (only available in some countries) [Channel List] / [TV Guide] [TV Guide] : Electronic Programme Guide (EPG) is available. • To use EPG ➔ (p. 25) [Channel List] : The channel list will appear instead of EPG.		

Menu	Item	Adjustments / Configurations (alternatives)
Display Settings	Input Labels	<p>Accesses the input labels list to select the label of each input mode or set to skip unconnected one for easier identification and selection in [TV Selection] (p. 21), [Input Selection] (p. 30) or banner</p> <ul style="list-style-type: none"> • To name each input mode freely, select [User input] and set characters (maximum 10 characters). • To skip the input mode, select [Skip].
	Banner Display Timeout	<p>Sets how long the Information banner stays on screen [0 (No display)] / [1] / [2] / [3] / [4] / [5] / [6] / [7] / [8] / [9] / [10] (seconds)</p>
	VIERA Connect Banner	<p>Sets the VIERA Connect introduction banner display [Off] / [On] (p. 20, 21)</p>
	Playing Time Display	<p>Set to [On] to display a continuous record of time spent using Game mode in the top right of the screen every 30 minutes [Off] / [On]</p> <ul style="list-style-type: none"> • This function is available when [Viewing Mode] is set to [Game]. ➔ (p. 41)
	Data Service Application	<p>Sets to use Hybrid Broadcast Broadband TV application (depending on the selected country and broadcaster) [Off] / [Auto Start Off] / [Auto Start On] (p. 62)</p> <ul style="list-style-type: none"> • For DVB mode
	Radio Mode	<p>Sets the timer for turning off the screen automatically when a radio channel is selected [Off] / [5] / [10] / [15] / [20] (seconds)</p> <ul style="list-style-type: none"> • The sound is active even if the screen turns off. This function is effective in reducing power consumption when listening to a radio channel. • Press any buttons except Standby, Volume Up / Down and MUTE buttons to turn the screen on. • Not valid on Analogue mode
	Channel Transition Effect	<p>Enables the transition effect when changing channels [Off] / [On]</p>
System Menu	Common Interface	<p>Sets to watch encrypted channels, etc. (p. 63)</p>
	DivX® VOD	<p>Displays DivX VOD registration code (p. 110)</p>
	Advance(isfcc)	<p>Enables the advanced picture settings [Off] / [On]</p> <ul style="list-style-type: none"> • Set to [On] to display the advanced items in the Picture Menu - [Advanced Settings], [Lock Settings] and [Copy Adjustment]. [Copy Adjustment] will be displayed when [Viewing Mode] is set to [Professional1] or [Professional2]. (p. 68) • [isfcc] is the picture setting for the certified professional dealer. For details, consult your local dealer.
	Keyboard Layout	<p>Selects the language that your USB or Bluetooth Keyboard supports</p> <ul style="list-style-type: none"> • For the information of using Keyboard ➔ (p. 113)
	Shipping Condition	<p>Resets all settings to the original condition (p. 64)</p>
	System Update	<p>Downloads new software to this TV (p. 65)</p>

Menu	Item		Adjustments / Configurations (alternatives)
Setup	System Menu	Software Licence	Displays the software licence information
		System Information	Displays the system information of this TV
		Device Information	Displays the device information of this TV
	GUIDE Plus+ Settings	Update	Performs the update of the GUIDE Plus+ schedule and advertising information for the GUIDE Plus+ system (only available in some countries) (p. 26)
		Postcode	Sets your postcode to display advertisements in the GUIDE Plus+ system (only available in some countries) (p. 26)
		System Information	Displays the system information of the GUIDE Plus+ system (only available in some countries)
	Other Settings	Power on Preference	Automatically selects the input when the TV is turned on [TV] / [AV] <ul style="list-style-type: none"> Set to [TV] to view picture from TV tuner. Set to [AV] to view input from the external equipment connected to the AV1 or HDMI1 terminal, e.g. set top box. The external equipment must be switched on and sending a control signal for automatic switching at power on to occur.
		USB Charge in Standby	Enables to supply the power from the USB port in Standby mode [Off] / [On] <ul style="list-style-type: none"> Available for charging the rechargeable 3D Eyewear (optional) This function is available when in Standby mode.
		Power Save	Reduces brightness of the picture to economise on power consumption [Off] / [On]
		Front Logo LED	Lights the Panasonic logo on the TV front while the TV is on [Off] / [On]
		Time Zone	Adjusts the time data <ul style="list-style-type: none"> The time data will be corrected based on GMT.
Exchange Channel List		Exports / Imports DVB-S Channel List settings using the SD Card to share the same settings with VIERA which has the same function	

*The settings in [Tuning Menu] are applicable only for the selected TV mode. The menu name varies depending on the TV mode. ([DVB-S Tuning Menu] / [DVB-C Tuning Menu] / [DVB-T Tuning Menu] / [Analogue Tuning Menu])

- A different menu will be displayed when [Advance(isfcc)] in the Setup Menu is set to [On] or in the mode of PC input, Media Player or network service operations. (p. 67, 68, 75 - 84, 92 - 95)
- Only available items can be selected.

Retuning from Setup Menu

Automatically retune the channels received in the area.

- This function is available if channel tuning is already performed.
- Only the selected mode is retuned. All the previous tuning settings are erased.
- If Child Lock PIN number (p. 61) has been set, the PIN number is required.
- If tuning has not been done completely → **[Manual Tuning]** (p. 56)

DVB-S channels

1 Select DVB-S

→ (p. 21)



2 Display the menu and select [Setup]



① select

② access

 
3 Select [DVB-S Tuning Menu]



① select

② access

4 Set [Antenna System] and [LNB Configuration]



1 Select [Antenna System] and set

You can receive several satellites if you have DiSEqC control antenna system.



select

access / store

- This TV supports DiSEqC Version 1.0.

[One LNB]: Compatible with single LNB.

[MiniDiSEqC]: Up to 2 LNBs can be controlled.

[DiSEqC 1.0]: Up to 4 LNBs can be controlled.

[Single Cable]: When using the Single Cable router, up to 8 user bands are available.

2 Select [LNB Configuration]



① select

② access

4

3 Set [LNB] and [Satellite]

Set [LNB] first, then set [Satellite] for the selected LNB.

LNB Configuration	
Signal Quality	0/4
Signal Strength	0/4
LNB	AA
LNB Low Band Frequency	9750 MHz
LNB High Band Frequency	10600 MHz
Satellite	Astra 19.2° E
Test Transponder Frequency	10744 MHz



[LNB]:

- If you set to [One LNB], [LNB] is not selectable.
- If you set to [MiniDiSEqC] or [Single Cable], select from LNB AA and AB.
- If you set to [DiSEqC 1.0], select from LNB AA, AB, BA and BB.

[Satellite]:

- Select [No Satellite] if you do not know the connected satellite (available satellite will be searched in Auto Setup).
- Select [User defined] to set [Test Transponder Frequency] manually.
- If you set to [Single Cable], additional settings are required. Set [User Band], [User Band Frequency] and [PIN] (depending on the Single Cable router you use).
For details, read the manual of the Single Cable router.

4 Store

BACK/
RETURN




■ Selectable satellites and dish alignment to tune DVB-S channels:

- | | | |
|--|---|--|
| <ul style="list-style-type: none"> • Intelsat at 85.2° East • ABS 1 at 75° East • Express at 53° East • Intelsat at 45° East • Turksat at 42° East • Express at 40° East • Hellas at 39° East • Eutelsat at 36° East • Eurobird at 33° East • Astra at 28.2° East • Arabsat at 26° East • Eurobird at 25.5° East | <ul style="list-style-type: none"> • Astra at 23.5° East • Eutelsat at 21.5° East • Astra at 19.2° East • Eutelsat at 16° East • Hot Bird at 13° East • Eutelsat at 10° East • Eurobird at 9° East • Eutelsat at 7° East • Astra at 4.8° East • Thor at 0.8° West / Intelsat at 1° West | <ul style="list-style-type: none"> • Amos at 4° West • Atl. Bird at 5° West • Atl. Bird at 7° West • Atl. Bird at 8° West • Atl. Bird at 12.5° West • Telstar at 15° West • NSS at 22° West • Intelsat at 24.5° West • Hispasat at 30° West |
|--|---|--|
- To ensure your satellite dish is correctly installed, please consult your local dealer.
 - Also please consult the received satellite broadcasting companies for details.

5

Select [Auto Setup]


DVB-S Tuning Menu	
...	
Auto Setup	Access
...	

 

6

Set the satellite, search mode and scan mode

DVB-S Auto Setup Settings	
Satellite	Astra 19.2° E
Search Mode	Free Channels
Scan Mode	Quick
Start scan	

 

[Full]: Scans the whole frequency range.

[Quick]: Scans the suitable frequency for the selected satellite.

- After settings, select [Start scan].

7

Start Auto Setup (Settings are made automatically)

DVB-S Auto Setup	
All DVB-S tuning data will be erased	



DVB-S Auto Setup			
Satellite	Astra 19.2° E		
Progress	0% 100%		
This will take about 20 minutes.			
No.	Channel Name	Type	Quality
1	CBBC Channel	Free TV	100
2	BBC Radio Wales	Free TV	100
3	E4	Free TV	100
Free TV: 3 Pay TV: 0 Radio: 0			
Searching			

When the operation is completed, the channel at the lowest position will be displayed.

1 Select DVB-C, DVB-T or Analogue

→ (p. 21)




2 Display the menu and select [Setup]



① select
② access

3 Select [DVB-C Tuning Menu], [DVB-T Tuning Menu] or [Analogue Tuning Menu]

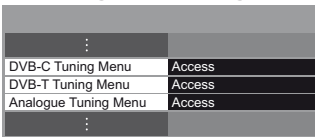


① select
② access

4 Select [Auto Setup]



① select
② access

5 Set the Auto Setup settings (DVB-C)

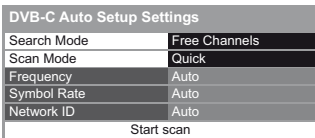

select
access / store


 


• After settings, select [Start scan].

- [Scan Mode]
[Full]: Scans the whole frequency range.
[Quick]: Scans the suitable frequency in your country.
- Normally set [Frequency], [Symbol Rate] and [Network ID] to [Auto].
 If [Auto] is not displayed or if necessary, enter the value specified by your cable provider with numeric buttons.

6 Start Auto Setup (Settings are made automatically)

DVB-C:

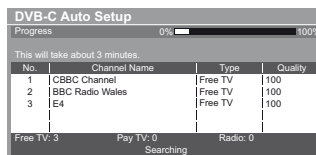

6

DVB-T:

DVB-T Auto Setup

All DVB-T tuning data will be erased



DVB-T Auto Setup

Progress CH 5 69

This will take about 3 minutes.

CH	Channel Name	Type	Quality
62	CBBC Channel	Free TV	100
62	BBC Radio Wales	Free TV	100
62	E4	Free TV	100
62	Cartoon Nwk	Free TV	100

Free TV: 4 Pay TV: 0 Radio: 0

Searching

Analogue:

Analogue Auto Setup

All analogue tuning data will be erased



Analogue Auto Setup

Scan CH 2 #8 CC 1 #1

This will take about 3 minutes.

CH	Channel Name
CH 29	
CH 33	BBC1

Analogue: 2


Searching

- The channel, language and country / region settings are downloaded to Q-Link or VIERA Link compatible equipment connected to the TV.
- When the operation is completed, the channel at the lowest position will be displayed.**

Auto setup using the buttons on the TV

For Auto Setup, using the buttons on the TV (p. 12)

- 1 Press the F button repeatedly until [Auto Setup] appears
F
- 2 Access [Auto Setup]
TV
- 3 Set the search mode and scan mode (DVB-S, DVB-C)
 ↑ ↓ (select the item)
 TV (set)
 AV (store)
- 4 Start [Auto Setup]
TV

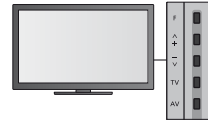

- To return to TV
F
- Control panel OSD appears when pressing the control panel button.

Tuning and Editing Channels

You can retune channels or make your favourite channel lists, skip unwanted channels, etc.

1 Select the mode

➔ (p. 21)



2 Display the menu and select [Setup]



① select

② access

3 Select [DVB-S Tuning Menu], [DVB-C Tuning Menu], [DVB-T Tuning Menu] or [Analogue Tuning Menu]

⋮	
DVB-S Tuning Menu	Access
DVB-C Tuning Menu	Access
DVB-T Tuning Menu	Access
Analogue Tuning Menu	Access
⋮	



① select

② access

• The displayed item depends on the selected mode.

4 Select one of the following functions

DVB-C Tuning Menu	
Favourites Edit	Access
Channel List	Access
Auto Setup	Access
Manual Tuning	Access
Update Channel List	Access
New Channel Message	On
Signal Condition	Access
Attenuator	Off



① select

② access


- The function items vary depending on the country you select (p. 16).
- [Auto Setup] ➔ **“Retuning from Setup Menu”** (p. 50 - 53)

List favourite DVB channels [Favourites Edit]

Create your favourite channel lists from various broadcasters (up to 4: [Favourites]1 to 4). The DVB Favourites lists are available from “Category” in the Information banner (p. 22) and the TV Guide screen (p. 25).

1 Select a channel to list : Encrypted channel

Example: DVB-C

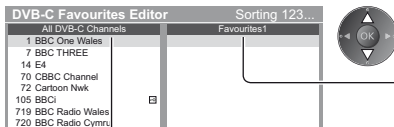

• To sort channel names in alphabetical order



• To display other Favourites



• To change the category



• To add continuous block of channels to the list at once




① make the block



② add

2 Add it to the Favourites list

Example: DVB-C

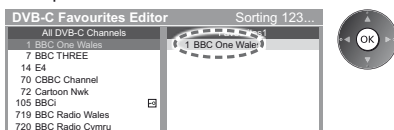

• To add all channels to the list

 


(green)

■ To edit Favourites list

While the cursor is in the Favourites field to edit

- To move the channel




- To delete the channel



- To delete all channels



- To name the Favourites

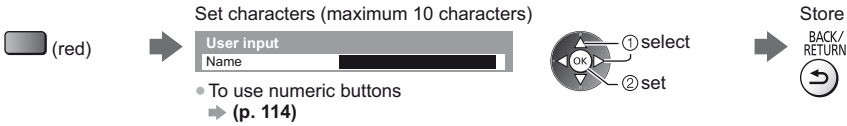

- To use numeric buttons
➔ (p. 114)

3 Store



Skip unwanted channels, Edit Channels [Channel List]


You can hide (skip) unwanted channels.

The hidden channels cannot be displayed except in this function.

Select a channel and reveal / hide

Example: DVB-C

All DVB-C Channels		Sorting 123...
<input checked="" type="checkbox"/>	70	CBBC Channel
<input checked="" type="checkbox"/>	72	Cartoon Nwk
<input checked="" type="checkbox"/>	105	BBC1
<input type="checkbox"/>	719	BBC Radio Wales
<input type="checkbox"/>	720	BBC Radio Cymru
<input type="checkbox"/>	1	BBC ONE Wales
<input checked="" type="checkbox"/>	7	BBC THREE

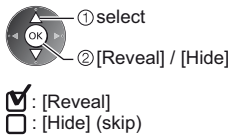

- To reveal all channels



- To sort channel names in alphabetical order (DVB)

 


- To change the category (DVB)



■ To edit channels

- To swap / move the channel position (if available)




Example: Analogue



- To retune each channel ([Manual Tuning] (p. 56)) (Analogue)



- To rename the channel name (Analogue)

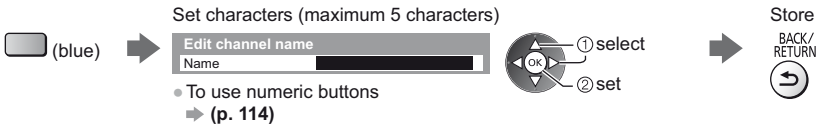

- To use numeric buttons
➔ (p. 114)

Note

- If a VCR is connected only with the RF cable in Analogue mode, edit [VCR].

Set DVB channel manually [Manual Tuning]

Normally use [Auto Setup] or [Update Channel List] to retune DVB channels.

If tuning has not been done completely or for adjusting the direction of the aerial or dish, use this function.

- All channels found will be added to the Channel List.

DVB-S:

1 Set the satellite

DVB-S Manual Tuning	
Signal Quality	100%
Signal Strength	100%
Satellite	Astra 19.2° E
Transponder Frequency	10347 MHz
Symbol Rate	Auto
Polarisation	Horizontal
Modulation	Auto
Service ID	Auto
Start scan	



- Please consult the received satellite broadcasting companies for the setting.

2 Set [Transponder Frequency], [Symbol Rate], [Polarisation], [Modulation] and [Service ID]

1	2	3
4	5	6
7	8	9
0		



3 Select [Start scan]




DVB-C:

1 Enter the frequency

DVB-C Manual Tuning			
Frequency	474.00 MHz		
Symbol Rate	Auto		
Service ID	Auto		
Start scan			
Signal Quality	100%		
Signal Strength	100%		
No.	Channel Name	Type	New

1	2	3
4	5	6
7	8	9
0		

 2 Select [Start scan]




- Normally set [Symbol Rate] and [Service ID] to [Auto].

DVB-T:

1 Adjust frequency for each channel

DVB-T Manual Tuning			
Frequency	[CH2] 474.00 MHz		
Signal Quality	100%		
Signal Strength	100%		
No.	Channel Name	Type	New

 

- Set where the level of [Signal Quality] becomes the maximum.

2 Search



Set Analogue channel manually [Manual Tuning]

[Fine Tuning]:

Use to make small adjustments to the tuning of an individual programme (affected by weather conditions, etc.).

[Manual Tuning]:

Set Analogue channel manually after Auto Setup.

- Set [Sound System] and [Colour System], and then perform this function. Normally set [Colour System] to [Auto].
- If a VCR is connected only with the RF cable, select channel position [0].

Analogue Manual Tuning	
1 BBC1	CH33
Fine Tuning	← →
Manual Tuning	2 78 41
Sound System	SC1
Colour System	Auto
Store	

SC1: PAL B, G, H / SECAM B, G
 SC2: PAL I
 SC3: PAL D, K / SECAM D, K
 F: SECAM L, L'

1 Select the channel position

1	2	3
4	5	6
7	8	9
0		

 
3 Search



2 Select the channel




4 Select [Store]



Update DVB channel automatically [Update Channel List]

 You can add new channels, delete removed channels, update channel name and position automatically to the channel list.



- The channel list is updated while keeping your settings in [Favourites Edit], [Channel List], [Child Lock], etc.
- Depending on the signal condition, the update may not work properly.

- To update DVB-S channels, set [Satellite], [Search Mode] and [Scan Mode] before updating.



select
access / store

- After settings, select [Start scan].

Display a notification message [New Channel Message] (DVB)

Selects whether to give a notification message when a new DVB channel is found.

New channels found!
Press OK to update channel list.
Press EXIT to ignore.

- Selecting OK will perform [Update Channel List].

Check DVB signal [Signal Condition]

Selects a channel and checks the DVB signal condition.

 
A good Signal Strength is not an indication of suitable signal for DVB reception. Use the Signal Quality indicator as follows.

- Green bar: Good
- Yellow bar: Poor
- Red bar: Bad (Check the Terrestrial aerial, cable or Satellite dish)

- To change the channel



Example:



These bars show the maximum signal value of the selected channel.

Timer Programming

Timer Programming from Menu

The Timer Programming menu allows you to choose programmes that you want to remind watching or record to the external recorder, the USB HDD or the SD Card. At the correct time, the TV will tune to the correct channel even if the TV is in Standby mode.

TV Guide may also be used to set timer programming event (p. 27).

• This function is not available in Analogue mode.

• Timer Programming can store up to 15 events.

• Timer Programming only works reliably if correct time information is received via the signal from the broadcaster or service provider.

• For recording using Timer Programming, the TV must be either on or in Standby. For reminders to be displayed, the TV must be on.

• No other channel can be selected while the recording of Timer Programming is in progress.

• Recording an encrypted (copy-protected) programme may not be possible.

• When recording programmes to the external recorder, be sure to make the proper settings on the recorder connected to the TV. If a recorder compatible with Q-Link, VIERA Link or similar technologies is connected to the TV (p. 98, 99) and [Link Settings] (p. 46) are completed, no setting of the recorder is required. Also read the manual of the recorder.

• If the recorder is not compatible with Q-Link, VIERA Link or similar technologies, make timer programming of the recorder. For preparations of a recorder, read the manual of the recorder.

• For more information of the USB HDD / SD Card Recording → (p. 70, 111)

• Recording to the external equipment via SCART is always in standard definition (composite video), even if the original programme is in high definition.

• 2 minutes before the starting time, a reminder message appears if you are watching TV.

• To remove the message and start the programming

• To cancel the programming



1 Select DVB-S, DVB-C or DVB-T

→ (p. 21)



2 Display the menu and select [Timer]



Timer



① select

② access

3 Select [Timer Programming]

Timer Programming	Access
Off Timer	Off
Auto Standby	Off



① select

② access

Set timer programming event details

1 Start making the settings



2 Select the function ([Ext Rec.], [USB HDD Rec.], [SD Card Rec.] or [Reminder])



[Ext Rec.] / [USB HDD Rec.] / [SD Card Rec.]:

Records the programme to the external recorder, the USB HDD or the SD Card. When the start time comes, the channel will be switched automatically and the video and audio signals will be output. 2 minutes before the starting time, a reminder message appears if you are watching TV. For [USB HDD Rec.] and [SD Card Rec.], you can select a recording mode:

[DR]: Direct recording (normal mode)

[LT1]: Long time recording

[LT2]: Extra long time recording

➔ "Recording time for the USB HDD / SD Card Recording" (p. 111)

[Reminder]:

Reminds you to watch the programme.

When you are watching TV, a reminder message appears 2 minutes before the start time.

Press the OK button to switch to the programmed channel.

3 Set the channel, date and time (repeat the operations as below)

Set items in the order of 1 to 4.



select the item



set

• 1, 3 and 4 can also be entered with numeric buttons.



! : Overlapped timer programming events

Function		No.	Channel Name	Date	Start	End
Reminder	D	7	BBC7 <TIMER>	Wed 26.10.2011	17:00	18:30 (90 min.)
Ext Rec.	D	1	BBC1 <TIMER>	STTL Wed 26.10.2011	18:00	20:00 (120 min.)
Ext Rec.	C	3	ITV1 <TIMER>	Thu 27.10.2011	21:30	22:30 (60 min.)
...	-	-	-	-	-	-

Records with subtitles (if available)
 • To indicate this (yellow)
 (Press again to remove subtitles)

Duration (automatic display)

[S]: DVB-S

[C]: DVB-C

[D]: DVB-T

• You cannot change the mode within the menu.

1 Channel number

2 Date



one day ahead

daily or weekly (press repeatedly)

• [Daily Sun-Sat]: Sunday to Saturday

• [Daily Mon-Sat]: Monday to Saturday

• [Daily Mon-Fri]: Monday to Friday

• [Weekly Sat/Fri/Thu/Wed/Tue/Mon/Sun]: Same time on the same day every week

3 Starting time

4 Ending time

4 Store



■ To edit a timer programming event

Select the event



- To change a timer programming event



➔ Correct as necessary (p. 59)

- To delete a timer programming event



(red)



- To record with subtitles (if available)



(yellow)

- Each time pressed:
auto ↔ off

- To cancel a timer programming event temporarily



(blue)

- Each time pressed:
cancel ↔ stop cancelling

■ To unlock the tuner and stop recording



Note

- Check that the LED is orange. If not, timer programming events are not active or not stored.
- Timer Programming reminder messages will remain displayed until one of the following occurs:
 - You press the OK button to view the programme or the EXIT button to cancel the reminder.
 - The timer programming event that the reminder is set for ends.
- "!" identifies that two or more timer programming events are overlapped. [Ext Rec.], [USB HDD Rec.] and [SD Card Rec.] are given priority over [Reminder]. As for the overlapped recording events, the first event starts and finishes as programmed. The next event can then start.
- The recording of Timer Programming will automatically change to the programmed channel a few seconds before the start time.
- To stop recording the timer programming event, it may be necessary to stop the recorder manually.
- The recording of Timer Programming will be performed even if the TV is in [REW LIVE TV] recording (p. 73) or [Pause Live TV] recording (p. 101). In this case, [REW LIVE TV] recording or [Pause Live TV] recording will be cancelled.

 
Child Lock

You can lock specific channels / AV input terminals and control who watches them. When the locked channel / input is selected, a message appears. Enter the PIN number to watch.

1 Display the menu and select [Setup]




2 Select [Child Lock]



Control channel audience [Child Lock]

 1 Enter the PIN number (4 digits)



- Enter the PIN number twice at first setting.
- Make a note of the PIN number in case you forget it.
- "0000" may be stored as the default PIN number which depends on the country you select (p. 16).

2 Select [Child Lock List]



3 Select the channel / input to be locked



Child Lock List - TV and AV				Sorting 123...
Name	Input	Type	Lock	
101 BBC1 Wales	DVB-C	Free TV	▲	
7 BBC THREE	DVB-T	Free TV	▲	
14 E4C	DVB-T	Free TV	▲	
VCR	Analogue	Analogue		
1 BBC1	Analogue	Analogue		
2 *****	Analogue	Analogue		
AV1	External	AV	▲	





▲ : Appears when the channel / input is locked

- To cancel
Select the locked channel / input



- To sort channel names in alphabetical order
 (red)
- To cancel all locks
 (yellow)

- To lock all
 (green)
- To jump to the top of the next input
 (blue)

■ To change the PIN number

1. Select [Change PIN]



2. Enter a new PIN number twice



■ To set Parental Rating

To watch the DVB programme that has the rating information over the selected age, enter the PIN number to watch (depending on the broadcaster).

Select [Parental Rating] and set an age for the restriction of programmes.



- The availability of this function depends on the country you select (p. 16).

Note

- Setting [Shipping Condition] (p. 64) erases the PIN number and all settings.

Using Data Service Application

You can enjoy Hybrid Broadcast Broadband TV application that is one of the interactive data services for digital broadcasting.

 
- To use Hybrid Broadcast Broadband TV application fully, you need a broadband network environment. Ensure the network connections and network settings are completed.
 - ➔ “Network connections” (p. 87), “Network Setup” (p. 88 - 91)
- Not all the data service are available depending on the country, area and broadcaster.
- Depending on the connection environment, the internet connection may be slow or may not be successful.

1 Select DVB-S, DVB-C or DVB-T

➔ (p. 21)



2 Display the menu and select [Setup]



① select

② access

 
3 Select [Display Settings]



① select

② access

4 Select [Data Service Application] and set to [Auto Start On]



① select

② access / set

Notification message will appear when the application is available. Follow the on-screen instructions.

Note

- Operations may vary depending on the broadcaster. Follow the on-screen instructions.
- On-screen instructions may not correspond to the remote control buttons.

■ To check the availability of the application



“D” is displayed if programme has Hybrid Broadcast Broadband TV application

■ To stop the application

EXIT



Using Common Interface

The Common Interface Module menu provides access to software contained on Common Interface (CI) Modules.


- This function may not be available in some countries or regions.
- Video and audio signals may not be output depending on broadcasts or services.
- Although CI module may enable you to view some services, this TV does not guarantee all services (e.g. encrypted pay-TV channels).

Please use only the approved CI module by the broadcaster.

Consult your local Panasonic dealer or broadcasters for more information and conditions of the services.

Caution

- Turn off Mains power On / Off switch whenever inserting or removing the CI module.
- If a view card and a card reader come as a set, first insert the card reader, then insert the view card into the card reader.
- Insert the module in the correct direction.
- Remove the CI module from the TV when placing the TV facing upward. This may cause damages to the CI module and CI slot.

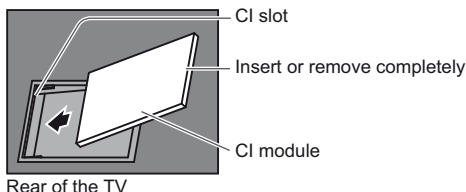

Insert the CI module (optional)

 
- The features that appear on screen are dependent on the contents of the selected CI module.
- Normally encrypted channels will appear. Follow the on-screen instructions.
If encrypted channel does not appear, perform below.
- For more details, read the manual of the CI module, or check with the broadcaster.

1 Select DVB-S, DVB-C or DVB-T

➔ (p. 21)



2 Display the menu and select [Setup]



3 Select [Common Interface]



4 Access Common Interface and follow the on-screen instructions



- On-screen instructions may not correspond to the remote control buttons.

Shipping Condition

Resets the TV to its original condition, i.e. no channels tuned in.

 
All settings other than [USB HDD Setup] are reset (channels, picture, sound settings, etc.).

- To retune TV channels only, e.g. after moving house ➔ **"Retuning from Setup Menu"** (p. 50 - 53)


1 Display the menu and select [Setup]



2 Select [System Menu]




3 Select [Shipping Condition]

 

Restore Settings [Shipping Condition]

1 Check the message and initialise

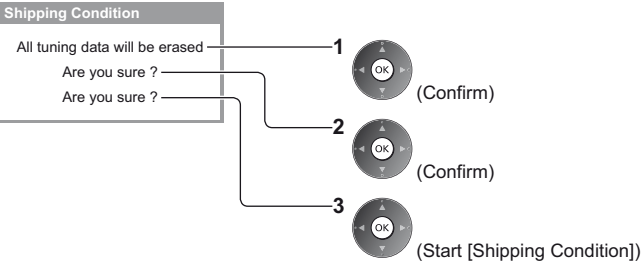

2 Follow the on-screen instructions

Reset to Factory Shipping Condition Completed.
TV will automatically restart.
Do not turn off

- [Auto Setup] will automatically start. (p. 16)

Updating the TV Software

A new version of software may be released for download to enhance the performance or operations of the TV. If there is an update available, a notification message is displayed when the channel has the update information.

- To download



(Press the EXIT button not to download)

You can update new software automatically or update manually.

1 Display the menu and select [Setup]

MENU



① select
② access

2 Select [System Menu]



① select
② access

3 Select [System Update]

 
 


① select
② access

Update TV's software system [System Update]

■ To update automatically

Select [Auto Update Search in Standby]



- Every time you set, the TV automatically performs a search in Standby and downloads an update, if any software updates are available.
- The automatic updating is performed under the following conditions:
 - Standby (TV turned off with the remote control)
 - Recording of Timer Programming, Direct TV Recording or One Touch Recording is not in progress.

If System Update is performed, the software will be updated (it may change TV functions). If you do not want to do so, set [Auto Update Search in Standby] to [Off].

■ To update immediately

1 Select [System Update Search Now]



① select
② access

2 Searches for an update (for several minutes) and displays a corresponding message if any

3 Download



Note

- Download may take for about 60 minutes.
- During software download and update, DO NOT switch off the TV.
- The notification message might be a reminder. In this case, the schedule information (the date that the new version can be used) will appear. You can set the reservation for update. The update will not start when the TV is off.

 
Multi Window

Enjoy viewing the digital TV programme and external input (AV, Component or HDMI) at once.

1 Display the menu and select [Picture]



2 Select [Picture in Picture]





• Remote control operations apply to the main screen.



How to operate in multi window

Display the colour bar if it is not displayed

Picture-in-Picture mode [PinP]

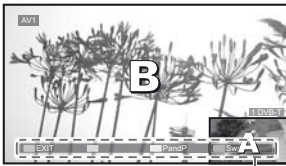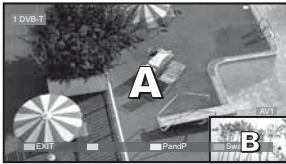

Colour bar

 
Picture-and-Picture mode [PandP]



• To exit multi window



• To change the input mode or channel of sub screen



1 Swap sub screen for main screen

2 Change the input mode or channel by the remote control (p. 21, 30)

3 Swap again

Note

- Each input mode can only be displayed either on main screen or sub screen.
- The sound comes from only the main screen in multi window.
- You cannot change the aspect ratio in multi window.
- HDMI is available only for main screen.
- Some signals are reformatted for suitable viewing on your display.

Displaying PC Screen on TV


The screen of the PC connected to the TV can be displayed on the TV.
You can also listen to PC sound with the audio cable connected.

- To connect PC ➔ (p. 104)

1 Select the external input

AV

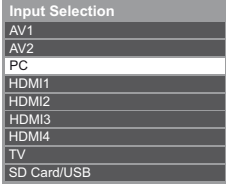

2 Select [PC]



- Corresponding signals ➔ (p. 114)
- If [H-freq.] or [V-freq.] is shown in red, the signals may not be supported.

PC menu setting

- To make settings ➔ “How to Use Menu Functions” (p. 40)

Menu	Item	Adjustments / Configurations (alternatives)
Setup PC Setup	Input Resolution	Switches to a wide view: VGA (640 × 480 pixels) / WVGA (852 × 480 pixels) / XGA (1,024 × 768 pixels) / WXGA (1,280 × 768 pixels, 1,366 × 768 pixels) • Options change depending on signals
	Clock	Set to the minimum level if noise occurs
	H-pos	Adjusts horizontal position 
	V-pos	Adjusts vertical position 
	Clock Phase	Eliminates flicker and distortion • Adjust after Clock adjustment • Set to the minimum level if noise occurs
	Sync	Chooses another synchronous signal if the image is distorted [H & V] / [On Green] [H & V]: by the horizontal and vertical signals from your PC [On Green]: by the green signal from your PC (if available)
	Reset to Defaults	Press the OK button to reset [PC Setup] to the default settings

- Other items ➔ (p. 41 - 49, 68)

Note

- For HDMI-compatible PC, possible to connect to HDMI terminals (HDMI1 / HDMI2 / HDMI3 / HDMI4) by using HDMI cable (p. 112).

Advanced Picture Settings

You can adjust and setup the detailed picture settings for each input and Viewing Mode.

- To use this function completely, set [Advance(isfcc)] to [On] in the Setup Menu. ➔ (p. 48)
- For PC input mode, some functions are available without setting [Advance(isfcc)].

1 Select the input mode to adjust and setup

➔ (p. 21, 30)



2 Display the menu and select [Picture]



① select

② access

 
3 Select [Viewing Mode] and set the mode



select

access / store

4 Select one of the following functions



① select

② access

- [Copy Adjustment] is available when [Viewing Mode] is set to [Professional1] or [Professional2].

Adjust the detailed picture settings [Advanced Settings]



select

adjust

access / store

- [Colour Management] is available when [Viewing Mode] in the Picture Menu is set to [True Cinema], [Professional1] or [Professional2].

Menu	Item	Adjustments / Configurations (alternatives)
Picture Advanced Settings White Balance	R-Gain, G-Gain, B-Gain	Adjusts the white balance of bright red / green / blue area
	R-Cutoff, G-Cutoff, B-Cutoff	Adjusts the white balance of dark red / green / blue area
	Reset to Defaults	Press the OK button to reset to the default White Balance

Menu	Item		Adjustments / Configurations (alternatives)	
Picture	Advanced Settings	Colour Management	R-Hue, G-Hue, B-Hue	Adjusts the picture hue of red / green / blue area
			R-Saturation, G-Saturation, B-Saturation	Adjusts the saturation of red / green / blue area
			R-Luminance, G-Luminance, B-Luminance	Adjusts the luminance of red / green / blue area
			Reset to Defaults	Press the OK button to reset to the default Colour Management
	Gamma	Gamma	Switches the gamma curve [1.8] / [2.0] / [2.2] / [2.4] / [2.6] • Please note the numerical values are reference for the adjustment.	
		Reset to Defaults	Press the OK button to reset to the default Gamma	

Lock the picture setting [Lock Settings]

[White Balance], [Colour Management] and [Gamma] can be locked for each Viewing Mode and each input. Additionally, [Contrast], [Brightness], [Colour], [Sharpness], [Tint] and [Reset to Defaults] in the Picture Menu can be locked for [Professional1] and [Professional2].

1 Enter the PIN number (4 digits)



 
- Enter the PIN number twice at first setting.
- Make a note of the PIN number in case you forget it.

2 Select [Adjustment Lock] and set to [On]



■ To change the PIN number

1. Select [Change PIN]



2. Enter a new PIN number twice



Copy the settings to the other input [Copy Adjustment]

You can copy the selected [Professional1] or [Professional2] settings to that of the other input. The settings of [Contrast], [Brightness], [Colour], [Sharpness], [Tint], [White Balance], [Colour Management] and [Gamma] will be copied.

Select the destination to copy to



- You cannot copy to the locked mode.

USB HDD / SD Card Recording

You can record the digital TV programmes to the connected USB HDD or inserted SD Card and enjoy playing back in various ways.

- Analogue TV programme cannot be recorded on the USB HDD / SD Card.
- The data broadcasting (MHEG, etc.), radio broadcasting and the periods without any signal will not be recorded.
- Not all the programmes can be recorded depending on the broadcaster and service provider.
- You cannot copy the recorded contents of the USB HDD.
- It is recommended to use the SD Card formatted with this TV ➔ (p. 72)
- For more information of the USB HDD and the SD Card ➔ (p. 111)

Caution

- All data in the USB HDD / SD Card will be erased in the following cases:
 - When formatting the USB HDD / SD Card with this TV ➔ “Setting for USB HDD / SD Card” (p. 71)
 - When formatting the USB HDD / SD Card to use on PC, etc.
- When the TV is repaired due to a malfunction, you may have to format the USB HDD again with this TV to use it. (All data will be erased when formatting.)
- In order to use the USB HDD with your PC after recording with this TV, format it again on your PC. (Special operations or tools may be necessary to format on your PC. For details, read the manual of the USB HDD.)
- The data recorded on the USB HDD / SD Card with this TV can only be played back on this TV. You cannot play back its contents with another TV (including the TV of the same model number) or any equipment.
- Do not turn the TV off, pull out the mains plug or remove the USB HDD / SD Card during operation (formatting, recording, etc.). It may cause malfunction of the device or damage the recorded data. (Also when the electric outage occurs.) It is recommended to back up the data (if any) of the SD Card before using with this TV.

■ Preparation for USB HDD / SD Card

USB HDD


Connect the USB HDD to the USB 1 port with the USB cable.

- Be sure to connect the USB HDD to the socket outlet.
- To remove the USB HDD safely from the TV ➔ (p. 23, 72)
- Check the type of terminals and cable plugs are correct when connecting.

SD Card

- Unlock the write-protection switch (on the left side of the SD Card) to record and play back.
- When connecting a USB device to the USB 1 port, there may be a difficulty to insert / remove the SD Card. In this case, confirm a USB device is not active and insert / remove the SD Card carefully.


USB HDD / SD Card Recording

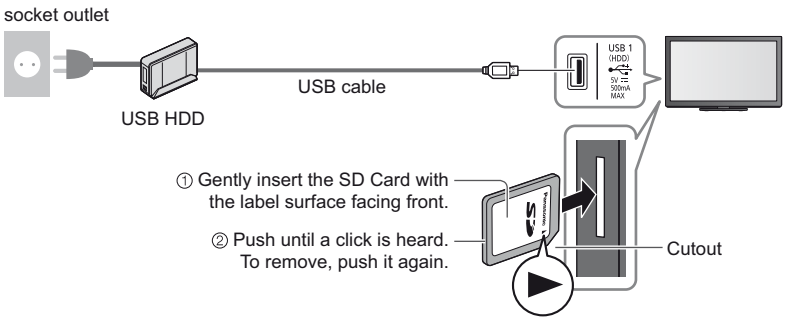

1 Display the menu and select [Setup]



 2 Select [Recording Setup]



Setting for USB HDD / SD Card

Format and setup the USB HDD with this TV in order to use it for recording.

Depending on the conditions of the SD Card, the recording may not work properly. Formatting the SD Card with this TV will resolve this problem. (All data will be erased when formatting.)

- Before the settings, connect the USB HDD / SD Card (p. 70) and be sure to turn on the USB HDD.
- Prepare the USB HDD for the exclusive use of recording with this TV.

Select **[USB HDD Setup]** or **[SD Card Formatting]** and set

Recording Setup	
USB HDD Setup	Access
⋮	
SD Card Formatting	Access
SD Card Information	Access



- To check the information of the inserted SD Card
➔ **[SD Card Information]**

Setup the USB HDD [USB HDD Setup]

All the USB devices recognised as a mass storage device will be listed.

- You can only choose one USB HDD for recording at a time.
- You cannot change the settings for the USB HDD while recording is in progress.
- Please note that USB HDD will be formatted and all data in it will be erased after this setup.

1 Select the USB HDD for recording and start setup

USB HDD Setup	
Product	Name
USB Drive A	
USB Flash Disk	



- Some USB HDD may not be displayed.
- For the information of the highlighted device





2 Caution and confirmation of using USB HDD

Select **[Yes]** to proceed

USB HDD Formatting	
The data recorded to the USB HDD with this TV can only be played back on this TV. You cannot playback it with other TV (including the TV of the same model number) or any PCs. If your TV is repaired due to a malfunction, the USB HDD may not be available with your repaired TV. Continue?	
Yes	No

USB HDD Formatting	
To use this device for recording, it must be formatted first. Continue?	
Yes	No

USB HDD Formatting	
This device will be formatted and all contents deleted. Are you sure?	
Yes	No

  

3 Confirmation of USB HDD name

USB HDD Formatting	
Name : USB Drive A Edit name?	
Yes	No



The name for the USB HDD is created automatically. If you want to edit the name, select **[Yes]**.

Set characters


USB HDD	
Name	USB HDD 1



- You can set characters by using numeric buttons.

4 Confirmation to enable USB HDD for recording

If the formatted USB HDD for recording already exists, this confirmation screen will be displayed to switch to enable this USB HDD for recording.

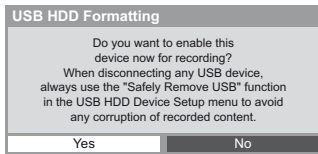

USB HDD Setup	
Product	Name
USB Drive A	USB HDD 1
USB Flash Disk	

Mode

- : The USB HDD is available for recording / playing back. Only one USB HDD on the list is available for recording.
- : The USB HDD is available for playing back.

USB HDD name is displayed

 
- To format (red)
- To edit USB HDD name (green)
- To change the mode
- To remove the USB HDD safely from the TV (yellow)
 - To set "Safely remove USB" in other conditions ➔ (p. 23)

SD Card Formatting

Formats the inserted SD Card.

- Please note that all data in the SD Card will be erased after formatting.

Caution and confirmation of using SD Card and start format



- If the formatting has failed,
 - Ensure the SD Card is inserted correctly. ➔ (p. 70)
 - Ensure the write-protection switch is unlocked.
 - Check your SD Card is suitable for recording. ➔ (p. 111)

One touch direct TV recording - What you see is What you record [One Touch Recording]

Records the current programme in the USB HDD or the SD Card immediately.

- Confirm the code of the remote control is "73" (p. 31).

Select the maximum recording time [30] / [60] / [90] / [120] / [180] (minutes)

Recording Setup	
One Touch Recording	180 minutes



- LED will turn to orange (flash) while One Touch Recording is in progress. ➔ "Indicator / Control panel" (p. 12)

Default REC Mode

You can select default recording mode for [One Touch Recording].

➔ "Recording time for the USB HDD / SD Card Recording" (p. 111)

[DR]: Direct recording (normal mode)

[LT1]: Long time recording

[LT2]: Extra long time recording

■ To start One Touch Recording

Start



- No other channel can be selected while the recording is in progress.

■ When both USB HDD and SD Card are available

Select the recording device



■ To stop recording on the way



■ To play back or delete the recorded contents → “Recorded TV mode” (p. 81)

- Even if One Touch Recording is in progress, you can play back all the contents. (Depending on the USB HDD / SD Card, it may not be available or the recording may not work properly while playback.)

 
Record constantly [REW LIVE TV]

(USB HDD only)

Records the current programme constantly.

- Confirm the code of the remote control is “73” (p. 31).

Select [Auto] to start [REW LIVE TV]



- When you select [Auto], the recording will start automatically.
- This recording will not start if the other recording is in progress, TV signal condition is bad or any images are not displayed.

■ To operate [REW LIVE TV]

 
- To pause



- To search backward (up to 90 minutes)



- After pausing or searching backward, the following buttons are available to operate.



Search backward / forward



Pause / Playback



 
Playback



Return to the current programme



■ To stop [REW LIVE TV]



- If you stop [REW LIVE TV], the recorded content for [REW LIVE TV] will be deleted.

- [REW LIVE TV] will be stopped and the recorded content deleted automatically in the following conditions: (Even if [REW LIVE TV] stops for the following conditions, as long as the setting is [Auto], the new recording will start automatically in a condition that makes the recording available.)

- Selected other channels
- Selected locked channel
- Selected invalid channel
- No TV signal
- When the other recording starts
- When the TV is turned to Standby or off

Using Media Player

Media Player allows you to enjoy photo, video or music recorded on an SD Card and a USB Flash Memory, and contents recorded with this TV on the recording devices (SD Card / exclusive USB HDD).

Photo mode:

Still pictures recorded by digital cameras will be displayed.

Video mode:

(For SD Card or USB Flash Memory) Moving pictures recorded by digital video cameras will be played back.

Recorded TV mode:

(For SD Card / exclusive USB HDD) TV programmes recorded on the USB HDD / SD Card with this TV will be played back.

Music mode:


Digital music data will be played back.

- During the operation, audio signal is output from AV1, DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals. But no video signals are output. AV1 can output audio signal if [AV1 out] is set to [Monitor] in the Setup Menu (p. 46). To use HDMI2 with ARC function, connect an amplifier that has ARC function (p. 97) and set to use theatre speakers (p. 103).
- [Date] shows the date on which the recording was made by the recording equipment. The file without record of the date is shown ***** / ** / *******.
- The picture may not appear correctly on this TV depending on the recording equipment used.
- Display may take some time when there are many files and folders.
- Partly degraded files might be displayed at a reduced resolution.
- Picture setting may not work depending on the conditions.
- The folder and file names may be different depending on the digital camera or digital video camera used.

■ To insert or remove the SD Card / USB Flash Memory


- For the USB HDD Connection ➡ (p. 70)

USB Flash Memory

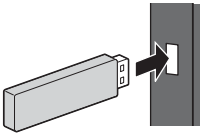

- Insert or remove straightly and completely.
- Before removing the USB Flash Memory, ensure to perform "Safely remove USB" (p. 23).
- Connect the USB Flash Memory to the USB 1, 2 or 3 port.

SD Card

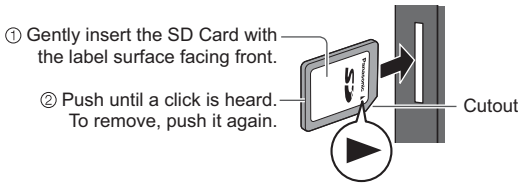

- ① Gently insert the SD Card with the label surface facing front.
- ② Push until a click is heard. To remove, push it again.

- When connecting a USB device to the USB 1 port, there may be a difficulty to insert / remove the SD Card. In this case, confirm a USB device is not active and insert / remove the SD Card carefully.

- Check the type of terminals and devices are correct when connecting.
- For the information of the devices ➡ **"Devices for recording or playing back"** (p. 111)
- For the supported file format ➡ **"Supported file format in Media Player and media servers"** (p. 108, 109)

1 Insert the SD Card or USB Flash Memory to the TV

➔ (p. 74)

- To play back contents in the USB HDD, check the connection and settings are completed. ➔(p. 70, 71)

2 Confirm the message and start Media Player



- You can also start by pressing following button.

AV ➔ “Watching External Inputs” (p. 30)

3 Select the device to access



Selected device name

- If two or more devices are not connected, this step will be skipped.

4 Select the content



- [Photo] ➔ (p. 76)
- [Video] ➔ (p. 80)
- [Music] ➔ (p. 84)
- [Recorded TV] ➔ (p. 81)

5 Enjoy Media Player

Example: Thumbnail - [All photos]



- To display the information of the highlighted content



File name	1/48	File number / Total file number
Date	p1010001.JPG	
Pixel	23/10/2011	
	1600X1200	

Selected device name

Note

- You can also access each mode directly by using VIERA TOOLS. ➔ (p. 39)
- [Recorded TV] is available for contents recorded with this TV on the USB HDD / SD Card.
- Select the appropriate device and content for playing back each file.
- You can use the following buttons during playback. Confirm the code of the remote control is “73” (p. 31).



Change the device

You can change to the other device directly in the same mode if two or more devices are connected.

 
1 While the thumbnail is displayed, display the device selection

(yellow)

2 Select the device to access



Selected device name



Change the contents

You can switch to the other mode of Media Player from the thumbnail view.

- The mode can be switched in the current device.

1 While the thumbnail is displayed, display the contents selection

 (blue)

2 Select the content



Photo mode

- Supported file format ➔ (p. 108)


The thumbnail of all the photos in the SD Card or USB Flash Memory will be displayed.

Example: Thumbnail - [All photos]



- To change the size of photos on a thumbnail screen




 : Error display

[Single view] - Photos are displayed one at a time.

Select the file from the thumbnail of photos to be viewed



Example:

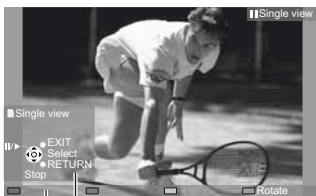

Operation guide


- To display / hide the operation guide



- To return to thumbnail



- To operate Single view

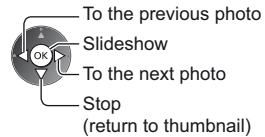

- To rotate 90°



[Slideshow] - Slideshow completes when all photos are viewed within the current thumbnail.

1 Select the file from the thumbnail of photos for the first view



- To display / hide the operation guide



- To pause (return to Single view)



- To return to thumbnail



- To change the back ground music ➔ "Photo Settings" (p. 78)

2 Start Slideshow

 (red)



■ To sort by folder, recorded date or recorded month

1 Display the view selection in the thumbnail view



2 Select the sort type



 
[Folder view]:

- Displays the thumbnail grouped by folder.
- The files which are not into a folder will be collected to the folder named "/".

[Sort by Date] / [Sort by Month]:

- Displays the thumbnail grouped by the same date or month.
- The group of the photos without a recorded date is shown as [Unknown].

- To return to the thumbnail of all photos



Multi Shot 3D

This TV can create the 3D photo using a pair of photos in the SD Card and save it into the same SD Card.

- This TV can also create the 3D photo from photos in the USB Flash Memory, but cannot save it.
- This function is available with photos recorded by digital cameras.
- You cannot save the photo into the SD Card while SD Card recording is in progress or set in Timer Programming.
- Depending on the photos you select, the created 3D photo may not be suitable or the 3D photo creation may not be possible. It is recommended to take a photo (for L) and then move your camera to the right about 5 cm and take another photo (for R).
- To view the created 3D photo with 3D effect, you need the 3D Eyewear ➔ **"Standard accessories"** (p. 6)

1 Display the option menu in the thumbnail view

OPTION



2 Select [Multi Shot 3D]



3 Select two photos for L (left) and R (right)




- You can only select photos of the same recorded date and same pixels.
- You may not be able to view the created 3D photo properly if you select the photos for L and R oppositely.

4 Create the 3D photo



 - If your selected photos are not suitable for the 3D photo, the error message will be displayed and will return to the photo selection screen (step 3).
- To save the 3D photo in the SD Card



- ① select [Yes]
- ② save

After finishing saving the photo, the photo selection screen will be displayed (step 3). Select photos again to create another 3D photo or exit from [Multi Shot 3D] mode.

■ To enjoy the saved 3D photos

Saved 3D photos are displayed in the Thumbnail screen. Wear the 3D Eyewear and enjoy the 3D photos.

Example: Thumbnail



Saved 3D photo

Photo Settings

Setup the settings for Photo mode.

1 Display the option menu

OPTION



2 Select [Slideshow Settings]



3 Select the items and set

Slideshow Settings	
Frame	Off
Colour Effect	Off
Transition Effect	Fade
Screen Mode	Normal
Burst Playback	Off
Interval	5 seconds
Repeat	On
Back Ground Music	







select

access / store

Note

- Picture quality may become lower depending on the slideshow settings.
- Picture setting may not work depending on the slideshow settings.

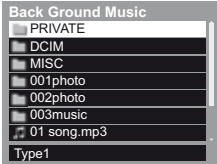Menu	Item	Adjustments / Configurations (alternatives)
Slideshow Settings	Frame	<p>Selects the frame type of the slideshow [Off] / [Multi] / [Collage] / [Drift (+ calendar)] / [Drift] / [Gallery (+ calendar)] / [Gallery] / [Cinema]</p> <p>[Multi]: 9 photos are displayed orderly at once.</p> <p>[Collage]: Each photo is displayed at a random position and random scale.</p> <p>[Drift (+ calendar)] / [Drift]: Photos are displayed like flow images.</p> <ul style="list-style-type: none"> • You can select to display the calendar or not. The month of calendar is turned by pressing the left or right cursor button. <p>[Gallery (+ calendar)] / [Gallery]: The various sizes of photos in the frame are displayed.</p> <ul style="list-style-type: none"> • You can select to display the calendar or not. The month of calendar is turned by pressing the left or right cursor button. <p>[Cinema]: Photos are displayed like old films (sepia tone).</p>
	Colour Effect	<p>Selects the colour effect of photos on Single view and Slideshow [Off] / [Sepia] / [Gray scale]</p> <ul style="list-style-type: none"> • This function is not available when [Frame] is set to [Drift], [Gallery] or [Cinema].
	Transition Effect	<p>Selects the transition effect for switching the photo during the slideshow [Off] / [Fade] / [Slide] / [Dissolve] / [Motion] / [Random]</p> <p>[Fade]: The next photo fades in gradually.</p> <p>[Slide]: The next photo slides and appears from the left side.</p> <p>[Dissolve]: Each photo is dissolved when switching to the next photo.</p> <p>[Motion]: Each photo is displayed with an effect of enlarging, reducing, moving up or moving down.</p> <p>[Random]: Each transition is selected at random.</p> <ul style="list-style-type: none"> • This function is available when [Frame] is set to [Off].

Menu	Item	Adjustments / Configurations (alternatives)
Slideshow Settings	Screen Mode	Selects enlarged or normal viewing on Single view and Slideshow [Normal] / [Zoom] <ul style="list-style-type: none"> This function is not available when [Frame] is set to [Collage], [Drift], [Gallery] or [Cinema] or when [Transition Effect] is set to [Motion]. Depending on the photo size, it may not be fully enlarged to fill the screen, e.g. portrait style picture.
	Burst Playback	Selects whether to display burst photos in a fast-paced slideshow mode [Off] / [On] <ul style="list-style-type: none"> This function is not available when [Frame] is set to [Drift], [Gallery] or [Cinema] or when [Transition Effect] is set to [Motion].
	Interval	Selects slideshow interval [5] / [10] / [15] / [30] / [60] / [90] / [120] (seconds) <ul style="list-style-type: none"> This function is not available when [Frame] is set to [Drift], [Gallery] or [Cinema] or when [Transition Effect] is set to [Motion].
	Repeat	Slideshow repeat [Off] / [On]
	Back Ground Music	Selects the back ground music during Photo mode [Off] / [Type1] / [Type2] / [Type3] / [Type4] / [Type5] / [User] / [Auto] <ul style="list-style-type: none"> [Type1 - 5] are the fixed music each installed in this TV. [User]: Music data in the device registered by yourself will be played back. <p>To register the music</p> <ol style="list-style-type: none"> Select the music file <p>Depending on the condition of the device, select folders until you reach the desired music file.</p> <div style="display: flex; align-items: center;">  <div style="margin-left: 20px;">  </div> </div> <ol style="list-style-type: none"> Select [File] or [Folder] <div style="display: flex; align-items: center;">  <div style="margin-left: 20px;">  </div> </div> <p>[File]: The selected music file will be registered. [Folder]: All the music in the folder which contains the selected music file will be registered.</p> <ul style="list-style-type: none"> If no music has been registered or the device which has the registered music is removed, no sound will be produced. <p>[Auto]: Music data stored in the root folder of the current device will be played back randomly.</p> <ul style="list-style-type: none"> If there is no available music data, no sound will be produced.

Video and Recorded TV mode


- Supported file format ➔ (p. 108, 109)

Video mode

(For SD Card or USB Flash Memory)

The thumbnail of video titles in the SD Card or USB Flash Memory will be displayed.

Example: Thumbnail - [Title view]

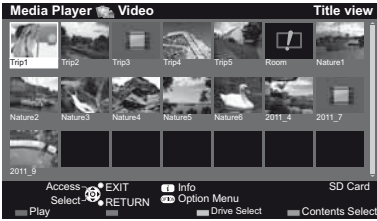

The preview will start when the title / scene is highlighted if it supports a preview.

- To turn off the preview ➔ **“Video Setup” (p. 81)**
- To playback the selected title

Select the title



Start playback



- If you stopped the last playback on the way, the confirmation screen is displayed to select whether to start from where you stopped last time or from the beginning.

: Error display

: The file does not support thumbnail view.

■ Playback from the selected scene in the title (SD-Video or AVCHD)

Playback of the selected scene will start to the end of the title.

1 Select the title



- The structure of titles and scenes may vary depending on the digital video camera used.
- To repeat playback ➔ **“Video Setup” (p. 81)**

2 Select the scene



3 Start playback



■ How to operate in the playback

Example: Playback



Operation guide

Information banner

- To display / hide the operation guide and information banner



- To the previous title / scene



- To the next title / scene



 
- To change aspect




- To return to thumbnail



- To operate the playback



- To jump to the specified time point

 

■ Video Setup

Setup the settings for Video mode.

- Menu items and selectable options vary depending on the content.

1 Display the option menu

OPTION



2 Select [Video Setup]



3 Select the items and set



Menu	Item	Adjustments / Configurations (alternatives)
Video Setup	Video Preview	Sets to start the preview of the title or scene in the thumbnail view [Off] / [On] <ul style="list-style-type: none"> • Image may not be displayed for an instant in the thumbnail view. Set the preview [Off] to resolve this. • Only available in the thumbnail view
	Multi Audio, Dual Mono Audio	Selects between selectable sound tracks (if available) <ul style="list-style-type: none"> • It may take several seconds to change the sound. • Only available during playback
	Subtitle	Subtitles On / Off (if available) <ul style="list-style-type: none"> • Only available during playback
	Subtitle Text	Selects the font type to display subtitles correctly (if available) <ul style="list-style-type: none"> • Only available during playback
	Aspect Change	[Aspect1] : Displays the content enlarged without distortion. [Aspect2] : Displays the content full-screen. [Original] : Displays the content original size. <ul style="list-style-type: none"> • You can also change the aspect using the ASPECT button. • Aspect change may not work depending on the content. • Only available during playback
	Repeat	Playback repeat within the title or selected file (depending on the content) [Off] / [On]
	Title	Selects from a group of titles (if available)


Recorded TV mode

(For SD Card / exclusive USB HDD)

Contents list of the selected device will be displayed.

- For the SD Card, unlock the write-protection switch on the left side of the SD Card to play back.

Example: Contents list

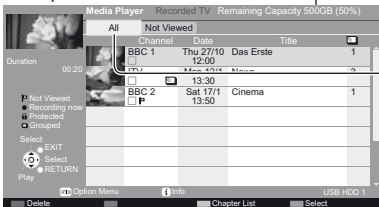

Remaining capacity of the selected device
(This value may not be accurate depending on the condition.)

[All]: All the recorded contents are listed.
[Not Viewed] (USB HDD only): Contents not played back yet are listed.

- You can also access the contents list directly by using VIERA TOOLS. ➔ (p. 39)

(USB HDD only)

: Content not played back yet (Once you play back the content, this icon will disappear.)

: Protected content cannot be deleted.

: Content under recording (You can play back this content even if under recording.)

: Two or more contents are grouped.

■ Playback from the list

1 Select the content



2 Start playback



- If you stopped the last playback on the way, the confirmation screen is displayed to select whether to start from where you stopped last time or from the beginning. (USB HDD only)
- If the content has multiple programmes with the different parental ratings, the highest restriction is valid for the content. Once you unlock the restriction, all the programmes in the content can be played back.

■ To edit recording content (USB HDD only)

1 Select and tick the content to edit



2 Display the option menu



OPTION

3 Select the item and edit

Option Menu
Create Group
Release Group
Exclude from Group
Change Protect Status



- ① select
② edit

[Create Group]:

Two or more contents can be grouped. Select and tick all the desired contents, and then select [Create Group].

[Release Group]:

Select the created group to release, and then select [Release Group]. (To release several groups at once, tick all the desired groups.)

[Exclude from Group]:

Select the group and press the OK button to display the grouped contents. To exclude only the specific content from the group, tick it and then select [Exclude from Group]. (To exclude several contents at once, tick all the desired contents.)

[Change Protect Status]:

Select the content to protect from deletion, and then select [Change Protect Status]. Perform the same way to cancel the protection. (To change the status of several contents at once, tick all the desired contents.)

■ To delete the selected content

 
1 Select the content



2 Delete the content



3 Confirm




- ① select
② set

- To select two or more contents



■ How to operate in the playback

Example: Playback

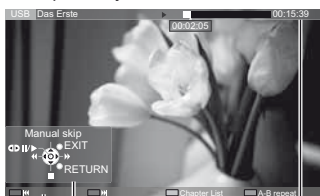

Operation guide

Information banner

- To display / hide the operation guide and information banner



- To return to list



- To operate the playback

◀◀ Rewind

[Manual skip]

- Press to skip forward about 30 seconds.

- Press and hold to skip backward about 15 seconds.

⏸ Pause (displays the time seek bar) / Playback

▶▶ Fast forward

■ Stop

- To jump to the specified time point




While the time seek bar is displayed




Press: Search about 10 seconds




Press and hold: Search rapidly



- To repeat between the starting point "A" and finishing point "B"
- Set "A" and "B" in order
-  (blue)
 - The points will be reset by pressing this button again or other operations.

- To change aspect
- ASPECT
- 

- To confirm or change the current status (if available)
- ➔ "Display the selectable settings for the current status" (p. 23)

 
- To the previous / next chapter
-  (red) /  (green)
 - A recorded content is automatically divided into chapters (about 5 minutes for each).
- To display the subtitle (if available)
- STTL
- 

■ Chapter List (USB HDD only)

You can start playback from the chapter list you select.

- The chapter list is not displayed while the selected content is being recorded.

To play back from the chapter list



Note

- Depending on the recorded programmes, some playback operations may not work properly.


■ To change the device

You can change to the other device directly in the same mode if two or more devices are connected.

1 Display the option menu



2 Select [Drive Select]

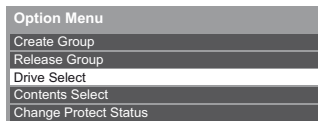


3 Select the device to access



If you select the device to play back photos, videos or music, change to the appropriate content.

 - To change the content



Audio output Settings


You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO OUT or HDMI2 (ARC function) terminal.

- To confirm or change the current sound status ➔ (p. 81)

1 Display the menu and Select [Sound]



2 Select [SPDIF Selection] and set

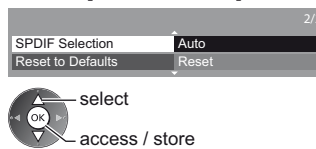


Menu	Item	Adjustments / Configurations (alternatives)
Sound	SPDIF Selection	SPDIF: A standard audio transfer file format Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals [Auto] / [PCM]
		[Auto]: Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. DTS is output as DTS. MPEG is output as PCM. [PCM]: Digital output signal is fixed to PCM.

Music mode

- Supported file format ➔ (p. 109)

The thumbnail of music folders in the SD Card or USB Flash Memory will be displayed.

Example: Thumbnail - [Folder view]

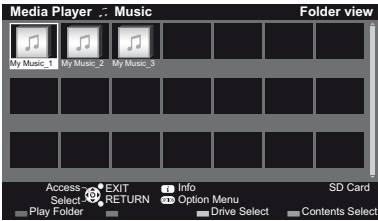

- To play back the selected folder
Select the folder



- Start playback
[red] button

■ Playback from File view

Selected file will be played back.

1 Select the folder



2 Select the file




3 Start playback



■ How to operate in the playback

Example: Playback

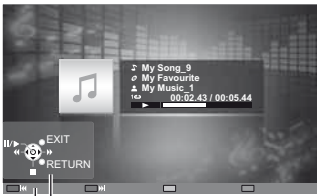


Operation guide

- To display / hide the operation guide



 - To operate the playback



- To the previous track



- To the next track



- To return to thumbnail



Music Setup

Setup the setting for Music mode (only available in the thumbnail view).

1 Display the option menu



2 Select [Music Setup]



3 Set



[Folder]: Playback repeat within the selected folder

[One]: Playback repeat of the selected one file

Using Network Services (DLNA / VIERA Connect)

DLNA®

This TV is a DLNA Certified™ product.

DLNA (Digital Living Network Alliance) is a standard that makes DLNA Certified digital electronics easier and more convenient to use on a home network. To learn more, visit www.dlna.org.

- To enable this function, connect this TV to your home network.
➔ “Network connections” (p. 87), “Network Setup” (p. 88)

■ Playback of sharing contents stored in the media server

Store photos, videos or music contents into the DLNA Certified media server (for example, PC with Windows 7 installed, DIGA Recorder, etc.) connected to your home network. And then you can enjoy these contents on this TV.

- For watching and operating contents on this TV ➔ (p. 92)
- For the supported file format ➔ (p. 108, 109)

To use a PC as a media server

Prepare the PC with Windows 7 or ensure the server software is installed on the PC.

“Windows 7” and “TwonkyMedia server 6 (installed on the PC with Windows 7, Windows Vista or Windows XP)” are the server software that has been tested for compatibility with this TV (as of January, 2011). Any other server software have not been tested with this TV, therefore compatibility and performance cannot be assured.

- Windows 7

The setup for homegroup settings of Windows 7 is required. For details, refer to the help functions of Windows 7.

- TwonkyMedia server

“TwonkyMedia server” is the product of PacketVideo Corporation.

To obtain the Installation Guides for installing and setting “TwonkyMedia server”, visit the website of TwonkyMedia.

Additional fees may be charged to obtain server software.

Note

- For more information about the server software, please consult each software company.
- When server software for the media server is installed on the PC, the data may be at risk of being accessed by other people. Please take care of the settings and connections under the network circumstances at the office, hotel or even at home when not using a router.
- AVCHD and DivX files are not supported by DLNA functions of this TV, but can be played by Media Player (p. 74).

To use a DLNA compatible DIGA Recorder as a media server

By connecting a DLNA compatible DIGA Recorder to your home network, you can enjoy and control it as one of the media servers.

- Please read the manual of your DIGA Recorder to confirm whether the recorder is compatible with DLNA.

■ Playback of sharing contents on this TV with the DMC (Digital Media Controller) network equipment

You can enjoy contents stored in the media server by controlling with the DMC network equipment (PC with Windows 7 installed, smartphone, etc.) connected to your home network.

- To use this function with Windows 7, set [DLNA Remote Control] and [DLNA Remote Volume] of this TV to [On].
➔ (p. 88)

- “Windows 7” is the OS that has been tested for compatibility of this TV (as of January, 2011). For the operations, refer to the help functions of Windows 7.

- To use this function with your smartphone, set [Network Remote Control] of this TV to [On]. ➔ (p. 88)

And you need to install the application for controlling VIERA in your smartphone. For the information of the application (English only):

<http://panasonic.jp/support/global/cs/tv/>

For the operations, refer to the support information of the application.

■ Sharing the TV programme or contents of this TV with the other network equipment

You can enjoy the current digital TV programme or the contents*¹ of this TV on the other DLNA Certified VIERA*², your smartphone, etc. connected to your home network.

For example, watching the continuation of the current programme on your smartphone in the other room, etc.

- To use this function, set [DLNA Server Settings] of this TV. ➔ (p. 88)
- To use this function with the other VIERA, select a name or MAC Address of this TV from the DLNA server list of the other VIERA, and then select the content to operate. Also refer to the manual of the other VIERA.
- To use this function with your smartphone, you need to install the application for controlling VIERA in your smartphone. For the information of the application (English only):

<http://panasonic.jp/support/global/cs/tv/>

For the operations, refer to the support information of the application.

*1: Available contents:

- Contents that can be played back by Media Player of this TV and other network equipment
- TV programmes recorded on the USB HDD with this TV (TV programmes recorded on the SD Card are not available.)

*2: DLNA Certified VIERA of before the year 2009 may not be available. The compatibility with future products is not guaranteed.

Note

- When using this function, this TV must be on.
- This function is available only with 1 piece of other equipment.
- You may be able to control this TV for turning off the screen and muting the sound from your smartphone. For details, refer to the support information of the application.
- This function may not be available in the following conditions of this TV:
 - While the recording is in progress.
 - While Video mode or Recorded TV mode in Media Player.
 - When in VIERA Connect.
 - When accessing the media server.
 - When the data service is active.
 - When selecting radio channels.
 - When watching encrypted (copy-protected) programmes.
 - When the broadcast prohibits the output of video and audio.

VIERA Connect

VIERA Connect is a gateway to the internet services unique to Panasonic.

VIERA Connect allows you to access some specific websites supported by Panasonic, and enjoy internet contents such as videos, games, communication tools, etc. from VIERA Connect home screen.

- To enable this function, connect this TV to a broadband network environment.
 - ➔ “**Network connections**” (p. 87), “**Network Setup**” (p. 88)
- For details about VIERA Connect operation ➔ (p. 20)

Note

- VIERA Connect home screen is subject to change without notice.
- This TV does not support full web browser function and some features of the websites may not be available.
- Be sure to update the software when a software update notice is displayed on the TV screen. If the software is not updated, you will not be able to use VIERA Connect.
 - You can update the software later manually. ➔ [Software Update] in [Network] (p. 91)
- The services through VIERA Connect are operated by their respective service providers, and service may be discontinued either temporarily or permanently without notice. Therefore, Panasonic will make no warranty for the content or the continuity of the services.
- Some content may be inappropriate for some viewers.
- Some content may only be available for specific countries and may be presented in specific languages.
- Depending on the connection environment, the internet connection may be slow or may not be successful.
- During the operation, audio signal is output from AV1, DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals. But no video signals are output. AV1 can output audio signal if [AV1 out] is set to [Monitor] in the Setup Menu (p. 46). To use HDMI2 with ARC function, connect an amplifier that has ARC function (p. 97) and set to use theatre speakers (p. 103).
- You can restrict access to VIERA Connect. ➔ [Child Lock] (p. 61)
- VIERA Connect is not available while the recording of Timer Programming, Direct TV Recording or One Touch Recording is in progress.

Network connections


To use only DLNA features, you need a home network environment and you can operate the features without broadband network environment.

To use VIERA Connect features, you need a broadband network environment.

- If you do not have any broadband network services, please consult your retailer for assistance.
- Dial-up internet connections cannot be used.
- Required speed (effective): at least 1.5 Mbps for SD and 6 Mbps for HD picture quality, respectively. If the transfer speed is not enough, contents may not be played back properly.

Example 1

(For DLNA and VIERA Connect)

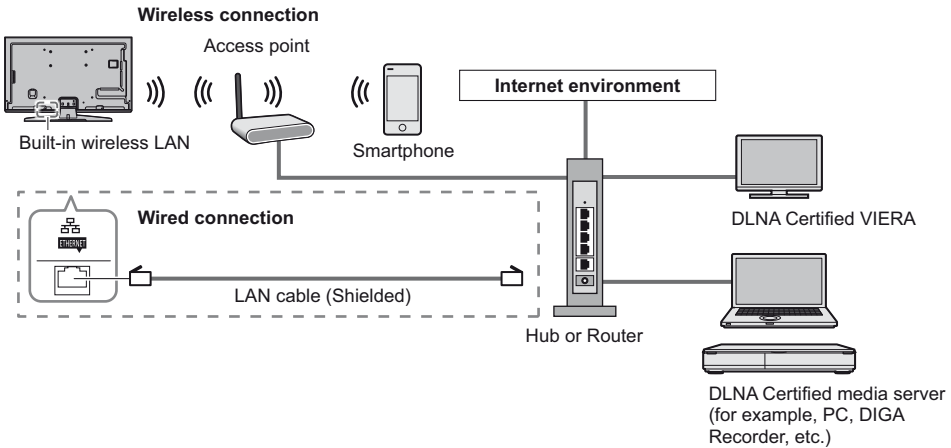


- Ensure to use a LAN straight cable for this connection.
- Set up and connect any equipment required for the network environment. You cannot make settings for the equipment on this TV. Read the manual of the equipment.
- If your modem has no broadband router functions, use a broadband router.
- If your modem has broadband router functions but there are no vacant ports, use a hub.
- Ensure that the broadband routers and hubs are compatible with 10BASE-T / 100BASE-TX.
- If you use the equipment compatible only with 100BASE-TX, category 5 LAN cables are required.

Example 2

(For VIERA Connect)

 You can connect this TV and the telecommunication equipment directly to use VIERA Connect features.



Note

- Contact your Internet Service Provider (ISP) or telecommunications company for further assistance regarding the network equipment.
- Confirm the terms and conditions of the contracts with your Internet Service Provider (ISP) or telecommunications company. Depending on the contracts, additional fees may be charged or multiple connections to the internet may be impossible.
- Turn the TV off, and then on again when changing or reconnecting the network connection.

Network Setup

- Ensure the connections are completed before starting Network Setup.
 - ▶ "Network connections" (p. 87)

Display the menu and select [Network]



Network Link settings

Sets the link settings to access and control this TV from the network equipment (PC with Windows 7 installed, smartphone, DLNA Certified VIERA, etc.) via the network.

1 Select [Network Link Settings]

Connection Test	
Network Connection	Wired
Wireless Network Settings	
IP/DNS Settings	
Network Link Settings	Access
Software Update	
New Software Message	On
Network Status	



2 Select the items and set

Network Link Settings	
VIERA Name	VIERA
DLNA Remote Control	On
DLNA Remote Volume	On
Network Remote Control	On
DLNA Server Settings	Access




Menu	Item	Adjustments / Configurations (alternatives)
Network Link Settings	VIERA Name	Sets your favourite name for this TV <ul style="list-style-type: none"> • This name will be used as the name of this TV on the screen of the other network equipment.
	DLNA Remote Control	Enables to control the TV using Windows 7 via the network [Off] / [On]
	DLNA Remote Volume	Enables to control the volume of the TV using Windows 7 via the network [Off] / [On]
	Network Remote Control*	Enables to control the TV from the network equipment (smartphone, etc.) [Off] / [On]
	DLNA Server Settings*	DLNA Server
Registration Type		Selects whether to restrict the access to this TV for each equipment on the home network [Auto] / [Manual] [Auto]: All the available equipment on the home network are accessible. (maximum 16 equipment) [Manual]: Sets the restrictions for each equipment in the [Remote Device List].
Remote Device List		Lists the accessible equipment to this TV on the home network

*Depending on the area, this function may not be available. For details, consult your local Panasonic dealer.

Wired connection settings

This setting is for the network connection by using the LAN cable.

1 Select [Network Connection] and set to [Wired]

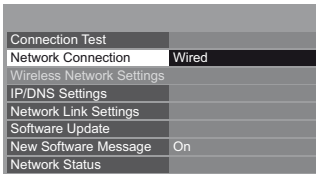


2 Select [IP/DNS Settings] and set the items



■ [Acquire IP Address] / [Acquire DNS Address]

Sets [IP Address], [Subnet Mask], [Default Gateway] and [DNS Address].

Select [Acquire IP Address] / [Acquire DNS Address] and set to [Auto] (recommended).

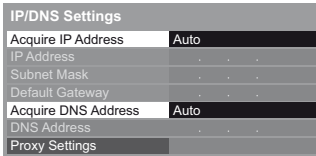


- The available settings are displayed automatically.

Manual settings
([IP Address], [Subnet Mask], [Default Gateway], [DNS Address])



3 Select [Proxy Settings] and set the items

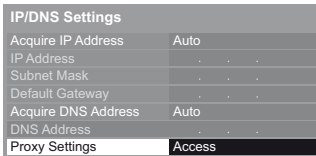

- After settings, return to the previous menu.



■ [Proxy]

Sets Proxy address.

- This is the address of the relay server that is connected to the target server instead of the browser and sends data to the browser. Setting is required if specified by the provider.

1. Select [Proxy]



2. Enter the address



- You can set characters by using numeric buttons.

3. Store



■ [Proxy Port]

Sets Proxy port number.

- This number is also specified by the provider with the Proxy address.

1. Select [Proxy Port]



 
2. Move the cursor and enter the number



4 Select [Connection Test] and access to test



- Performs automatic testing of the network connection for the TV. (It takes a while to test.)




- : **succeeded**
The test is successful and the TV is connected to the network.
- : **failed**
Check the settings and connections. And then try again.

Wireless connection settings


This setting is for the wireless network connection.

- Confirm the encryption key, settings and positions of your access point before starting setup. For details, read the manual of the access point.

1 Select [Network Connection] and set to [Wireless]

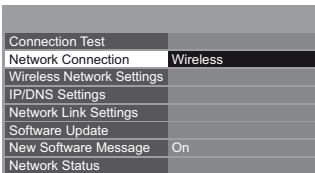

2 Select [Wireless Network Settings]

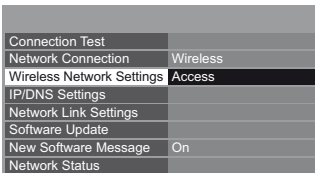

- When the access point is already set, [Current Settings] screen will be displayed.
To change the settings, select [No] on this screen and go to the next step.

3 Select your desired access point

Available Wireless Networks			
No.	Network Name(SSID)	Wireless type	Status
1	Access Point A	11n(2.4GHz)	<input type="checkbox"/> []
2	Access Point B	11n(5GHz)	<input type="checkbox"/> []
3	Access Point C	11n(5GHz)	<input type="checkbox"/> []




: Encrypted access point

- To search access points again
 (blue)

- For the information of the highlighted access point


- For [WPS(Push button)] (p. 19)
 (red)
- For [WPS(PIN)] (p. 91)
 (green)
- To set manually (p. 91)
 (yellow)

4 Access the encryption key input mode

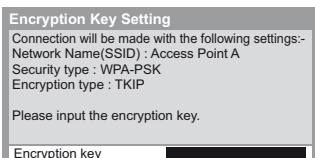

- If the selected access point is not encrypted, the confirmation screen will be displayed. It is recommended to select the encrypted access point.

5 Enter the encryption key of the access point

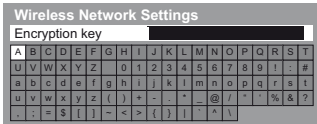

Set characters



 
- You can set characters by using numeric buttons.
- After settings, return to the previous menu.



6 Select [Connection Test] and access to test



- Performs automatic testing of the network connection for the TV. (It takes a while to test.)



: **succeeded**

The test is successful and the TV is connected to the network.


: **failed**

Check the settings and connections. And then try again.

If you continue to have difficulty, please contact your internet service provider.

■ [WPS(PIN)]

Enter the PIN code to the access point, and then select [Connect]


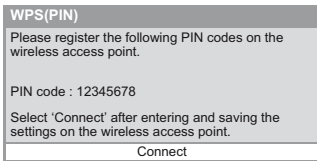


■ [Manual]

You can setup SSID, security type, encryption type, and encryption key manually.

Follow the on-screen instructions and set manually.

 
- When you use 11n (5 GHz) for the wireless system between the built-in wireless LAN and access point, select [AES] for the encryption type.

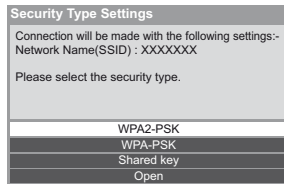

Update TV's software

Accesses the specific website to update TV's software and search if any software updates are available.

Select [Software Update]

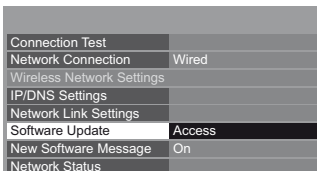

- Follow the on-screen instructions.

Using DLNA® features


- Ensure the preparation of the media server, network connections and network settings are completed. ➔ (p. 85 - 91)

1 Display [VIERA TOOLS] and select [Media Server]



2 Select one of the media servers to access

Example: Media server list

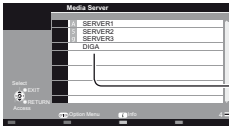


Available media servers
Total listed number

- For the operations to access the other TV, select a name or MAC Address of the other TV from this list.
- To display the information of the highlighted media server



3 Select the file

Example: File list

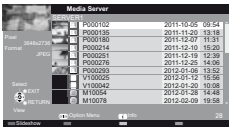

- Depending on the condition of media server, you may need to select the folder before selecting the file.
- To display the information of the highlighted file



Note


- Non-playable files are also listed but cannot be selected.
- You can use the following buttons during playback. Confirm the code of the remote control is "73" (p. 31).



For photo file

[Single view] - Photos are displayed one at a time.

Example:

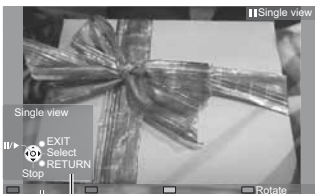


Operation guide

- To display / hide the operation guide



- To operate Single view

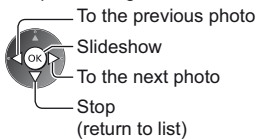

- To return to list

BACK/
RETURN



- To rotate 90°



[Slideshow] - Slideshow completes when all photos are viewed within the list.

1 Select the photo file from the list for the first view



- To display / hide the operation guide



2 Start Slideshow



- To pause (return to Single view)



- To return to list



For video file

Playback - Playback will start.

If you stopped the last playback on the way, the confirmation screen is displayed to select whether to start from where you stopped last time or from the beginning.

Example: Playback



Operation guide

Information banner

- To change aspect



- To display / hide the operation guide and information banner



- To the previous content




- To the next content



- To return to list




- To operate the playback

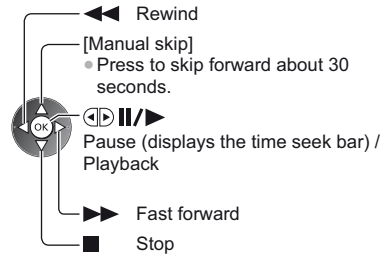

For music file

Playback - Playback will start.

Example: Playback

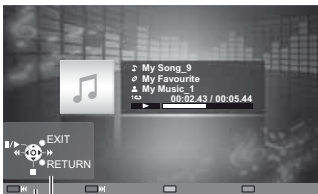


Operation guide

- To display / hide the operation guide



 - To operate the playback



- To the previous track



- To the next track



- To return to list




For DIGA Recorder

Control the DIGA Recorder

The screen of the DIGA Recorder will be displayed. You can control the functions of the DIGA Recorder with this TV remote control according to the operation guide.

Example:

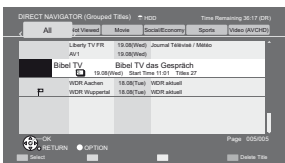

- Before operating, register this TV on the DIGA Recorder.
- For details, read the manual of the DIGA Recorder.

 
Option menu for each content

Setup the settings for Photo, Video and Music file operations on this TV.

1 Display the option menu



2 Select [Slideshow Settings], [Video Setup] or [Music Setup]



3 Select the items and set



Menu	Item	Adjustments / Configurations (alternatives)
Slideshow Settings	Transition Effect	<p>Selects the transition effect for switching the photo during the slideshow [Off] / [Fade] / [Slide] / [Dissolve] / [Motion] / [Random] [Fade]: The next photo fades in gradually. [Slide]: The next photo slides and appears from the left side. [Dissolve]: Each photo is dissolved when switching to the next photo. [Motion]: Each photo is displayed with an effect of enlarging, reducing, moving up or moving down. [Random]: Each transition is selected at random.</p>
	Interval	<p>Selects slideshow interval [5] / [10] / [15] / [30] / [60] / [90] / [120] (seconds) • This function is not available when [Transition Effect] is set to [Motion].</p>
	Repeat	<p>Slideshow repeat [Off] / [On]</p>
	Back Ground Music	<p>Selects the back ground music during Photo mode [Off] / [Type1] / [Type2] / [Type3] / [Type4] / [Type5]</p>
Video Setup	Video Preview	<p>Sets to start the preview of the title or scene in the thumbnail screen [Off] / [On] • Image may not be displayed for an instant in the thumbnail screen. Set the preview [Off] to resolve this.</p>
	Multi Audio, Dual Audio, Dual Mono Audio	<p>Selects between selectable sound tracks (if available) • It may take several seconds to change the sound. • Only available during playback</p>
	Subtitle	<p>Subtitles On / Off (if available) • Only available during playback</p>
	Subtitle Text	<p>Selects the font type to display subtitles correctly (if available) • Only available during playback</p>
	Subtitle Language	<p>Selects the language in which subtitles should appear (if available) • Only available during playback</p>
	Aspect Change	<p>[Aspect1]: Displays the content enlarged without distortion. [Aspect2]: Displays the content full-screen. [Original]: Displays the content original size. • You can also change the aspect using the ASPECT button. • Aspect change may not work depending on the content. • Only available during playback</p>
Repeat	<p>Playback repeat within the selected file [Off] / [On]</p>	
Music Setup	Repeat	<p>Playback repeat [Off] / [Folder] / [One] [Folder]: Playback repeat within the selected folder. [One]: Playback repeat of the selected one file.</p>

Audio output settings (for video contents)


You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO OUT or HDMI2 (ARC function) terminal.

- To confirm or change the current sound status ➡ (p. 94)

1 Display the menu and Select [Sound]



2 Select [SPDIF Selection] and set

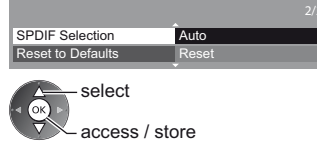

Menu	Item	Adjustments / Configurations (alternatives)
Sound	SPDIF Selection	<p>SPDIF: A standard audio transfer file format Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals [Auto] / [PCM] [Auto]: Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. DTS is output as DTS. MPEG is output as PCM. [PCM]: Digital output signal is fixed to PCM.</p>

Link Functions (Q-Link / VIERA Link)

Q-Link connects the TV and DVD Recorder / VCR, and enables easy recording, playback, etc. ➔ (p. 98)
 VIERA Link (HDAVI Control™) connects the TV and the equipment with VIERA Link function, and enables easy control, convenient recording, playback, energy saving, creating home theatre, etc., without complicated setting.
 ➔ (p. 99 - 103)

You can use Q-Link and VIERA Link functions together.


- This TV supports "HDAVI Control 5" function. But available features are depending on the connected equipment's version of HDAVI Control. Please read the manual of the equipment to confirm the version.
- VIERA Link features may be available even with other manufacturers' equipment supporting HDMI CEC.

Summary of Q-Link and VIERA Link features

Q-Link (SCART connection)

Connected equipment	DVD Recorder / VCR with Q-Link function
Features	
Preset download	○
Easy playback	○
Power on link	○
Power off link	○
Direct TV Recording	○

 Connection




- Use fully wired SCART cable.
- Connect the DVD Recorder / VCR supporting Q-Link to the TV's AV1 terminal via a SCART cable.

VIERA Link (HDMI connection)

Connected equipment	DIGA Recorder with VIERA Link function	DVD Player / Blu-ray Disc Player with VIERA Link function	HD Video Camera / LUMIX Camera with VIERA Link function
Features			
Preset download	○*2 *5	-	-
Easy playback	○	○	○
Power on link	○	○	○
Power off link	○	○	○
Reduce unnecessary power consumption in Standby	○*3	○*3	-
Auto standby for unnecessary equipment	○*3	○*3	-
Pause Live TV programme	○*2 *4	-	-
Direct TV Recording	○*2	-	-
Control the menu of the connected equipment by VIERA remote control	○*1	○*1	○*1
Speaker control	-	-	-

 Connection




- Use fully wired HDMI compliant cable.
- Connect the equipment supporting VIERA Link to the TV's HDMI1, HDMI2, HDMI3 or HDMI4 terminal via an HDMI cable.
- About HDMI cable for connecting Panasonic HD Video Camera or LUMIX Camera, read the manual of the equipment.

Link Functions (Q-Link / VIERA Link)

VIERA Link (HDMI and Audio out connections)

Connected equipment	Player theatre with VIERA Link function	Blu-ray Disc theatre with VIERA Link function	Amplifier with VIERA Link function
Features			
Preset download	—	—	—
Easy playback	○*6	○*6	—
Power on link	○	○	—
Power off link	○	○	○
Reduce unnecessary power consumption in Standby	—	○*3	—
Auto standby for unnecessary equipment	○*3 *7	○*3 *7	○*3
Pause Live TV programme	—	—	—
Direct TV Recording	—	—	—
Control the menu of the connected equipment by VIERA remote control	○*1	○*1	—
Speaker control	○	○	○

Connection

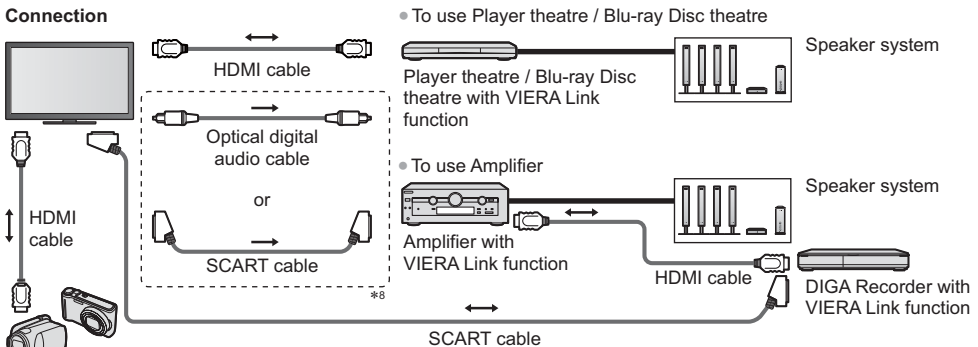

HD Video Camera / LUMIX Camera with VIERA Link function

- Use fully wired HDMI compliant cable.
- Connect the equipment supporting VIERA Link to the TV's HDMI2, HDMI3 or HDMI4 terminal via an HDMI cable.
- Use fully wired SCART cable.
- If you use a SCART cable for audio output, connect the equipment supporting VIERA Link to the TV's AV1 terminal and set [AV1 out] to [Monitor] in the Setup Menu (p. 46).
- Use the optical digital audio cable or SCART cable for audio output from the TV.

- *1: Available with the equipment which has "HDAVI Control 2 or later" function.
 *2: Available with the equipment which has "HDAVI Control 3 or later" function.
 *3: Available with the equipment which has "HDAVI Control 4 or later" function.
 *4: Available with a DIGA Recorder which has HDD.
 *5: This function is available regardless of the version of HDAVI Control when the recorder supports Q-Link and is connected via SCART cable.

- *6: While playing a disc.
 *7: Except for watching a disc.
 *8: If the connected equipment has "HDAVI Control 5" function, you do not have to use this audio cable (Optical digital audio cable or SCART cable). In this case, connect the equipment to the TV's HDMI2 terminal via an HDMI cable.

VIERA Link Control of compatible equipment → [VIERA Link Control] (p. 101)

- Table below displays maximum number of compatible equipment that can be controlled by VIERA Link Control. This includes connections to equipment already connected to the TV.
 For example, DIGA Recorder connected to Amplifier which is connected to the TV via an HDMI cable.

Type of the equipment	Maximum number
Recorder (DIGA Recorder, etc.)	3
Player (DVD Player, Blu-ray Disc Player, HD Video Camera, LUMIX Camera, Digital Camera, Player theatre, Blu-ray Disc theatre, etc.)	3
Audio system (Player theatre, Blu-ray Disc theatre, Amplifier, etc.)	1
Tuner (Set top box, etc.)	4

Q-Link

Preparations

- Connect the DVD Recorder / VCR with the following logos: "Q-Link", "NEXTVIEWLINK", "DATA LOGIC (a trademark of Metz Corporation)", "Easy Link (a trademark of Philips Corporation)", "Megalogic (a trademark of Grundig Corporation)", "SMARTLINK (a trademark of Sony Corporation)"
- Q-Link connection ➔ (p. 96)
- Use fully wired SCART cable.
- Set up the DVD Recorder / VCR. Read the manual of the recorder.
- Q-Link terminal setup in the Setup Menu ➔ [AV1 out] (p. 46)
- Download preset - channel, language and country / region settings ➔ "Preset download" (see below)

Features available

Preset download

Channel, language and country settings can be downloaded to the recorder.

- DVB-S and DVB-C channel settings cannot be downloaded.
- To download settings
 - ➔ [Download] (p. 46), [Auto Setup] (p. 16, 17, 50)

Direct TV Recording - What you see is What you record

Records the current programme in DVD Recorder / VCR immediately. (When USB HDD / SD Card for recording is connected in DVB mode, [One Touch Recording] starts.)

- Confirm the code of the remote control is "73" (p. 31).

REC


- Available conditions:



Picture source	Mode	Recording from
Analogue	TV	TV monitor out
	AV	Recorder's tuner
DVB (USB HDD / SD Card for recording is not connected)	TV	TV monitor out
AV (watching recorder's tuner)	AV	Recorder's tuner
AV (watching recorder's external input)	AV	Recorder's external input
AV (watching TV's external input)	AV	TV monitor out

- When Direct TV Recording is performed, the recorder is automatically turned on if it is in Standby mode.
- You can change channel or turn the TV off while the recorder is recording from its own tuner.
- Changing channel is not available while the recorder is recording from the TV tuner.

 To stop recording



Power on link and Easy playback

Set Power on Link [On] in the Setup Menu to use this function ➔ [Power on Link] (p. 46)

When DVD Recorder / VCR starts playback or direct navigator / function menu for the equipment are activated, the TV is turned on and input mode is switched automatically so that you can view the content. (Only when the TV is in Standby mode.)

Power off link

Set Power off Link [On] in the Setup Menu to use this function ➔ [Power off Link] (p. 46)

When TV is set to Standby mode, the recorder is also automatically set to Standby. (Only when the videocassette or disc is not active.)

- This function works even if the TV enters Standby mode automatically by auto power standby function.

Note

- Some recorders are not applicable. Read the manual of the recorder.

VIERA Link "HDAVI Control"™¹ :

***Enjoy additional HDMI Inter-Operability with Panasonic products which have "HDAVI Control" function.**

This TV supports "HDAVI Control 5" function.

Connections to the equipment (DIGA Recorder, HD Video Camera, Player theatre, Amplifier, etc.) with HDMI and SCART cables allow you to interface them automatically (p. 96, 97).

These features are limited to models incorporating "HDAVI Control" and "VIERA Link".

- Some functions are not available depending on the equipment's version of HDAVI Control. Confirm the connected equipment's version of HDAVI Control.
- VIERA Link "HDAVI Control", based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added. As such, its operation with other manufacturers' equipment that supports HDMI CEC cannot be guaranteed.
- Please refer to individual manuals for other manufacturers' equipment supporting VIERA Link function.
- About applicable Panasonic equipment, consult your local Panasonic dealer.

Preparations

- Connect the equipment supporting VIERA Link.
- VIERA Link connection ➔ (p. 96, 97)
- Use fully wired HDMI compliant cable. Non-HDMI-compliant cables cannot be utilised.
Recommended Panasonic's HDMI cable part number:
 - RP-CDHS15 (1.5 m)
 - RP-CDHS30 (3.0 m)
 - RP-CDHS50 (5.0 m)
- Use fully wired SCART cable.
- Set up the connected equipment. Read the manual of the equipment.
- For optimal recording, the settings of the recorder may need to be changed. For details, read the manual of the recorder.
- Download preset - channel, language and country / region settings ➔ "**Preset download**" (see below)
- Set [VIERA Link] to [On] in the Setup Menu. ➔ [VIERA Link] (p. 46)
- Set up the TV.

After connection, turn the equipment on and then switch the TV on.

Select the input mode from HDMI1, HDMI2, HDMI3 or HDMI4 (p. 30), and make sure that an image is displayed correctly.

This setup should be done each time when the following conditions occur:

- for the first time
- when adding or reconnecting equipment
- when changing setup

Features available

Preset download

Channel, language and country / region settings can be downloaded to the recorder.

- DVB-S and DVB-C channel settings cannot be downloaded.
- To download settings
➔ [Download] (p. 46), [Auto Setup] (p. 16, 17, 50)

Easy playback

Automatic input switching - When the connected equipment is operated, input mode is switched automatically. When it is stopped operating, input mode is returned.

Power on link

Set Power on Link [On] in the Setup Menu to use this function ➔ [Power on Link] (p. 46)

When the connected equipment starts playback or direct navigator / function menu for the equipment are activated, the TV is automatically turned on. (Only when the TV is in Standby mode.)

Power off link

Set Power off Link [On] in the Setup Menu to use this function ➔ [Power off Link] (p. 46)

When the TV is set to Standby mode, the connected equipment is also automatically set to Standby.

- This function will work even if the TV enters Standby mode automatically by auto power standby function.

Reduce unnecessary power consumption in Standby [Standby Power Save]

Set Standby Power Save [On] in the Setup Menu to use this function ➔ [Standby Power Save] (p. 46)

The power consumption in Standby mode of the connected equipment is controlled higher or lower in synchronisation with the TV on / off state to reduce the consumption.

When the TV is set to Standby mode, the connected equipment is automatically set to Standby and the power consumption of the connected equipment is automatically minimised.

When the TV is turned on, the connected equipment is still in Standby mode, but the power consumption is increased to make startup time fast.

- This function is effective if the connected equipment can change the power consumption in Standby mode and is set to higher consumption.
- This function works when [Power off Link] is set to [On].

Auto standby for unnecessary equipment [Intelligent Auto Standby]

Set Intelligent Auto Standby [On (With reminder)] or [On (No reminder)] in the Setup Menu to use this function ➔ [Intelligent Auto Standby] (p. 46)

When the TV is on, non-watched or non-used connected equipment goes into Standby mode automatically to reduce the power consumption. For example, when the input mode is switched from HDMI or when Speaker Selection is changed to [TV] (except for watching a disc).

- If you select [On (With reminder)], the on-screen message will be displayed before the connected equipment turns to standby.
- This function may not work properly depending on the connected equipment. If required, set to [Off].

Direct TV Recording - What you see is What you record [Direct TV Rec]

Records the current programme in the DIGA Recorder immediately.

- If you connect a variety of recorders including other manufacturers' recorders at the same time, connect the DIGA Recorder to the TV's lower HDMI terminal number. For example, if you use HDMI1 and HDMI2 for two recorders, connect the DIGA Recorder to HDMI1.
- If you cannot operate, check the settings and the equipment.
 - ➔ "Summary of Q-Link and VIERA Link features" (p. 96, 97), "Preparations" (p. 99)
- To record the programme which DIGA Recorder does not support, SCART connection is required and the programme is recorded by Q-Link function (p. 98).
- Depending on the programme, SCART connection may be required to record.
- You can change channel or turn the TV off while the recorder is recording from its own tuner.
- You can not change channel while the recorder is recording from the TV tuner.

1 Display [VIERA TOOLS] and select [VIERA Link]

 


2 Select [Direct TV Rec] and start recording

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema



- You can also start recording directly when the code of the remote control is "73" (p. 31).



■ To stop recording


Select [Stop] in [Direct TV Rec]

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Stop
VIERA Link Control	Recorder
Speaker Selection	Home Cinema



- You can also stop recording directly.

 Unlock the tuner



Pause Live TV programme [Pause Live TV]

You can pause the current TV programme and resume later. The current TV programme will be recorded on HDD of the connected DIGA Recorder.

- This function is available with a DIGA Recorder which has HDD.
- If you connect a variety of recorders including other manufacturers' recorders at the same time, connect the DIGA Recorder which has HDD to the TV's lower HDMI terminal number. For example, if you use HDMI1 and HDMI2 for two recorders, connect the DIGA Recorder which has HDD to HDMI1.
- If you cannot operate, check the settings and the equipment.
 - ➔ "Summary of Q-Link and VIERA Link features" (p. 96, 97), "Preparations" (p. 99)


1 Display [VIERA TOOLS] and select [VIERA Link]



2 Select [Pause Live TV] and pause


The TV picture will be paused.

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema

 

- The current TV programme is recorded on HDD from where it was paused.
- If the paused TV picture disappears after a few minutes, press OPTION button to restore the pause picture.
- Follow the operation guide to operate [Pause Live TV] function.

■ To operate [Pause Live TV]

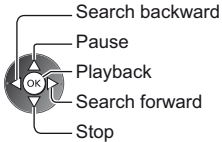


- If you stop playback, the recorded programme will be deleted from HDD.

- Operations may vary depending on the recorder. In this case, follow the operation guide or read the manual of the recorder.

■ To return to current TV (Stop playback of [Pause Live TV] / cancel pause)

 Select [Yes]



- If you stop playback or cancel pause, the recorded programme will be deleted from HDD.

Control the menu of the connected equipment by VIERA remote control [VIERA Link Control]

You can control some functions of the connected equipment with this TV remote control pointing at the TV's signal receiver.

- If you cannot operate, check the settings and the equipment.
 - ➔ "Summary of Q-Link and VIERA Link features" (p. 96, 97), "Preparations" (p. 99)
- For details of the operations for the connected equipment, read the manual of the equipment.

1 Display [VIERA TOOLS] and select [VIERA Link]



2

Select [VIERA Link Control]

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema



3

Select the equipment to access

Select the type of the connected equipment and access.

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema



[Recorder] / [Player] / [Home Cinema] / [Video Camera] / [LUMIX] / [Digital Camera] / [Other]

- The displayed item may vary depending on the connected equipment.
- [Home Cinema] means Player theatre, Blu-ray Disc theatre or Recorder theatre.
- [Other] means Tuner set top box.

The menu of the accessed equipment will be displayed.
(Input mode will be changed automatically)

4

Operate the menu of the equipment

- Confirm the code of the remote control is "73" (p. 31).

Follow the operation guide

- To display the operation guide

OPTION



- If other manufacturers' equipment is accessed, Setup / Contents Selection menu may be displayed.
- Available VIERA remote control buttons depend on the connected equipment.

Note

- Some operations may not be available depending on the equipment. In this case use its own remote control to operate the equipment.

■ If multiple recorders or players are connected

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder2
Speaker Selection	Home Cinema

[Recorder1-3 / Player1-3]

The number is given from the TV's lower number of HDMI terminal connected to the same type equipment. For example, two recorders to HDMI2 and HDMI3, the recorder connected to HDMI2 is displayed as [Recorder1], and the recorder connected to HDMI3 is displayed as [Recorder2].

■ If you access non-VIERA Link equipment

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema

The type of the connected equipment is displayed. Although you can access the connected equipment, you cannot operate it. Use its own remote control to operate the equipment.

Speaker control [Speaker Selection]

You can control the theatre speaker with this TV remote control pointing at the TV's signal receiver.

- If you cannot operate, check the settings and the equipment.
➔ "Summary of Q-Link and VIERA Link features" (p. 96, 97), "Preparations" (p. 99)

 
1 Display [VIERA TOOLS] and select [VIERA Link]



2 Select [Speaker Selection]



3 Set to [Home Cinema] or [TV]



[Home Cinema]:

The sound is from theatre speakers. Player theatre, Blu-ray Disc theatre or Amplifier will be automatically turned on if it is in Standby mode.

- Volume up / down



- Mute



- The sound of TV speakers is mute.
- When the equipment is turned off, TV speakers will be active.

[TV]:

TV speakers are active.

Multi-channel sound

If you want to enjoy the multi-channel sound (e.g. Dolby Digital 5.1ch) via an Amplifier, connect it with HDMI cable and Optical digital audio cable (p. 97), and then select [Home Cinema]. If your Amplifier has "HDAVI Control 5" function, you only need to connect it with HDMI cable to the TV's HDMI2 terminal.

To enjoy the sound from the DIGA Recorder in multi-channel sound, connect an HDMI cable from the DIGA Recorder to the Amplifier (p. 97).

Note


- These functions may not work properly depending on the connected equipment.
- Image or sound may not be available for the first few seconds when input mode is switched.
- "HDAVI Control 5" is the newest standard (as of November, 2011) for HDAVI Control compatible equipment. This standard is compatible with conventional HDAVI equipment.
- To confirm this TV's version of HDAVI Control ➔ [System Information] (p. 49)

External Equipment



These diagrams show our recommendations for connection of your TV to various pieces of equipment. For other connections, consult the instructions for each piece of equipment, the basic connection (p. 13 - 15), the table (p. 106), and the specifications (p. 121 - 123).

- Check the type of terminals and cable plugs are correct when connecting.
- To use the specific devices supporting Bluetooth wireless technology ➔ **"Bluetooth Setup"** (p. 113)

External Equipment

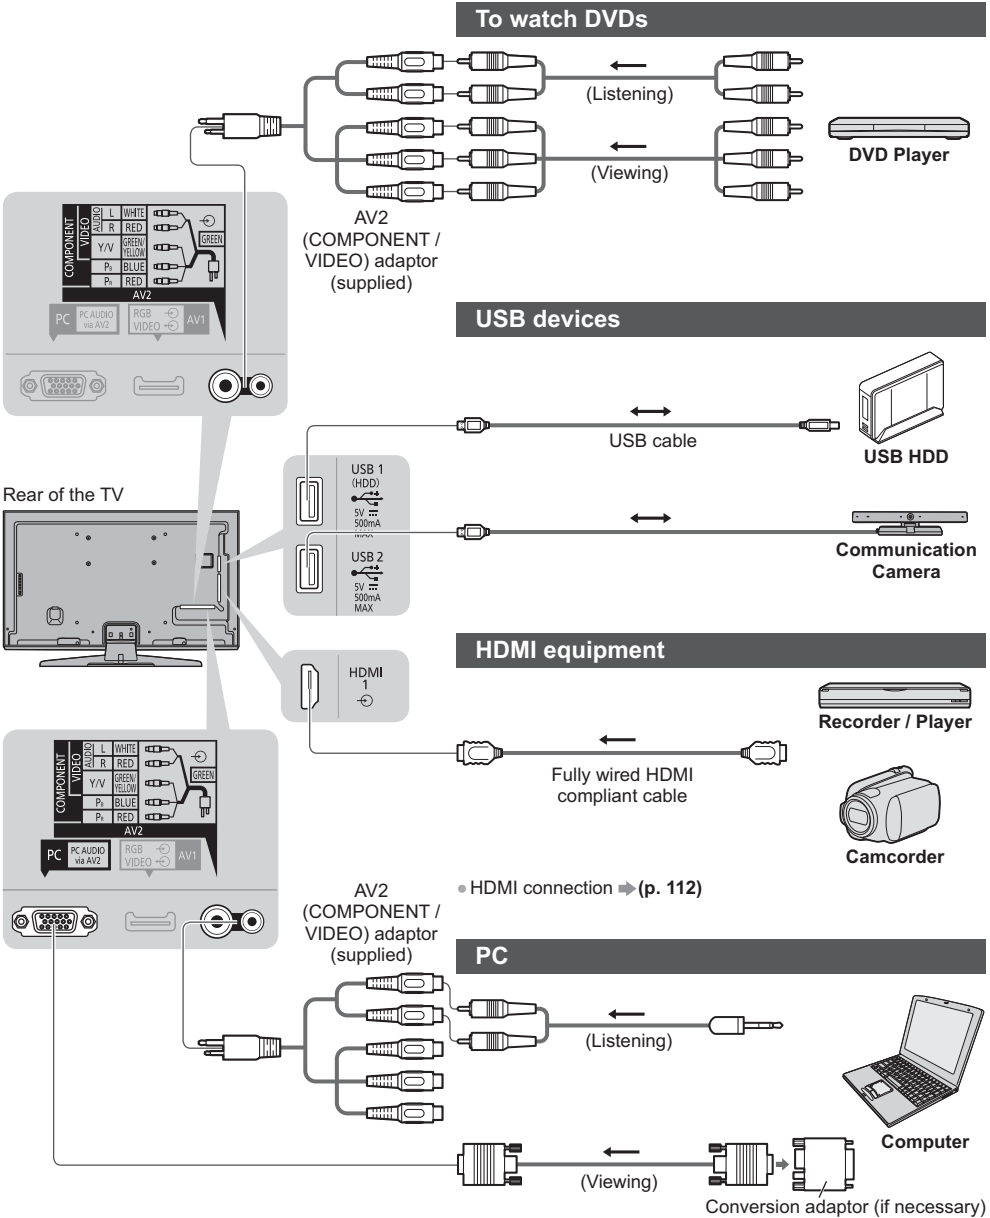


To listen with speakers

  


To enjoy the sound from the external equipment in multi-channel sound (e.g. Dolby Digital 5.1ch), connect the equipment to the amplifier.
For the connections, read the manuals of the equipment and amplifier.


Rear of the TV

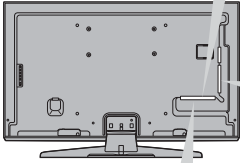



Headphones

 

- To adjust volume
➔ **[Headphone Volume]** (p. 43)

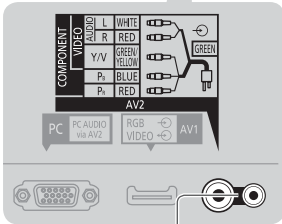



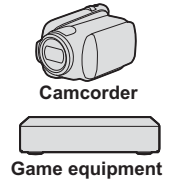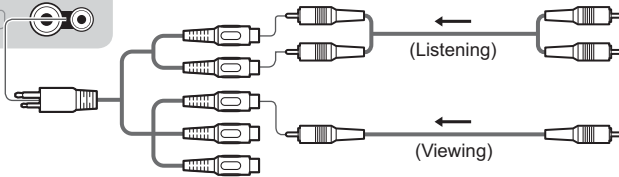




Camcorder / Game equipment



AV2
(COMPONENT / VIDEO)
adaptor (supplied)

External Equipment

Types of connectable equipment to each terminal

Features	Terminal						
	AV1*1 	AV2*1		DIGITAL AUDIO OUT 	ETHERNET 	HDMI 1 - 4 	USB 1 - 3 
		COMPONENT 	VIDEO 				
To record / playback videocassettes / DVDs (VCR / DVD Recorder)	<input type="radio"/>						
To watch 3D contents (Blu-ray Disc Player)						<input type="radio"/>	
To watch cable broadcasts (Set top box)	<input type="radio"/>		<input type="radio"/>			<input type="radio"/> *2	
To watch DVDs (DVD Player)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			<input type="radio"/>	
To watch camcorder images (Video camera)	<input type="radio"/>		<input type="radio"/>			<input type="radio"/>	
To play games (Game equipment)	<input type="radio"/>		<input type="radio"/>			<input type="radio"/>	
To use amplifier with speaker system				<input type="radio"/>		<input type="radio"/> *3	
To use network services					<input type="radio"/>		<input type="radio"/> *4
USB HDD Recording							<input type="radio"/> *5
Q-Link	<input type="radio"/>						
VIERA Link	<input type="radio"/> (with HDMI)					<input type="radio"/>	
Direct TV Recording	<input type="radio"/>					<input type="radio"/>	

○ : Recommended Connection

*1: To connect the equipment, the terminal adaptor (supplied) is necessary.

*2: Use HDMI1 for automatic input switching.

*3: Use HDMI2 for connecting an amplifier. This connection is applicable when using an amplifier that has ARC (Audio Return Channel) function.

*4: Use USB 2 port for connecting the Communication Camera.

*5: Use USB 1 port for connecting the USB HDD.

Technical Information

Auto Aspect

The optimum size and aspect can be chosen automatically, and you can enjoy finer images. ➔ (p. 24)

■ Aspect Control Signal

[WIDE] will appear in the top left of the screen if a Widescreen signal (WSS) or a Control signal through SCART / HDMI terminal is found.

The aspect will switch to the appropriate 16:9 or 14:9 widescreen ratio.

This function will work in any aspect mode.

Input terminal	Input signal format	Aspect Control Signal	
		Widescreen signal (WSS)	Control signal through SCART (pin8) / HDMI terminal
Satellite	DVB-S	○	
Cable RF	DVB-C	○	
	DVB-T	○	
	PAL B, G, H, I, D, K	○	
	SECAM B, G, L, L', D, K	○	
	PAL 525/60 6.5 MHz	–	
	PAL 525/60 6.0 MHz	–	
	PAL 525/60 5.5 MHz	–	
	M.NTSC 6.5 MHz	–	
	M.NTSC 6.0 MHz	–	
M.NTSC 5.5 MHz	–		
AV1 / AV2 (Composite)	PAL	○	○
	SECAM	○	○
	PAL 525/60	–	○
	M.NTSC	–	○
	NTSC	–	○
AV2 (Component)	525 (480) / 60i, 60p	–	
	625 (576) / 50i, 50p	○	
	750 (720) / 60p, 50p	–	
	1,125 (1,080) / 60i, 50i	–	
HDMI1 HDMI2 HDMI3 HDMI4	525 (480) / 60i, 60p	–	○
	625 (576) / 50i, 50p	–	○
	750 (720) / 60p, 50p	–	○
	1,125 (1,080) / 60i, 50i	–	○
	1,125 (1,080) / 60p, 50p, 24p	–	○

■ Auto mode

Auto mode determines the best aspect ratio to fill the screen using a four step process (WSS, Control signal through SCART / HDMI terminal, Letterbox detection or Justify to fill the screen).

This process may take several minutes, depending on the darkness of the image.

Letterbox detection:

If black bands at the top and bottom of the screen are detected, Auto mode chooses the best ratio and expands the image to fill the screen.

If no aspect signals are detected, Auto mode enhances the image for optimum viewing pleasure.

Note

- The ratio varies depending on the programme, etc. If the ratio is out of the standard 16:9, black bands at the top and bottom of the screen may appear.
- If the screen size looks unusual when a widescreen-recorded programme is played back on a VCR, adjust the tracking of the VCR. Read the manual of the VCR.

Supported file format in Media Player and media servers

■ Photo

Format	File extension	Image resolution (pixel)	Details / Restrictions
JPEG	.jpg .jpeg .mpo	8 × 8 to 30,719 × 17,279	DCF and EXIF standards Sub-sampling: 4:4:4, 4:2:2, 4:2:0 ● Progressive JPEG is not supported.

■ Video

Container	File extension	Video codec	Audio codec	Details / Restrictions
AVCHD	.mts	H.264	Dolby Digital	AVCHD Standard Ver. 2.0 (AVCHD 3D, AVCHD Progressive) ● The data may not be available if a folder structure on the device is modified.
SD-Video	.mod	MPEG1 MPEG2	Dolby Digital MPEG Audio	SD-Video Standard Ver. 1.31 (Entertainment Video Profile) ● The data may not be available if a folder structure on the device is modified.
MOV	.mov .qt	DivX3 DivX4 DivX5 DivX6 H.264 BP/MP/HP Motion JPEG MPEG1 MPEG2 MPEG4 SP/ASP	AAC Dolby Digital Dolby Digital Plus DTS core HE-AAC LPCM MPEG Audio MP3	● This TV supports Motion JPEG recorded by Panasonic LUMIX Camera*1. ● This TV is not available for playing back Motion JPEG with the media server. *1: Some products of before the year 2004 may not be available. The compatibility with future products is not guaranteed.
AVI	.avi .divx	DivX3 DivX4 DivX5 DivX6 H.264 BP/MP/HP MPEG1 MPEG2 MPEG4 SP/ASP VC-1 Windows Media Video Ver. 9	AAC ADPCM Dolby Digital Dolby Digital Plus DTS core HE-AAC LPCM MPEG Audio MP3 WMA WMA Pro	● Certified to play DivX Plus HD video file in Media Player For details of DivX ➔ (p. 110) ● Some subtitles or chapter functions may not be available.
MKV	.mkv	DivX3 DivX4 DivX5 DivX6 H.264 BP/MP/HP MPEG1 MPEG2 MPEG4 SP/ASP	AAC Dolby Digital Dolby Digital Plus DTS core HE-AAC MPEG Audio MP3	

Container	File extension	Video codec	Audio codec	Details / Restrictions
ASF	.asf .wmv	DivX3 DivX4 DivX5 DivX6 MPEG4 SP/ASP VC-1 Windows Media Video Ver. 9	AAC Dolby Digital Dolby Digital Plus HE-AAC LPCM MP3 WMA WMA Pro	● Copy-protected files cannot be played back.
MP4	.f4v .m4v .mp4	DivX3 DivX4 DivX5 DivX6 H.264 BP/MP/HP MPEG1 MPEG2 MPEG4 SP/ASP	AAC Dolby Digital Dolby Digital Plus HE-AAC MPEG Audio MP3	● This TV supports this container recorded by Panasonic products. For details, read the manual of the products.
FLV	.flv	H.264	AAC MP3	–
3GPP	.3gp .3g2	H.264 MPEG4 SP/ASP	AAC HE-AAC	–
PS	.mpg .mpeg .vob .vro	H.264*2 MPEG1 MPEG2 VC-1*2	AAC*2 Dolby Digital Dolby Digital Plus*2 HE-AAC*2 LPCM MPEG Audio MP3*2	*2: This codec can be played back only in Media Player.
TS	.m2ts .tp .trp .ts	H.264 MPEG1 MPEG2 VC-1*3	AAC Dolby Digital Dolby Digital Plus DTS core*3 HE-AAC MPEG Audio MP3*3	*3: This codec can be played back only in Media Player.

■ Music

Codec	File extension	Restrictions
MP3	.mp3	–
AAC	.m4a	● Copy-protected files cannot be played back.
WMA WMA Pro	.wma	● Copy-protected files cannot be played back. ● WMA Lossless is not supported.
FLAC	.flac	–

Note

- Some files may not be played back even if they fulfil these conditions.
- Do not use two-byte characters or other special codes for data.
- The device may become unusable with this TV if the file or folder names are changed.

DivX

DivX Certified® to play DivX® and DivX Plus® HD (H.264/MKV) video up to 1080p HD including premium content.

ABOUT DIVX VIDEO:

DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

■ Subtitle text file of DivX

Subtitles format - MicroDVD, SubRip, TMLayer

- The DivX video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions.
- If there are more than one subtitles text files inside the same folder, they are displayed in the following order of priority: “.srt”, “.sub”, “.txt”.
- To confirm or change the current subtitle status while playing DivX content, press the OPTION button to display Option Menu.
- Depending on the methods used to create the file or the state of recording, only parts of the subtitles may be displayed, or the subtitles may not be displayed at all.

Note

- Depending on how you make SD Card, USB Flash Memory or the media server, files and folders may not be displayed in the order you numbered.
- Depending on how you create the files and the structure of folders, the files and folders may not be displayed.
- When there are many files and folders, operation may take time to complete or some files may not be displayed or playable.

ABOUT DIVX VIDEO-ON-DEMAND:

This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in the Setup Menu. Go to vod.divx.com for more information on how to complete your registration.

■ To show DivX VOD registration code

➔ [DivX® VOD] (p. 48)

- If you want to generate the new registration code, you have to deregister the current registration code. After playing DivX VOD content once, the confirmation screen to deregister will be displayed in [DivX® VOD] in the Setup Menu. If you press the OK button on the confirmation screen, the deregistration code will be generated and you will not be able to play any contents that you purchased using the current registration code. You will obtain the new registration code by pressing the OK button on the deregistration code screen.
- If you purchase DivX VOD content using a registration code different from this TV's code, you will not be able to play this content. ([Your device is not authorized to play this DivX protected video.] is displayed.)

■ Regarding DivX content that can only be played a set number of times

Some DivX VOD content can only be played a set number of times.

When you play this content, the remaining number of plays is displayed. You cannot play this content when the number of remaining plays is zero. ([This DivX rental has expired.] is displayed.)

- When playing this content, the number of remaining plays is reduced by one in the following conditions:
 - If you exit the current application.
 - If you play the other content.
 - If you go to the next or previous content.

Devices for recording or playing back

■ SD Card

Use an SD Card which meets SD standards. If not, it may cause the TV to malfunction.

For playing back in Media Player

Card format:

SDXC Card - exFAT

SDHC Card / SD Card - FAT16 or FAT32


Compliant card type (maximum capacity):

SDXC Card (64 GB), SDHC Card (32 GB), SD Card (2 GB), miniSD Card (2 GB) (requiring miniSD adaptor)

- If miniSD Card is used, insert / remove it together with the adaptor.
- Check the latest information on the card type at the following website. (English only)
<http://panasonic.jp/support/global/cs/tv/>
- SD Card with a capacity of over 512 MB is available for recording with this TV. To record for a long time, a high capacity SD Card is necessary.

For recording the digital TV programmes with this TV and playing back in Media Player

- Use the SD Card of the SD Speed Class 10 or higher in order to record and play back properly.
- It is recommended to use the Panasonic SDXC Card.
- The image may pause for an instant during playback of the content which is recorded continuously for a long time on the SDHC Card.
- The recording and playback may not work properly depending on the conditions of the SD Card. Formatting the SD Card with this TV will resolve this problem. (All data will be erased when formatting.) ➔ (p. 72)

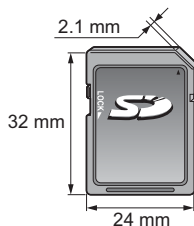

■ USB Flash Memory (for playing back in Media Player)

USB Flash Memory format: FAT16, FAT32 or exFAT

- A USB HDD formatted by PC is not guaranteed in Media Player.

■ USB HDD (for recording the digital TV programmes with this TV and playing back in Media Player)

The capacity of USB HDD that has been tested for the performance with this TV is from 160 GB to 3 TB.

- Connect the USB HDD to the socket outlet to record and play back properly with this TV.
- Use the USB HDD formatted with this TV. ➔ (p. 71)
- Regarding the performance, not all USB HDDs are guaranteed. Check the USB HDDs that have been tested for the performance with this TV at the following website. (English only)
<http://panasonic.jp/support/global/cs/tv/>

Note

- Data modified with a PC may not be displayed.
- Do not remove the device while the TV is accessing data. Otherwise this can damage device or TV.
- Do not touch the pins on the device.
- Do not subject the device to a high pressure or impact.
- Insert the device in the correct direction. Otherwise this can damage device or TV.
- Electrical interference, static electricity, or erroneous operation may damage the data or device.
- Back up the recorded data at regular intervals in case of deteriorated or damaged data or erratic operation of the TV. Panasonic is not liable for any deterioration or damage of recorded data.

Recording time for the USB HDD / SD Card Recording

Recording mode		Recording device				
		USB HDD	SD Card			
			1 TB	2 GB	16 GB	48 GB
[DR]	For HD broadcast	87 hours	9 minutes	1.5 hours	4.5 hours	6 hours
	For SD broadcast	217 hours	24 minutes	3.5 hours	12 hours	16 hours
[LT1]		290 hours	32 minutes	5 hours	16 hours	21 hours
[LT2]		580 hours	1 hour	10 hours	32 hours	43 hours

- These recording times are approximate for the continuous recording. Actual recording time may be different.
- The recording time of [DR] mode may change depending on the bit-rate of the broadcast.
- Depending on the broadcast (for example when the bit-rate is low), the recording time may not increase even if in [LT1] / [LT2] mode.
- Only the selected subtitle and multi audio are recorded in [LT1] / [LT2] mode.

HDMI connection

HDMI (high-definition multimedia interface) is the world's first complete digital consumer AV interface complying with a non-compression standard.

HDMI allows you to enjoy high-definition digital images and high-quality sound by connecting the TV and the equipment.

HDMI-compatible equipment*1 with an HDMI or DVI output terminal, such as a DVD player, a set top box or game equipment, can be connected to the HDMI terminal using an HDMI compliant (fully wired) cable.

For more information about connections ➔ (p. 14, 104)

■ Applicable HDMI features

- Input audio signal:
2ch Linear PCM (sampling frequencies - 48 kHz, 44.1 kHz, 32 kHz)
- Input video signal:
➔ **“Input signal that can be displayed” (p. 114)**
Match the output setting of the digital equipment.
- Input PC signal:
➔ **“Input signal that can be displayed” (p. 114)**
Match the output setting of the PC.
- VIERA Link (HDAVI Control 5)
➔ **[VIERA Link] (p. 99)**
- 3D
- Content Type
- Deep Colour
- Audio Return Channel*2
(HDMI2 terminal only)

■ DVI connection

If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adaptor cable*3. When the DVI to HDMI adaptor cable is used, connect the audio cable to AUDIO terminal with the supplied AV2 (COMPONENT / VIDEO) adaptor.

Note

- Audio settings can be made on [HDMI1 / 2 / 3 / 4 Input] in the Sound Menu. (p. 44)
- If the connected equipment has an aspect adjustment function, set the aspect ratio to “16:9”.
- These HDMI connectors are “type A”.
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- Equipment having no digital output terminal may be connected to the input terminal of component or video to receive analogue signals.
- This TV incorporates HDMI™ technology.

*1: The HDMI logo is displayed on HDMI-compliant equipment.

*2: Audio Return Channel (ARC) is a function to send digital sound signals via an HDMI cable.

*3: Enquire at your local digital equipment retailer shop.

PC connection

A PC may be connected to this TV so that the PC screen is displayed and sound is heard from the TV.

● A PC adaptor is not necessary for the DOS/V-compliant D-sub 15-pin connector.

● Some PC models cannot be connected to this TV.


● When using PC, set the colour display quality of PC to the highest position.

● For details of the applicable PC signals
“Input signal that can be displayed” ➔ (p. 114)

● D-sub 15-pin connector signal

● Max. display resolution

4:3	1,440 × 1,080 pixels
16:9	1,920 × 1,080 pixels

 

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
①	R	⑥	GND (Ground)	⑪	NC (not connected)
②	G	⑦	GND (Ground)	⑫	NC (not connected)
③	B	⑧	GND (Ground)	⑬	HD
④	NC (not connected)	⑨	NC (not connected)	⑭	VD
⑤	GND (Ground)	⑩	GND (Ground)	⑮	NC (not connected)

USB connection

- It is recommended to connect the USB HDD, USB Flash Memory or Communication Camera to the TV's USB ports directly.
- Some USB devices or USB HUB may not be used with this TV.
- You cannot connect any devices by using USB card reader.
- You cannot use two or more same kind of USB devices simultaneously except USB Flash Memory or USB HDD.
- Additional information for the devices may be on the following website. (English only)
<http://panasonic.jp/support/global/cs/tv/>

Bluetooth Setup

You can use Bluetooth keyboards*¹ and Bluetooth audio devices*² (headphones, etc.) with this TV by setting [Bluetooth Setup] in the Setup Menu (p. 45).

*1: HID (Human Interface Device Profile) compliant keyboards are available.

*2: A2DP (Advanced Audio Distribution Profile) compliant audio devices are available.

Menu	Item	Adjustments / Configurations (alternatives)
Setup	Bluetooth Setup	Searches and registers the available devices <ul style="list-style-type: none"> • You cannot use two or more A2DP compliant audio devices simultaneously. [Not paired]: The device is not registered. Register the device by following the on-screen instructions to use with this TV. [Connected]: The device is registered and you can use with this TV. [Not connected]: The device is already registered, but not connected to this TV. Check the device is turned on and the available range.
	Bluetooth Audio Settings	Adjusts the delay time if the sound of the audio device does not synchronise the image <ul style="list-style-type: none"> • This function is available only for the Bluetooth audio devices. • Set [Lip Sync] to [On] and adjust in [Lip Sync Adjustment].

- To adjust volume of this audio device ➔ **[Headphone Volume] (p. 43)**
- This setup is not for the 3D Eyewear and the VIERA Touch Pad Controller supporting Bluetooth wireless technology.
- Additional information for the devices may be on the following website. (English only)
<http://panasonic.jp/support/global/cs/tv/>

Operations from Keyboard / Gamepad

■ USB Keyboard / Bluetooth Keyboard


- The Keyboard requiring its driver is not supported.
- To change the language type ➔ **[Keyboard Layout] (p. 48)**
- Characters may not be displayed correctly on the TV screen depending on the connected keyboard or the keyboard layout setting.
- Some of the keys of keyboards may correspond to the operation of the remote control.

Keyboard	Remote Control	Keyboard	Remote Control
↑ / ↓ / ← / →	Cursor buttons	F2	VIERA TOOLS
Enter	OK	F3	MENU
Backspace	BACK/RETURN	F4	INPUT (AV)
Esc	EXIT	F5 / F6	Channel Down / Up
0 - 9 / Character	Numeric buttons	F7 / F8	Volume Down / Up
F1	GUIDE	F9 / F10 / F11 / F12	Coloured buttons

■ USB Gamepad

- Check the gamepads that have been tested for the performance with this TV at the following website. (English only)
<http://panasonic.jp/support/global/cs/tv/>
- Some of the keys of gamepads correspond to the operation of the remote control.

Example:

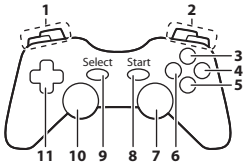

Remote Control		Remote Control	
1	Volume Up / Down	7	VIERA TOOLS
2	Channel Up / Down	8	EXIT
3	GUIDE	9	INPUT (AV)
4	OK		
5	BACK/RETURN	10	MENU
6	INTERNET	11	Cursor buttons

Characters table for numeric buttons

You can enter characters by using numeric buttons for free input items.

User input

Name

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T
U	V	W	X	Y	Z	0	1	2	3	4	5	6	7	8	9	:	:	#	
a	b	c	d	e	f	g	h	i	j	k	l	m	n	o	p	q	r	s	t
u	v	w	x	y	z	()	+ -	.	*	_									



Press the numeric button repeatedly until you reach the desired character.

- The character is set automatically if you leave for 1 second.
- You can also set the character by pressing the OK button or other numeric buttons within 1 second.
- The characters may vary depending on the input items.

Characters table:

Numeric buttons	Characters	Numeric buttons	Characters
1	. @ / ! : # + - * _ () " ' % & ? , ; = \$ [] ~ < > { } ` ^ \	6 _{mc}	m n o 6 M N O
2 _{abc}	a b c 2 A B C	7 _{pqr}	p q r s 7 P Q R S
3 _{def}	d e f 3 D E F	8 _{tuv}	t u v 8 T U V
4 _{ghi}	g h i 4 G H I	9 _{wxyz}	w x y z 9 W X Y Z
5 _{jkl}	j k l 5 J K L	0	Space 0

Input signal that can be displayed

■ COMPONENT (Y, P_B, P_R) (from AV2 terminal), HDMI

Signal name	COMPONENT	HDMI
525 (480) / 60i, 60p	○	○
625 (576) / 50i, 50p	○	○
750 (720) / 60p, 50p	○	○
1,125 (1,080) / 60i, 50i	○	○
1,125 (1,080) / 60p, 50p, 24p		○

○ : Applicable input signal

■ PC (from D-sub 15P)

Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 × 480 @60 Hz	31.47	59.94
800 × 600 @60 Hz	37.88	60.32
852 × 480 @60 Hz	31.44	59.89
1,024 × 768 @60 Hz	48.36	60.00
1,280 × 768 @60 Hz	47.70	60.00
1,280 × 1,024 @60 Hz	63.98	60.02
1,366 × 768 @60 Hz	48.39	60.04

Applicable input signal for PC is basically compatible to VESA standard timing.

■ PC (from HDMI terminal)

Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 × 480 @60 Hz	31.47	60.00
1,280 × 720 @60 Hz	45.00	60.00
1,920 × 1,080 @60 Hz	67.50	60.00


Applicable input signal for PC is basically compatible to HDMI standard timing.

Note


- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.
- PC signal is magnified or compressed for display, so that it may not show fine detail with sufficient clarity.

SCART and HDMI terminal information

AV1 SCART terminal (RGB, VIDEO, Q-Link)

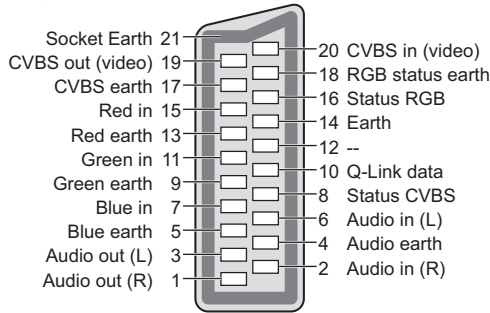

HDMI terminal

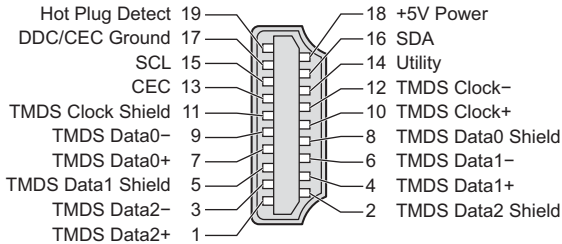

FAQs

Before requesting service or assistance, please follow these simple guides to resolve the problem. If the problem still persists, please contact your local Panasonic dealer for assistance.

Block noise, frozen or disappearing image occurs in DVB mode / White spots or shadow image (ghosting) occurs in Analogue mode / Some channels cannot be tuned

- Check the position, direction and connection of the aerial or dish.
- Check [Signal Condition] (p. 57). If [Signal Quality] is displayed in red, the DVB signal is weak.
- Weather conditions will affect signal reception (heavy rain, snow, etc.), in particular in poor reception areas. Even during good weather, the high pressure can cause poor reception of some channels.
- Due to the digital reception technologies involved, quality of the digital signals may be relatively low in some cases, despite good reception of analogue channels.
- Turn the TV off with the Mains power On / Off switch, and then on again.
- If problem persists, consult your local dealer or service provider for the availability of services.

DVB-S Auto Setup cannot be done completely

- Check connections and dish alignment. ➔ (p. 51)
- If the problem persists, consult your local dealer.

No programmes shown on TV Guide

- Check the digital transmitter.
- Adjust the direction of the aerial or dish to another transmitter installed nearby.
- Check the analogue broadcast. If the image quality is poor, check the aerial and consult your local dealer.

Neither image nor sound is produced

- Check the TV is turned on.
- Check the mains lead is plugged into the TV and the socket outlet.
- Check the TV is in AV mode.
- Check the correct input mode is selected.
- Check the Picture Menu (p. 41 - 43) and volume.
- Check all required cables and connections are firmly in place.

Auto aspect

- Auto aspect is designed to provide you with the best ratio to fill the screen. ➔ (p. 107)
- Press the ASPECT button if you want to change the aspect ratio manually. ➔ (p. 24)

Black and white picture

- Check that the output of the external equipment matches the input of the TV.
When connecting with SCART, ensure the output setting of the external equipment is not S-Video.

Q-Link function does not work

- Confirm SCART cable and connection.
Also set [AV1 out] in the Setup Menu. ➔ (p. 46)

[VIERA Link] function does not work and an error message appears

- Confirm the connection. ➔ (p. 96, 97)
- Turn the connected equipment on and then switch the TV on. ➔ (p. 99)

Recording does not start immediately

- Check the settings of the recorder. For details, read the manual of the recorder.

There may be red, blue, green and black spots on the screen

- This is a characteristic of liquid crystal panels and is not a problem. The liquid crystal panel is built with very high precision technology giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of red, green, blue or black. Please note this does not affect the performance of your LCD.

	Problem	Causes / Actions
Screen	Chaotic image, noisy	<ul style="list-style-type: none"> • Set [P-NR] in the Picture Menu to remove noise. ➔ (p. 41) • Check nearby electrical products (car, motorcycle, fluorescent lamp).
	No image can be displayed	<ul style="list-style-type: none"> • Is [Contrast], [Brightness] or [Colour] in the Picture Menu set to the minimum? ➔ (p. 41) • Check the setting of [AV2] ([COMPONENT] / [VIDEO]) in [Input Selection] to match the output of the external equipment. (p. 30)
	Blurry or distorted image (no sound or low volume)	<ul style="list-style-type: none"> • Reset channels. ➔ (p. 50 - 53)
	Unusual image is displayed	<ul style="list-style-type: none"> • Turn the TV off with Mains power On / Off switch, then turn it on again. • If the problem persists, initialise all settings. ➔ [Shipping Condition] (p. 64)
Sound	No sound is produced	<ul style="list-style-type: none"> • Is "Sound mute" active? ➔ (p. 10) • Is the volume set to the minimum?
	Sound level is low or sound is distorted	<ul style="list-style-type: none"> • Sound signal reception may be deteriorated. • Set [MPX] (p. 44) in the Sound Menu to [Mono]. (Analogue)
3D	Cannot view 3D images	<ul style="list-style-type: none"> • Has the 3D Eyewear been switched on and set to 3D mode? • Is the battery installed correctly? ➔ (p. 35) • Check the remaining battery level of the 3D Eyewear. (Battery status is displayed on the screen when the 3D Eyewear is turned on.) When the battery is running low, replace it. • Does the 3D Eyewear support Bluetooth wireless technology? ➔ (p. 33) • Ensure that [3D Mode Selection] is set to [3D]. ➔ (p. 36) • Some 3D image signals may not be automatically recognised as 3D images. Set [3D Mode Selection (Manual)] to match the picture format. ➔ (p. 37) • Use the 3D Eyewear within about 3.2 m from the TV. (The range may be shortened depending on the obstacles between the TV and the eyewear, or the surrounding environment.) • Register again. ➔ "Registration" (p. 34) • For some people, the 3D images may be difficult to see, or cannot be seen, especially in users who have a different level of eyesight between the left and right eyes. Take the necessary steps (wearing glasses etc.) to correct your eyesight before use.
	Cannot register a 3D Eyewear to the TV	
	3D Eyewear is turned off automatically	<ul style="list-style-type: none"> • Check that there are no obstacles between the TV and the 3D Eyewear.
	There is something wrong with the 3D images	<ul style="list-style-type: none"> • Check the setting of [Picture Sequence] or [Edge Smoother]. ➔ (p. 38)
	The indicator lamp does not light when pressing the power button on the 3D Eyewear	<ul style="list-style-type: none"> • The battery may be running low or flat. Replace it.
HDMI	Sound is unusual	<ul style="list-style-type: none"> • Set the sound setting of the connected equipment to "2ch L.PCM". • Check the [HDMI1 / 2 / 3 / 4 Input] setting in the Sound Menu. ➔ (p. 44) • If digital sound connection has a problem, select analogue sound connection. ➔ (p. 112)
	Pictures from external equipment are unusual when the equipment is connected via HDMI	<ul style="list-style-type: none"> • Check the HDMI cable is connected properly. ➔ (p. 104) • Turn the TV and equipment off, then turn them on again. • Check an input signal from the equipment. ➔ (p. 114) • Use equipment compliant with EIA/CEA-861/861D.

	Problem	Causes / Actions
Network	Cannot connect to the network	<ul style="list-style-type: none"> • Check the LAN cable or wireless LAN is connected properly. ➔ (p. 87) • Check the connections and settings. ➔ (p. 87 - 91) • Check the network equipment and network environment. • The router may not be set to issue IP address automatically. If the network administrator prefers to allocate an IP address, set an IP address manually. ➔ (p. 89) • The router may be using MAC address filtering (security setting). Confirm the MAC Address of this TV (p. 45) and set the router to use it. • If the problem persists, consult your Internet Service Provider or telecommunications company.
	Cannot select the file during DLNA operations	<ul style="list-style-type: none"> • Is media server of the connected equipment prepared? ➔ (p. 85) • Check applicable data format. ➔ (p. 108, 109) • Check the settings of [Network Link Settings] ➔ (p. 88)
	Cannot operate VIERA Connect	<ul style="list-style-type: none"> • Check the connections and settings. ➔ (p. 87 - 91) • The server or connected line may be busy now.
Other	The TV does not switch on	<ul style="list-style-type: none"> • Check the mains lead is plugged into the TV and the socket outlet.
	The TV goes into Standby mode	<ul style="list-style-type: none"> • Auto power standby function is activated. ➔ (p. 12) • The TV enters Standby mode about 30 minutes after analogue broadcasting ends.
	The remote control does not work or is intermittent	<ul style="list-style-type: none"> • Are the batteries installed correctly? ➔ (p. 7) • Has the TV been switched on? • The batteries may be running low. Replace them. • Point the remote control directly at the TV's remote control signal receiver (within about 7 m and a 30 degree angle of the signal receiver). • Situate the TV away from sunshine or other sources of bright light not to shine on the TV's remote control signal receiver.
	The touch pad controller does not work or is failed to register	<ul style="list-style-type: none"> • Are the batteries installed correctly? ➔ (p. 7) • The batteries may be running low. Replace them. • Register again. ➔ [Pairing] in [VIERA Touch Pad Controller] (p. 45) • Use the touch pad controller within about 3.2 m from the TV. (The range may be shortened depending on the obstacles between the TV and the controller, or the surrounding environment.)
	Parts of the TV become hot	<ul style="list-style-type: none"> • Even when the temperature of parts of the front, top and rear panels has risen, these temperature rises do not cause any problems in terms of performance or quality.
	The LCD panel moves slightly when it is pushed with a finger Clattered sound might be heard	<ul style="list-style-type: none"> • There is some flexibility around the panel to prevent damage to the panel. • The panel might move slightly when it is pushed with a finger, and clattered sound might be heard. This is not a malfunction.
	[Faulty dish] message appears	<ul style="list-style-type: none"> • The satellite cable might be short-circuited or there might be connection problems of the cable. Check the cable and connection and then turn the TV off with the Mains power On / Off switch, and turn it on again. • If the message still persists, consult a dish installer for checking the dish and cable.
	Overcurrent error message appears	<ul style="list-style-type: none"> • The connected USB device might cause this error. Remove the device and turn the TV off with Mains power On / Off switch, then turn it on again. • Check foreign objects are not inside the USB port.
An error message appears	<ul style="list-style-type: none"> • Follow the message's instructions. • If the problem persists, contact your local Panasonic dealer or the authorised service centre. 	

Maintenance

First, remove the mains plug from the socket outlet.

Display panel, Cabinet, Pedestal

Regular care:

Gently wipe the surface of the display panel, cabinet, or pedestal by using a soft cloth to clean the dirt or fingerprints.

For stubborn dirt:

First clean the dust on the surface. Dampen a soft cloth with clean water or diluted neutral detergent (1 part detergent to 100 parts water). Wring the cloth and wipe the surface. Finally, wipe away all the moisture.

Caution

- Do not use a hard cloth or rub the surface too hard, otherwise this may cause scratches on the surface.
- Take care not to subject the TV's surfaces to water or detergent. Liquid inside the TV could lead to product failure.
- Take care not to subject the surfaces to insect repellent, solvent, thinner or other volatile substances. This may degrade surface quality or cause peeling of the paint.
- The surface of the display panel is specially treated and may be easily damaged. Take care not to tap or scratch the surface with your fingernail or other hard objects.
- Do not allow the cabinet and pedestal to make contact with a rubber or PVC substance for a long time. This may degrade surface quality.

Mains plug

Wipe the mains plug with a dry cloth at regular intervals. Moisture and dust may lead to fire or electrical shock.

Licence

Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.

- DVB and the DVB logos are trademarks of the DVB Project.
 - DiSEqC™ is a trademark of EUTELSAT.
 - "RealD 3D" is a trademark of RealD.
 - "Full HD 3D Glasses™" logo and "Full HD 3D Glasses™" word are trademark of Full HD 3D Glasses Initiative.
 - The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license. Other trademarks and trade names are those of their respective owners.
 - SDXC Logo is a trademark of SD-3C, LLC.
 - "AVCHD", "AVCHD 3D" and "AVCHD Progressive" are trademarks of Panasonic Corporation and Sony Corporation.
 - DivX®, DivX Certified®, DivX Plus® HD and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.
 - QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom.
 - VIERA Connect is a trademark of Panasonic Corporation.
 - Skype is a trade mark of Skype Limited.
 - DLNA®, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance.
 - Windows is a registered trademark of Microsoft Corporation in the United States and other countries.
 - HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
 - HDAVI Control™ is a trademark of Panasonic Corporation.
 - VGA is a trademark of International Business Machines Corporation.
 - S-VGA is a registered trademark of the Video Electronics Standard Association.
 - Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.
 - Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol, & DTS and the Symbol together are registered trademarks & DTS 2.0+Digital Out is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.
 - GUIDE Plus+, Rovi and Rovi Guide are trademarks of Rovi Corporation and/or its subsidiaries.
The GUIDE Plus+ and the Rovi Guide system are manufactured under license from Rovi Corporation and/or its subsidiaries.
- The Rovi Guide system is protected by patents and patent applications filed in the US, Europe, and other countries including one or more of the United States patents 6,396,546; 5,940,073; 6,239,794 issued to Rovi Corporation and/or its subsidiaries.

This product incorporates the following software or technology:

- (1) the software developed independently by or for Panasonic Corporation,
- (2) the software owned by third party and licensed to Panasonic Corporation,
- (3) the software based in part on the work of the Independent JPEG Group,
- (4) the software developed by the FreeType Project,
- (5) the software licensed under the GNU LESSER GENERAL PUBLIC LICENSE (LGPL) and/or,
- (6) open sourced software other than the software licensed under the LGPL.
- (7) "PlayReady"(digital right management technology) licensed by Microsoft Corporation or its affiliates.

For the software categorized as (5), please refer to the terms and conditions of LGPL, as the case may be at <http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html>

In addition, the software categorized as (5) are copyrighted by several individuals.

Please refer to the copyright notice of those individuals at <http://www.am-linux.jp/dl/EUIDTV12/>

The LGPL software is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

At least three (3) years from delivery of products, Panasonic will give to any third party who contact us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under LGPL.

Contact Information

cdrequest@am-linux.jp

Source code covered under LGPL is also freely available to you and any other member of the public via our website below.

<http://www.am-linux.jp/dl/EUIDTV12/>

For the software categorized as (5) and (6), please refer to the applicable license terms included in the "Setup" menu on product.

Further, for PlayReady categorized as (7), please be aware of the following.

(a) This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

(b) Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies.

Content owners may require you to upgrade PlayReady to access their content.

If you decline an upgrade, you will not be able to access content that requires the upgrade.

Specifications

■ Product fiche

Manufacturer	Panasonic Corporation		
	TX-L42WT50E	TX-L47WT50E	TX-L55WT50E
Model No.	TX-L42WT50E	TX-L47WT50E	TX-L55WT50E
Energy efficiency class	A+	A+	A+
Visible screen size (diagonal)	107 cm / 42 inches	119 cm / 47 inches	139 cm / 55 inches
On mode average power consumption	56 W	69 W	91 W
Annual energy consumption*1	78 kWh	95 kWh	127 kWh
Rated power consumption	119 W	132 W	152 W
Standby power consumption*2	0.20 W		
Off mode power consumption	0.18 W		
Display resolution	1,920 (W) × 1,080 (H)		

■ Other information

Model No.		TX-L42WT50E	TX-L47WT50E	TX-L55WT50E
Power source		AC 220-240 V, 50 / 60 Hz		
Panel		LED LCD panel		
Dimensions (W × H × D)		956 mm × 647 mm × 312 mm (With Pedestal) 956 mm × 569 mm × 27 mm (TV only)	1,066 mm × 708 mm × 335 mm (With Pedestal) 1,066 mm × 630 mm × 27 mm (TV only)	1,236 mm × 804 mm × 335 mm (With Pedestal) 1,236 mm × 726 mm × 27 mm (TV only)
Mass		13.5 kg Net (With Pedestal) 11.0 kg Net (TV only)	16.0 kg Net (With Pedestal) 13.0 kg Net (TV only)	19.5 kg Net (With Pedestal) 17.0 kg Net (TV only)
Sound	Speaker	8 train speakers × 2, Woofer (Φ 75 mm) × 1		
	Audio output	18 W (4 W + 4 W + 10 W)		
	Headphones	M3 (3.5 mm) stereo mini Jack × 1		
Receiving systems / Band name		PAL B, G, H, I, SECAM B, G, SECAM L, L'	VHF E2 - E12 VHF A - H (ITALY) CATV (S01 - S05) CATV S11 - S20 (U1 - U10)	VHF H1 - H2 (ITALY) UHF E21 - E69 CATV S1 - S10 (M1 - M10) CATV S21 - S41 (Hyperband)
Check the latest information on the available services at the following website. (English only) http://panasonic.jp/support/global/cs/tv/		PAL D, K, SECAM D, K	VHF R1 - R2 VHF R6 - R12	VHF R3 - R5 UHF E21 - E69
		PAL 525/60	Playback of NTSC tape from some PAL Video recorders (VCR)	
		M.NTSC	Playback from M.NTSC Video recorders (VCR)	
		NTSC (AV input only)	Playback from NTSC Video recorders (VCR)	
		DVB-T	Digital terrestrial services (MPEG2 and MPEG4-AVC(H.264))	
		DVB-C	Digital cable services (MPEG2 and MPEG4-AVC(H.264))	
		DVB-S / S2	Digital satellite services (MPEG2 and MPEG4-AVC(H.264)) Receiver frequency range - 950 MHz to 2,150 MHz LNB Power and Polarisation - Vertical: +13 V / Horizontal: +18 V / Current: Max. 500 mA (overload protection) 22 kHz Tone - Frequency: 22 kHz ± 2 kHz / Amplitude: 0.6 V ± 0.2 V Symbol Rate - Max. 30 MS/s FEC Mode - 1/2, 3/5, 2/3, 3/4, 4/5, 5/6, 8/9, 9/10 Demodulation - QPSK, 8PSK DiSEqC - Version 1.0	
Satellite dish input		Female F-type 75 Ω		
Aerial input		VHF / UHF		
Operating conditions		Temperature: 0 °C - 35 °C Humidity: 20 % - 80 % RH (non-condensing)		
Connection terminals	AV1 input / output	SCART (Audio/Video in, Audio/Video out, RGB in, Q-Link)		
	AV2 input (COMPONENT / VIDEO)	VIDEO	RCA PIN Type × 1	1.0 V[p-p] (75 Ω)
		AUDIO L - R	RCA PIN Type × 2	0.5 V[rms]
		Y Pb, Pr	1.0 V[p-p] (including synchronisation) ±0.35 V[p-p]	
HDMI 1 / 2 / 3 / 4 input	TYPE A Connectors HDMI1 / 3 / 4: 3D, Content Type, Deep Colour HDMI2: 3D, Content Type, Audio Return Channel, Deep Colour ● This TV supports "HDAVI Control 5" function.			

Connection terminals	PC	HIGH-DENSITY D-SUB 15PIN R,G,B: 0.7 V[p-p] (75 Ω) HD, VD: TTL Level 2.0 – 5.0 V[p-p] (high impedance) • Applicable input signals: VGA, SVGA, WVGA, XGA, SXGA, WXGA
	Card slot	SD Card slot × 1 Common Interface slot (complies with CI Plus) × 1
	ETHERNET	RJ45, IEEE802.3 10BASE-T / 100BASE-TX
	USB 1 / 2 / 3	USB2.0 DC 5 V, Max. 500 mA
	DIGITAL AUDIO OUT	PCM / Dolby Digital / DTS, Fibre optic
Built-in wireless LAN	Standard compliance and Frequency range*3	IEEE802.11a/n 5.180 GHz - 5.320 GHz, 5.500 GHz - 5.580 GHz, 5.660 GHz - 5.700 GHz IEEE802.11b/g/n 2.412 GHz - 2.472 GHz
	Security	WPA2-PSK (TKIP/AES) WPA-PSK (TKIP/AES) WEP (64 bit/128 bit)
Bluetooth wireless technology*4	Standard Compliance	Bluetooth 3.0
	Frequency Range	2.402 GHz - 2.480 GHz

■ 3D Eyewear (TY-ER3D4MA)

Dimensions (W × H × D)	167.7 mm × 42.2 mm × 170.7 mm
Mass	Approx. 31 g
Lens type	Liquid Crystal Shutter
Usage temperature range	0 °C - 40 °C
Battery	Coin-shaped lithium battery CR2025 Operation time: Approx. 75 hours in continuous use of the battery made by Panasonic
Viewing range	Within 3.2 m from front surface of the TV
Materials	Main body: Resin Lens section: Liquid crystal glass
Communication system	2.4 GHz band FH-SS (Frequency Hopping Spread Spectrum)

*1: Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

*2: when the TV is turned off with the remote control and no function is active

*3: The frequency and channel differ depending on the country.

*4: Not all the Bluetooth compatible devices are available with this TV. Up to 5 devices can be used simultaneously (except the 3D Eyewear and the VIERA Touch Pad Controller).

Note

- Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.
- This equipment complies with the EMC standards listed below.
EN55013, EN61000-3-2, EN61000-3-3, EN55020, EN55022, EN55024

Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.



For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.



[Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Cd

Customer's Record

The model number and serial number of this product may be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number

Serial Number

Panasonic Corporation

Web Site: <http://panasonic.net>